

User's Guide for Nokia 6151

DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION declares that this RM-200 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the Declaration of Conformity can be found from
http://www.nokia.com/phones/declaration_of_conformity/.

CE 0434

Copyright © 2006 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

US Patent No 5818437 and other pending patents. T9 text input software Copyright © 1997–2006. Tegic Communications, Inc. All rights reserved.

Nokia, Visual Radio, Nokia Connecting People, and Pop-Port are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia tune is a sound mark of Nokia Corporation.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses may be obtained from MPEG LA, LLC. See <<http://www.mpegla.com>>.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Issue 1

Nokia Care Online

INTERACTIVE DEMONSTRATIONS



The Nokia Care web support provides you with more information on our online services.

INTERACTIVE DEMONSTRATIONS

Learn how to set up your phone for the first time, and find out more about its features. Interactive Demonstrations give step-by-step instructions on using your phone.

SOFTWARE



USER'S GUIDE

The online User's Guide contains detailed information on your phone. Remember to check regularly for updates.

SOFTWARE

Make the most of your phone with software for your phone and PC. Nokia PC Suite connects your phone and PC so you can manage your calendar, contacts, music and images, while other applications complement its use.



USER'S GUIDE



SETTINGS

SETTINGS

Certain phone functions, such as multimedia messaging, mobile browsing and email*, may require settings before you can use them. Have them sent to your phone free of charge.

*Not available on all phones.

HOW DO I USE MY PHONE?

The Set Up section, at www.nokia-asia.com/setup, helps you prepare your phone for use. Familiarise yourself with phone functions and features by referring to the Guides and Demos section at www.nokia-asia.com/guides.

HOW DO I SYNCHRONISE MY PHONE AND PC?

Connecting your phone to a compatible PC with the requisite Nokia PC Suite version from www.nokia-asia.com/pcsuite lets you synchronise your calendar and contacts.

WHERE CAN I GET SOFTWARE FOR MY PHONE?

Get more out of your phone with downloads from the Software section at www.nokia-asia.com/software.

WHERE CAN I FIND ANSWERS TO COMMON QUESTIONS?

Look up the FAQ section at www.nokia-asia.com/faq for answers to your questions on your phone and other Nokia products and services.

HOW DO I KEEP UP WITH NOKIA NEWS?

Subscribe online to Nokia Connections at www.nokia-asia.com/signup, and be the first to know about the latest products, promotions and upcoming events.

Should you still require further assistance, please refer to www.nokia-asia.com/contactus.

For additional information on repair services, please visit www.nokia-asia.com/repair.

Please visit www.nokia-asia.com/support for details.

NOKIA

Care

Content

For your safety	ix	Indicators	8
About your device.....	x	Keypad lock (keyguard).....	9
Network services.....	x	3. Call functions	11
Shared memory	xi	Make a voice call.....	11
Enhancements	xi	Speed dialing.....	11
General information	xii	Enhanced voice dialing	11
Access codes	xii	Answer or reject a voice call	12
Security code.....	xii	Call waiting	12
PIN codes.....	xii	Options during a voice call	12
PUK codes	xii	4. Write text	14
Barring password	xii	Settings	14
Configuration settings		Predictive text input.....	14
service	xiii	Traditional text input	15
Download content	xiii	5. Navigate the menus	16
Nokia support and contact		6. Messaging	17
information.....	xiii	Text messages (SMS)	17
1. Get started	1	Write and send SMS messages	17
Install the SIM card and		Read and reply to an SMS	
the battery	1	message	18
Install a memory card.....	2	SIM messages.....	18
Charge the battery	3	Multimedia messages.....	19
Switch the phone on and off	4	Write and send a multimedia	
Set the time, time zone, and date.....	4	message	19
Plug and play service	4	Send a message	20
Start up without a SIM card	4	Cancel message sending	21
Normal operating position	5	Read and reply to a multimedia	
2. Your phone	6	message	21
Keys and parts	6	Memory full.....	21
Standby mode.....	7	Folders	22
Active standby.....	7	Flash messages.....	22
Standby mode shortcuts	8	Write a flash message	22
Power saver	8	Receive a flash message	22

Audio messages.....	22	Power saver	34
Create an audio message	23	Sleep mode	34
Receive an audio message	23	Font size	34
Voice messages.....	23	Time and date.....	34
Info messages	23	My shortcuts.....	35
Service commands.....	23	Left selection key.....	35
Delete messages.....	24	Right selection key.....	35
Message settings	24	Navigation key.....	35
General.....	24	Enable active standby.....	35
Text message and SMS e-mail.....	24	Voice commands.....	35
Multimedia message.....	25	Connectivity.....	36
7. Contacts	27	Bluetooth wireless technology.....	36
Search for a contact	27	Set up a Bluetooth connection.....	37
Save names and phone		Bluetooth wireless connection.....	37
numbers.....	27	Bluetooth settings	37
Save numbers and text items.....	27	Infrared	38
Move or copy contacts.....	28	Packet data	38
Edit contact details.....	28	Packet data connection	39
Delete contacts	28	Packet data settings.....	39
Business cards	29	Data transfer.....	39
Settings.....	29	Data transfer with a compatible	
Groups.....	29	device	40
Speed dials.....	29	Synchronize from a compatible	
Service and my numbers.....	30	PC	40
8. Log.....	31	Synchronize from a server.....	40
9. Settings	32	USB data cable	41
Profiles.....	32	Call.....	41
Flight mode	32	Phone	42
Themes.....	32	Enhancements	43
Tones	33	Configuration	43
Display	33	Security	44
Standby mode.....	33	Digital rights management.....	45
Standby settings	33	Restore factory settings	45
Screen saver	34	10. Operator menu.....	46
		11. Gallery	47
		Format memory card	47

12. Media	48	Receive an invitation	59
Camera.....	48	PTT settings	59
Take a photo.....	48	14. Organizer	61
Camera settings	48	Alarm clock	61
Video.....	49	Stop the alarm.....	61
Record a video clip	49	Calendar.....	61
Send a video clip.....	49	Make a calendar note.....	62
Media player	49	Note alarm.....	62
Progressive download.....	49	To-do list.....	62
Set up the phone for a streaming service	50	Notes.....	62
Music player.....	50	Calculator	63
Play the music tracks transferred to the phone.....	50	Convert currency.....	63
Music player settings.....	51	Countdown timer	63
Radio	51	Stopwatch	64
Save radio channels.....	52	15. Applications	65
Listen to the radio.....	52	Games	65
Voice recorder.....	53	Launch a game	65
Record sound	53	Game downloads.....	65
List of recordings	53	Game settings.....	65
Define a storage folder.....	54	Collection.....	65
Equalizer.....	54	Launch an application.....	65
13. Push to talk	55	Application options	65
Connect to the PTT service.....	55	Download an application.....	66
Make and receive a PTT call.....	56	16. Web.....	67
Make a channel or a group call	56	Basic steps to access and use services.....	67
Make a one-to-one call	56	Set up browsing	67
Make a PTT call to multiple recipients.....	57	Connect to a service.....	67
Receive a PTT call.....	57	Browse pages.....	68
Callback requests.....	57	Browse with phone keys.....	68
Send a callback request	57	Options while browsing	68
Respond to a callback request	58	Direct calling	69
Add a one-to-one contact	58	Bookmarks.....	69
PTT channels.....	58	Receive a bookmark	69
Add a channel	59	Appearance settings	69

Security settings	70	Battery	79
Cookies	70	Wireless Headset	79
Scripts over secure connection	70	Nokia Bluetooth Headset BH-200 ..	79
Download settings	70	Nokia Bluetooth Headset BH-700 ..	80
Service inbox	71	Car Solutions	80
Service inbox settings	71	Nokia Advanced Car Kit CK-7W	80
Cache memory	71	Data	80
Browser security	72	Nokia Connectivity Cable CA-53	80
Security module	72	21. Care and maintenance.....	81
Certificates	72	22. Additional safety	
Digital signature	73	information.....	82
17. SIM services.....	74	Operating environment	82
18. PC connectivity	75	Medical devices	82
Nokia PC Suite	75	Pacemakers	82
EGPRS, HSCSD, CSD, and		Hearing aids	83
WCDMA	75	Vehicles	83
Data communication		Potentially explosive	
applications	75	environments	83
19. Battery information	76	Emergency calls	84
Charging and discharging	76	To make an emergency call:	84
Nokia battery authentication		Certification information	
guidelines	77	(SAR)	85
20. Genuine Enhancements	79	Index.....	86

For your safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



SWITCH ON SAFELY

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



INTERFERENCE

All wireless phones may be susceptible to interference, which could affect performance.



SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the phone off near medical equipment.



SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.



SWITCH OFF WHEN REFUELING

Do not use the phone at a refueling point. Do not use near fuel or chemicals.



SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the phone where blasting is in progress.



USE SENSIBLY

Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.



QUALIFIED SERVICE

Only qualified personnel may install or repair this product.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.



WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



BACK-UP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



EMERGENCY CALLS

Ensure the phone is switched on and in service. Press the end key as many times as needed to clear the display and return to the start screen. Enter the emergency number, then press the call key. Give your location. Do not end the call until given permission to do so.

About your device

The wireless device described in this guide is approved for use on the EGSM 900; GSM 1800 and 1900; and WCDMA 2000 networks. Contact your service provider for more information about networks.

When you use the features in this device, obey all laws and respect privacy and legitimate rights of others, including copyright.

When you take and use images or video clips, obey all laws and respect local customs as well as privacy and legitimate rights of others.



Warning: To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

Network services

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured. This configuration may include changes in menu names, menu order, and icons. Contact your service provider for more information.

This device supports WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols. Some features of this device, such as multimedia messaging (MMS), browsing, instant messaging, presence-enhanced contacts, remote synchronization, and content downloading using the browser or MMS, require network support for these technologies.

■ Shared memory

The following features in this device may share memory: gallery, contacts, text messages, multimedia messages, instant messages, calendar, to-do notes, Java™ games and applications, and note application. Use of one or more of these features may reduce the memory available for the remaining features sharing memory. For example, saving many Java applications may use all of the available memory. Your device may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the shared memory features before continuing. Some of the features, such as text messages, may have a certain amount of memory specially allotted to them in addition to the memory shared with other features.

■ Enhancements

A few practical rules about accessories and enhancements:

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.

General information

■ Access codes

Security code

The security code (5 to 10 digits) helps to protect your phone against unauthorized use. The preset code is 12345. To change the code, and to set the phone to request the code, see "Security" p. 44.

If you enter an incorrect security code five times in succession, the phone ignores further entries of the code. Wait for 5 minutes, and enter the code again.

PIN codes

The personal identification number (PIN) code and the universal personal identification number (UPIN) code (4 to 8 digits) help to protect your SIM card against unauthorized use. See "Security" p. 44. The PIN code is usually supplied with the SIM card. Set the phone to request the PIN code each time the phone is switched on.

The PIN2 code (4 to 8 digits) may be supplied with the SIM card and is required for some functions.

The module PIN is required to access the information in the security

module. See "Security module" p. 72. The module PIN is supplied with the SIM card if the SIM card has a security module in it.

The signing PIN is required for the digital signature. See "Digital signature" p. 73. The signing PIN is supplied with the SIM card if the SIM card has a security module in it.

PUK codes

The personal unblocking key (PUK) code and the universal personal unblocking key (UPUK) code (8 digits) are required to change a blocked PIN code and UPIN code, respectively. If the codes are not supplied with the SIM card, contact your service provider for the codes.

Barring password

The barring password (4 digits) is required when you use the *Call barring service*. See "Security" p. 44. You can obtain the password from your service provider. If you enter an incorrect barring password three times in succession, the password is blocked. Contact your service provider or network operator.

■ Configuration settings service

Before you use multimedia messaging, instant messaging and presence, push to talk, SMS e-mail, synchronization, streaming, and the browser, you must have the proper configuration settings on your phone. You may receive the settings directly as a configuration message, which you save to your phone. For more information on availability, contact your network operator, service provider, or nearest authorized Nokia dealer.

When you have received the settings as a configuration message, and the settings are not automatically saved and activated, *Configuration settings received* is displayed.

To save the received settings, select **Show > Save**. If the phone requests *Enter settings' PIN*;, enter the PIN code for the settings, and select **OK**. To receive the PIN code, contact the service provider that supplies the settings.

If no settings are saved, these settings are saved and set as default configuration settings. Otherwise, the phone asks *Activate saved configuration settings?*

To discard the received settings, select **Show > Discard**.

■ Download content

You may be able to download new content (for example, themes) to the phone (network service). Select the download function (for example, in the *Gallery* menu). To access the download function, see the respective menu descriptions.

For the availability of different services, pricing, and tariffs, contact your service provider.



Important: Use only services that you trust and that offer adequate security and protection against harmful software.

■ Nokia support and contact information

For the latest version of this guide, downloads, services and additional information related to your Nokia product, please visit www.nokia-asia.com/6151/support or your local Nokia web site. You may also download free configuration settings such as MMS, GPRS, e-mail, and other services for your phone model at www.nokia-asia.com/phonesettings.

Should you still require assistance, please refer to www.nokia-asia.com/contactus.

To check for the nearest Nokia care center location for maintenance services, you may like to visit www.nokia-asia.com/repair.

1. Get started

■ Install the SIM card and the battery

Always switch the device off and disconnect the charger before removing the battery.


Keep all SIM cards out of the reach of small children.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.


This device is intended for use with the BP-6M battery.

The SIM card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting, or removing the card.


1. With the back of the phone facing you, slide the back cover (1) to remove it from the phone (2).

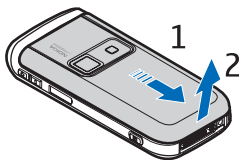

2. To remove the battery, lift it as shown (3).

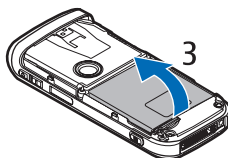


3. To release the SIM card holder, gently pull the locking clip of the card holder, and open it (4). Insert the SIM card into the SIM card holder (5). Make sure that the SIM card is properly inserted and that the gold-colored contact area on the card is facing downwards.

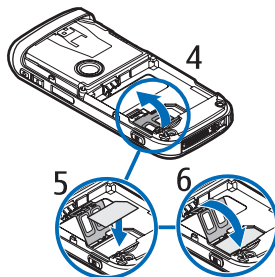


Close the SIM card holder (6), and press it until it snaps into position.


4. Replace the battery (7).

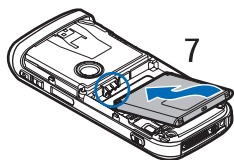

5. Place the back cover in the correct position (8).

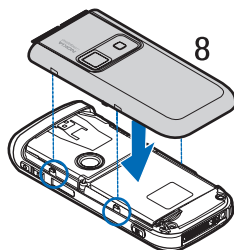

6. Slide the back cover into place (9).

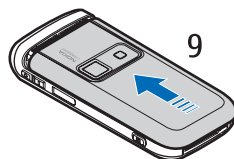

■ Install a memory card

The microSD card, not provided with your phone, can be loaded with ringing tones, themes, tones, and graphics. If you delete, reload, or replace this card,



these functions and features may not function properly.

Use only compatible microSD cards with this device. Other memory cards, such as reduced size MMCs, do not fit in the memory card slot and are not compatible with this device. Using an incompatible memory card may damage the memory card as well as the device, and data stored on the incompatible card may be corrupted.

Use only microSD cards approved by Nokia for use with this device. Nokia utilizes the approved industry standards for memory cards but not all other brands may function correctly or be fully compatible with this device.


You can use a memory card to extend the memory of *Gallery*. See "*Gallery*" p. 47.

You can insert or change the memory card without switching the phone off.



Important: Do not remove the memory card in the middle of an operation when the card is being accessed. Removing the card in the middle of an operation may damage the memory card as well as the device, and data stored on the card may be corrupted.

To insert the memory card, open the memory card holder as shown (1). Place the memory card in the card holder (2). Make sure that the memory card is properly inserted—that it clicks into the holder—and that the gold-colored contact area on the card is facing upwards. Close the memory card holder.

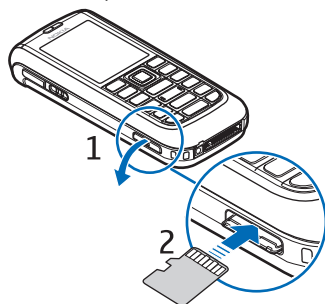

You can use the memory card to save your multimedia files, such as video clips, sound files, and images, in *Gallery*.

To format the memory card, see "Format memory card" p. 47.

■ Charge the battery


Check the model number of any charger before use with this device. This device is intended for use when supplied with power from the AC-3 or AC-4 charger.



Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

1. Connect the charger to a wall outlet.

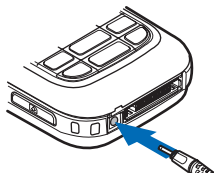

2. Connect the plug from the charger into the jack on the bottom of your phone. The CA-44 charging adapter (not provided with the phone), can be used with older charger models.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.


The charging time depends on the charger and the battery used. For example, charging a BP-6M Li-Ion battery with the AC-4 charger takes about 1 hour and 55 minutes while the phone is in the standby mode.

■ Switch the phone on and off



Warning: Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Press and hold the power key as shown.

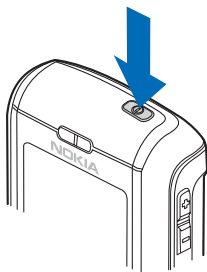

If the phone asks for a PIN or UPIN code, enter the code, and select **OK**. You can switch on the phone without a SIM card inserted.

Set the time, time zone, and date

Enter the local time, select the time zone of your location in terms of the time difference with respect to Greenwich Mean Time (GMT), and enter the date. See "Time and date" p. 34.

Plug and play service

When you switch on your phone for the first time, and the phone is in the standby mode, you may be asked to get the configuration settings from your service provider (network service). Confirm or decline the query. See *Connect to serv. support* in "Configuration" p. 43 and "Configuration settings service" p. xiii.

■ Start up without a SIM card

To start up the phone without the SIM card, accept *Start up phone without SIM card?*. Then use those features that do not require the SIM card.


■ Normal operating position

Use the phone only in its normal operating position.

Your device has an internal antenna.




Note: As with any other radio transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with the antenna affects call quality and may cause the device to operate at a higher power level than otherwise needed. Avoiding contact with the antenna area when operating the device optimizes the antenna performance and the battery life.

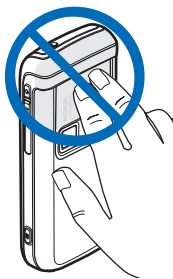


2. Your phone


■ Keys and parts

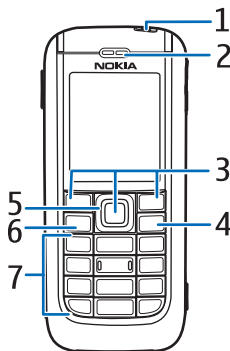

1. Power key
2. Earpiece
3. Left, middle, and right selection keys
4. End key
5. 4-way scroll key
6. Call key
7. Number keys

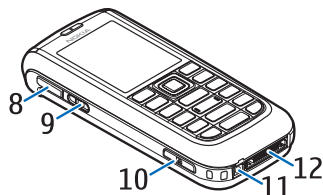


8. Push to talk / Multifunction key
9. Loudspeaker
10. Memory card slot
11. Charger connector
12. Enhancements connector

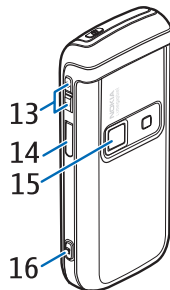

13. Volume keys
14. Infrared (IR) port
15. Camera lens
16. Camera key

■ Standby mode


When the phone is ready for use, and you have not entered any characters, the phone is in the standby mode.

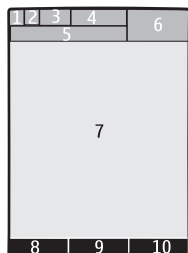

1. Network mode indicator
2. Signal strength of the cellular network
3. Battery charge level
4. Indicators
5. The name of the network or the operator logo
6. Clock
7. Display
8. The left selection key is **Go to** or a shortcut to another function. See "[Left selection key](#)" p. 35.
9. The middle selection key mode is **Menu**.
10. The right selection key may be **Names** to access the list of contacts in the **Contacts** menu, an operatorspecific name to access an operatorspecific Web site, or a shortcut to a function

that you selected. See "[Right selection key](#)" p. 35.

Active standby

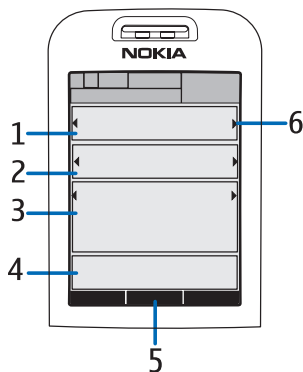

In the active standby mode, the phone can display separate content item windows, such as shortcuts (1), audio functions (2), the calendar (3), and a user note (4). To select whether active standby is shown, see [Active standby](#) in "[Standby settings](#)" p. 33.

When active standby is idle, to access the menu structure, select **Menu** (5). To access the features in active standby, scroll up or down.

To change the key to access the navigation mode, see [Enabling active standby](#) in "[Standby settings](#)" p. 33. When the arrow indicators (6) are shown, you can scroll the item left and right.

Content items in the navigation mode

Shortcut bar — To select a shortcut, scroll left or right to the desired function, and select it.

To change or organize the shortcuts when in the navigation mode, select **Options** > *Active standby* > *My active standby* > **Options** > *Personalise* > **Options** > *Select links* or *Organise links*.

Audio applications — To switch on the radio or the music player, scroll to and select it. To change a track in the music player or a channel in the radio, scroll left or right. To start the radio channel search, scroll and hold left or right.

Calendar — To view today's notes, select the desired one. To view the notes for the previous or next days, scroll left or right.

My note — To enter a note, select the content window, write your note, and save it.

Timer — To start the countdown timer, select the content item. The remaining time with a note is shown.

General indicators — To show standby indicators, such as date, cell info display, info messages, PTT default group name, and closed user group index. The date is shown if the calendar is not selected as active standby content.

Standby mode shortcuts

- To access the list of dialed numbers, press the call key once. See *"Make a voice call"* p. 11.
- To call your voice mailbox (network service) when you have saved your voice mailbox number in the phone, press and hold 1.
- To connect to a browser service, press and hold 0.
- To set shortcut functions for the scroll key, see *Navigation key* in *"My shortcuts"* p. 35.
- To change the profile, briefly press the power key to open the list of profiles. Scroll to the desired profile, and select it.

Power saver

To set the power saving function *On*, see *Power saver* in *"Display"* p. 33.

Indicators






 















 




You have unread messages in the *Inbox* folder.



You have unsent, canceled, or failed messages in the *Outbox* folder.



 The phone registered a missed call.

-  /  Your phone is connected to the instant messaging service, and the availability status is online or offline.
-  You received one or several instant messages, and you are connected to the instant messaging service.
-  The keypad is locked.
-  The phone does not ring for an incoming call or text message. See also "Tones" p. 33.
-  The alarm clock is set to *On*.
-  The countdown timer is running.
-  The stopwatch is running in the background.
-  /  The phone is registered to a GPRS, EGPRS, or WCDMA network.
-  /  A packet data connection is established.
-  /  The packet data connection is suspended (on hold), for example, if there is an incoming or outgoing call during a packet data dial-up connection.
-  When the infrared connection is activated, the indicator is shown continuously.
-  A Bluetooth connection is active.
-  If you have two phone lines, the second phone line is selected.
-  All incoming calls are diverted to another number.
-  The loudspeaker is activated, or the music stand is connected to the phone.
-  Calls are limited to a closed user group.
-  The timed profile is selected.
-  A headset, hands-free, loopset, or music stand enhancement is connected to the phone.
-  or  A push-to-talk connection is active or suspended.

■ Keypad lock (keyguard)

To prevent the keys from being accidentally pressed, select **Menu**, and press * within 3.5 seconds to lock the keypad; or select **Lock**.

To unlock the keypad select **Unlock**, and press * within 1.5 seconds. If the *Security keyguard* is set *On*, select **Unlock**, press *, and enter the security code.

To answer a call when the keyguard is on, press the call key. When you end or reject the call, the keypad automatically locks.

For *Automatic keyguard* and *Security keyguard*, see "Phone" p. 42.

When the keyguard is on, calls still may be possible to the official emergency number programmed into your device.

3. Call functions

■ Make a voice call

1. Enter the phone number, including the area code.
For international calls, press * twice for the international prefix (the + character replaces the international access code), enter the country code, the area code without the leading 0, if necessary, and the phone number.
2. To call the number, press the call key.
3. To end the call, or to cancel the call attempt, press the end key.

To search for a name or phone number that you have saved in *Contacts*, see "Search for a contact" p. 27. Press the call key to call the number.

To access the list of phone numbers you have most recently called or attempted to call, in the standby mode, press the call key once. To call the number, scroll to the number or name you want, and press the call key.

Speed dialing

Assign a phone number to one of the speed-dialing keys, 2 to 9. See "Speed dials" p. 29. Call the number in either of the following ways:

- Press the speed-dialing key, then the call key.
- If *Speed dialling* is set to *On*, press and hold a speed-dialing key until the call begins. See "Call" p. 41.

Enhanced voice dialing

To make a phone call, select and hold *Names*, and say the name of the contact you wish to call. The phone automatically associates a virtual voice tag with each contact in the phone memory.

Make a voice dialing call

If an application is sending or receiving data using a packet data connection, end the application before you use voice dialing in GSM. In WCDMA it is possible to send voice and data simultaneously.

Voice commands are language-dependent. To set the language, see *Voice playback language* in "Phone" p. 42.



Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

1. In the standby mode, press and hold the right selection key. A short tone is played, and *Speak now* is displayed.

If you are using a compatible headset with the headset key, press and hold the headset key to start the voice dialing.

2. Say the voice command clearly. If the voice recognition is successful, a list with matches is shown. The phone plays the voice command of the match on the top of the list. After about 1.5 seconds, the phone dials the number; or if the result is not the correct one, scroll to another entry, and select to dial the entry.

Using voice commands to carry out a selected phone function is similar to voice dialing. See *Voice commands* in "My shortcuts" p. 35.

■ Answer or reject a voice call

To answer a call, press the call key.

To mute the ringing tone before you answer the call, select **Silence**.

To end the call or reject a call, press the end key.

Call waiting

During a call, to answer the waiting call, press the call key. The first call is put on hold. To end the active call, press the end key.

To activate the *Call waiting* function, see "Call" p. 41.

■ Options during a voice call

Many of the options that you use during a call are network services. For availability, contact your network operator or service provider.

Call options are *Mute* or *Unmute*, *Contacts*, *Menu*, *Lock keypad*, *Record*, *Loudspeaker*, or *Handset*.

Network services options are *Answer*, *Reject*, *Hold* or *Unhold*, *New call*, *Add to conference*, *End call*, *End all calls*, and the following:

Send DTMF — to send tone strings.

Swap — to switch between the active call and the call on hold.

Transfer — to connect a call on hold to an active call and disconnect yourself.

Conference — to make a conference call that allows up to five participants.


 
Private call – to discuss privately in a conference call.



Warning: Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

4. Write text

To enter text (for example, when writing messages), use traditional or predictive text input. To use traditional text input, press a number key, 1 to 9, repeatedly until the desired character appears. In predictive text input you can enter a letter with a single keypress.

When you write text,  appears at the top left of the display, indicating predictive text input, and  appears, indicating traditional text input. **Abc**, **abc**, or **ABC** appears next to the text input indicator, indicating the character case. To change the character case, press **#**. **123** indicates number mode. To change from the letter to number mode, press and hold **#**, and select *Number mode*.

■ Settings

To set the writing language while writing text, select **Options** > *Writing language*.

To set predictive text input on or revert to traditional text input, select **Options** > *Prediction On* or *Prediction Off*.



Tip: To quickly set predictive text input on or off when writing text, press **#** twice, or select and hold **Options**.

■ Predictive text input

Predictive text input allows you to write text quickly using the phone keypad and a built-in dictionary.

1. To start writing a word, use the 2 to 9 keys. Press each key only once for one letter. The phone displays * or the letter if it separately has a meaning as a word. The entered letters are displayed underlined.

To insert a special character, press and hold *****, or select **Options** > *Insert symbol*. Scroll to a character, and select **Use**.

2. When you finish writing the word and it is correct, to confirm it, press **0** to add space.

If the word is not correct, press ***** repeatedly, or select **Options** > *Matches*. When the word that you want appears, select **Use**.

If the ? character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, select **Spell**. Complete the word (traditional text input is used), and select **Save**.

■ Traditional text input

Press a number key, 1 to 9, repeatedly until the desired character appears. Not all characters available under a number key are printed on the key. The characters that are available depend on the selected writing language. See ["Settings" p. 14](#).

If the next letter you want is located on the same key as the present one, wait until the cursor appears; or briefly scroll in any direction, and enter the letter.

The most common punctuation marks and special characters are available under the 1 key. For more characters, press *.

5. Navigate the menus

The phone offers you an extensive range of functions that are grouped into menus.

1. To access the menu, select **Menu**.

To change the menu view, select **Options** > *Main menu view* > *List* or *Grid*.

To rearrange the menu, scroll to the menu you want to move, and select **Options** > *Organise* > **Move**. Scroll to where you want to move the menu, and select **OK**. To save the change, select **Done** > **Yes**.

2. Scroll through the menu, and select an option (for example, *Settings*).
3. If the selected menu contains further submenus, select the one that you want (for example, *Call*).

4. If the selected menu contains further submenus, repeat step 3.
5. Select the setting of your choice.
6. To return to the previous menu level, select **Back**. To exit the menu, select **Exit**.

The menus, submenus, and setting options are numbered. To access some of them, use their shortcut number.

To access the menu, select **Menu**. Enter quickly, within 2 seconds, the shortcut number of the menu function you want to access. To access the menu functions in menu level 1, enter 0 and 1.

6. Messaging



You can read, write, send, and save text, multimedia, SMS e-mail, audio, and flash messages. All messages are organized into folders.

■ Text messages (SMS)

With the short message service (SMS) you can send and receive text messages (network service).

Before you can send text or SMS e-mail messages, you must save your message center number. See "Message settings" p. 24.

To check SMS e-mail service availability and to subscribe to the service, contact your service provider. To save an e-mail address in *Contacts*, see "Save numbers and text items" p. 27.

Your device supports the sending of text messages beyond the character limit for a single message. Longer messages are sent as a series of two or more messages. Your service provider may charge accordingly. Characters that use accents or other marks, and characters from some language options like Chinese, take up more space limiting the number

of characters that can be sent in a single message.

At the top of the display, you can see the message length indicator counting backwards from the maximum number of characters supported by the phone.

Write and send SMS messages

1. Select **Menu** > *Messaging* > *Create message* > *Text message*.
2. Enter the recipient's phone number in the *To:* field. To retrieve a phone number from *Contacts*, select **Add** > *Contact*. To send the message to multiple recipients, add the desired contacts one by one. Scroll right to add new contacts manually in the *To:* field. To send the message to persons in a group, select *Contact group* and the desired group. To retrieve the contacts to which you recently sent messages, select **Add** > *Recently used*.

3. Scroll down, and write your message in the *Message:* field. See "Write text" p. 14.


To insert a template into the message, select **Options** > *Use template*.

4. To send the message, select **Send**; or press the call key. See "Send a message" p. 20.

Read and reply to an SMS message

1 message received or the number of new messages with *messages received* are shown when you have received a message.

1. To view a new message, select **Show**. To view it later, select **Exit**.

To read the message later, select **Menu** > *Messaging* > *Inbox*. If more than one message is received, select the message you want to read.  is shown if you have unread messages in *Inbox*.

2. To view the list of available options while reading a message, select **Options**. You can, for example, select to copy text from the beginning of a message to your phone calendar as a reminder note.

3. To reply to a message, select **Reply** > *Text message*, *Multimedia*, *Flash message*, or *Audio message*.

To send a text message to an e-mail address, enter the e-mail address in the *To:* field.

Scroll down, and write your message in the *Message:* field. See "Write text" p. 14.

If you want to change the message type for your reply message, select **Options** > *Change message type*.

4. To send the message, select **Send**; or press the call key.

■ SIM messages

SIM messages are text messages that are saved to your SIM card. You can copy or move those messages to the phone memory, but not vice versa. Received messages are saved to the phone memory.

To read SIM messages, select **Menu** > *Messaging* > **Options** > *SIM messages*.

■ Multimedia messages



Note: Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.

To check availability and to subscribe to the multimedia messaging network service, contact your network operator or service provider. See "[Multimedia message](#)" p. 25.

A multimedia message can contain text, sound, pictures, video clips, a business card, and a calendar note. If the message is too large, the phone may not be able to receive it. Some networks allow text messages that include an Internet address where you can view the multimedia message.

Multimedia messaging supports the following formats:

- Picture: JPEG, GIF, animated GIF, and WBMP.
- Sound: AMR audio.
- Video clip: .3gp format with H.263 or MPEG video (QCIF resolution), WB or AMR audio.

- Other: vCard (business card) and vCalendar (calendar note).

The phone may not support all variations of the file formats.

You can receive multimedia messages during a call, another Java application, or an active browsing session over WCDMA data.

Write and send a multimedia message

The wireless network may limit the size of MMS messages. If the inserted picture exceeds this limit, the device may make it smaller so that it can be sent by MMS.

1. Select **Menu** > *Messaging* > *Create message* > *Multimedia*.
2. Enter your message.

Your phone supports multimedia messages that contain several pages (slides). A message can contain a calendar note and a business card as attachments. A slide can contain text, one image, and one sound clip; or text and a video clip. To insert a slide in the message, select **New**; or select **Options** > *Insert* > *Slide*.

To insert a file in the message, select **Insert** or **Options** > *Insert*.

You can retrieve images and video clips from the *Gallery*, or to take them directly from the viewfinder, select **Options** > *Insert* > *Image* > *New Image* or *Insert* > *Video clip* > *New video clip*.


3. To view the message before sending it, select **Options** > *Preview*.
4. To send the message, select **Send**; or press the call key. See "Send a message" p. 20.
5. Enter the recipient's phone number in the *To*: field. To retrieve a phone number from *Contacts*, select **Add** > *Contact*. To send the message to multiple recipients, add the desired contacts one by one. To send the message to persons in a group, select *Contact group* and the desired group. To retrieve the contacts to which you recently sent messages, select **Add** > *Recently used*.

Send a message

Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred, or forwarded.

When you finish writing your message, to send the message, select **Send**, or press the call key. The phone saves the message in the *Outbox* folder, and sending starts. If you select *Save sent messages* > *Yes*, the sent message is saved in the *Sent items* folder. See "General" p. 24.



Note: When the phone sends the message, the animated  is shown. This is an indication that the message has been sent by your device to the message center number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with your service provider.

It takes more time to send a multimedia message than to send a text message. While the message is being sent, you can use other functions on the phone. If an interruption occurs while the message is being sent, the phone tries to resend the message a few times. If these attempts fail, the message remains in the *Outbox* folder. You can try to resend it later.

Cancel message sending

When the phone is saving a message in the *Outbox* folder, *Sending message* or *Sending messages* is displayed. To cancel the text message sending, select **Cancel**.


To cancel the sending of the multimedia messages in the *Outbox* folder, scroll to the desired message, and select **Options** > *Cancel sending*.

Read and reply to a multimedia message



Important: Exercise caution when opening messages. Multimedia message objects may contain malicious software or otherwise be harmful to your device or PC.

Multimedia message received or the number of new messages with *messages received* is shown when you receive a new multimedia message.

1. To read the message, select **Show**. To view it later, select **Exit**.
To read the message later, select **Menu** > *Messaging* > *Inbox*. Scroll to the message that you want to view, and select it.  is shown if you have unread messages in *Inbox*.

2. To view the whole message if the received message contains a presentation, select **Play**.

To view the files in the presentation or the attachments, select **Options** > *Objects* or *Attachments*.

3. To reply to the message, select **Options** > *Reply* > *Text message*, *Multimedia*, *Flash message*, or *Audio message*. Write the reply message.

If you want to change the message type for your reply message, select **Options** > *Change message type*. The new message type may not support all the content that you have added.

4. To send the message, select **Send**; or press the call key. See "Send a message" p. 20.

■ Memory full

When you are receiving a message, and the memory for the messages is full, *Memory full. Unable to receive messages* is shown. To first delete old messages, select **OK** > **Yes** and the folder. Scroll to the desired message, and select **Delete**. If one or more messages are marked, select **Mark**. Mark all the messages you want to delete, and select **Options** > *Delete marked*.

To free phone memory, delete photos, ringing tones, or other data in the phone memory.

Folders

The phone saves received messages in the *Inbox* folder.

Messages that have not yet been sent are saved in the *Outbox* folder.

To set the phone to save the sent messages in the *Sent items* folder, see *Save sent messages* in "General" p. 24.

To save the message that you are writing and want to send later in the *Drafts* folder, select **Menu** > *Messaging* > *Drafts*.

You can move your messages to the *Saved items* folder. To organize your *Saved items* subfolders, select **Menu** > *Messaging* > *Saved items* > *Saved messages* or a folder that you add. To add a new folder for your messages, select **Options** > *Add folder*. To delete or rename a folder, scroll to the desired folder, and select **Options** > *Delete folder* or *Rename folder*.

Your phone has templates. You can create a new template, save or copy a message as a template. To access the template list, select **Menu** > *Messaging* > *Saved items* > *Templates*.

Flash messages

Flash messages are text messages that are instantly displayed upon reception. Flash messages are not automatically saved.

Write a flash message

Select **Menu** > *Messaging* > *Create message* > *Flash message*. Enter the recipient's phone number in the *To:* field. Write your message in the *Message:* field. The maximum length of a flash message is 70 characters. To send the message, select **Send**.

Receive a flash message

A received flash message is indicated with *Message:* and a few words from the beginning of the message. To read the message, select **Read**. To extract phone numbers, e-mail addresses, and Web site addresses from the current message, select **Options** > *Use detail*.

Audio messages

With this menu, use the multimedia message service to create and send a voice message in a convenient way. Multimedia messaging service must be activated before you can use audio messages.

Create an audio message

1. Select **Menu** > *Messaging* > *Create message* > *Audio message*. The recorder opens. To use the recorder, see "Voice recorder" p. 53.
2. To view the available options, select **Options**.
3. Enter the recipient's phone number in the *To:* field. To retrieve a phone number from *Contacts*, select **Add** > *Contact*. To send the message to multiple recipients, add the desired contacts one by one. To send the message to persons in a group, select *Contact group* and the desired group. To retrieve the contacts to which you recently sent messages, select **Add** > *Recently used*.
4. To send the message, select **Send**.


Receive an audio message

When your phone receives audio messages, the number of messages and the text *messages received* is shown. To open the message, select **Play**; or if more than one message is received, select **Show** > **Play**. To listen to the message later, select **Exit**. Select **Options** to see the available options.

Voice messages

The voice mailbox is a network service, and you may need to subscribe to it. For more information and for your voice mailbox number, contact your service provider.

To call your voice mailbox, select **Menu** > *Messaging* > *Voice messages* > *Listen to voice messages*. To enter, find, or edit your voice mailbox number, select *Voice mailbox number*.

If supported by the network,  indicates new voice messages. To call your voice mailbox number, select **Listen**.

Info messages

With the *Info messages* network service, you can receive messages on various topics from your service provider. To check availability, topics, and the relevant topic numbers, contact your service provider.

Service commands

Select **Menu** > *Messaging* > *Service commands*. Write and send service requests (also known as USSD commands), such as activation commands for network services, to your service provider.

■ Delete messages

To delete messages one by one, select **Menu** > *Messaging* > *Delete messages* > *By message* and the folder from which you want to delete messages. Scroll to the desired message, and select **Delete**. To mark more than one message, select **Options** > **Mark**. Mark all the messages you want to delete, and select **Options** > *Delete marked*.

To delete all messages from a folder, select **Menu** > *Messaging* > *Delete messages* > *By folder* and the folder to delete. Depending on the folder, the phone asks if you want to delete the messages.

To delete all messages from all folders, select **Menu** > *Messaging* > *Delete messages* > *All messages* > **Yes**.

■ Message settings

General

General settings are common for text and multimedia messages.

Select **Menu** > *Messaging* > *Message settings* > *General settings* and from the following options:

Save sent messages > **Yes** — to set the phone to save the sent messages in the *Sent items* folder.

Overwriting in sent items — to select whether overwriting is allowed when messages are sent and the memory is full.

Font size — to select the font size used in messages.

Graphical smiles > **Yes** — to set the phone to replace character-based smiles with graphical ones.

Text message and SMS e-mail

The text message settings affect the sending, receiving, and viewing of messages.

Select **Menu** > *Messaging* > *Message settings* > *Text messages* and from the following options:

Delivery reports > **Yes** — to ask the network to send delivery reports about your messages (network service).

Message centres > *Add centre* — to set the phone number and name of the message center that is required for sending text messages. You receive this number from your service provider. If you select *SIM message centre*, you can view the SIM message center information.

Message centre in use — to select the message center in use.

E-mail message centres > *Add centre* — to set the phone numbers and name of the e-mail center for sending SMS e-mail. If you select *SIM e-mail centre*, you can view the SIM e-mail center information.

E-mail centre in use — to select the SMS e-mail message center in use.

Message validity — to select the length of time for which the network attempts to deliver your message.

Messages sent via — to select the format of the messages to be sent: *Text*, *Paging*, or *Fax* (network service).

Use packet data > *Yes* — to set GPRS or WCDMA as the preferred SMS bearer.

Character support > *Full* — to select all characters in the messages to be sent as viewed.

Reply via same centre > *Yes* — to allow the recipient of your message to send you a reply using your message center (network service).

Multimedia message

The message settings affect the sending, receiving, and viewing of multimedia messages.

You may receive the configuration settings for multimedia messaging as a configuration message. See "[Configuration settings service](#)"

p. xiii. You can also enter the settings manually. See "[Configuration](#)" p. 43.

Select **Menu** > *Messaging* > *Message settings* > *Multimedia messages* and from the following options:

Delivery reports > *Yes* — to ask the network to send delivery reports about your messages (network service).

Image size (multimedia) — to define the default image size used in multimedia messages.

Default slide timing — to define the default time between slides in multimedia messages.

Allow multimedia recept. — to receive or block the multimedia message, select *Yes* or *No*. If you select *In home network*, you cannot receive multimedia messages when you are outside your home network. The default setting of the multimedia message service is generally *In home network*.

Incoming multim. msgs. — to allow the reception of multimedia messages automatically, manually after being prompted, or to reject the reception. This setting is not shown if *Allow multimedia recept.* is set to *No*.

Allow adverts — to receive or reject advertisements. This setting is not shown if *Allow multimedia receipt* is set to *No*, or *Incoming multimed. msgs.* is set to *Reject*.

Configuration settings >


Configuration — only the configurations that support multimedia messaging are shown. Select a service provider, *Default*, or *Personal configuration* for multimedia messaging. Select *Account* and a multimedia messaging service account contained in the active configuration settings.

7. Contacts



You can save names and phone numbers (contacts) in the phone memory and in the SIM card memory.

The phone memory may save contacts with additional details, such as various phone numbers and text items. You can also save an image or a video clip for a limited number of contacts. You can also use the video clip saved with a contact as a ringing tone for the contact.

The SIM card memory can save names with one phone number attached to them. The contacts saved in the SIM card memory are indicated by .

■ Search for a contact

Select **Menu** > **Contacts** > **Names**. Scroll through the list of contacts, or enter the first characters of the name.


■ Save names and phone numbers

Names and numbers are saved in the used memory. To save a name and phone number, select **Menu** > **Contacts** > **Names** > **Options** > **Add**

new contact. Enter the last name, first name, and the phone number.

■ Save numbers and text items

In the phone memory for contacts you can save different types of phone numbers and short text items per name.

The first number you save is automatically set as the default number, and it is indicated with a frame around the number type indicator (for example, ). When you select a name from contacts (for example, to make a call), the default number is used unless you select another number.

1. Make sure that the memory in use is **Phone** or **Phone and SIM**.
2. Search for the contact to which you want to add a new number or text item, and select **Details** > **Options** > **Add detail**.
3. To add a number, select **Number** and a number type.

To add another detail, select a text type, an image or a video clip from **Gallery**, or a new image.

To search for an ID from the server of your service provider if you have connected to the presence service, select **User ID > Search**. If only one ID is found, it is automatically saved.

Otherwise, to save the ID, select **Options > Save**. To enter the ID, select **Enter ID manually**. Enter the ID, and select **OK** to save it.

To change the number type, scroll to the desired number, and select **Options > Change type**. To set the selected number as the default number, select **Set as default**.

4. Enter the number or text item; to save it, select **Save**.

■ Move or copy contacts

You can move and copy contacts from the phone memory to the SIM card memory, or vice versa. The SIM card memory can save names with one phone number attached to them.

To move or copy contacts one by one, select **Menu > Contacts > Names**. Scroll to the contact, and select **Options > Move contact** or **Copy contact**.

To move or copy marked contacts, select **Menu > Contacts > Names**. Scroll to a contact, and select **Options > Mark**. Then mark all other

contacts, and select **Options > Move marked** or **Copy marked**.

To move or copy all contacts, select **Menu > Contacts > Move contacts** or **Copy contacts**.

■ Edit contact details

Search for the contact you want to edit, and select **Details**. To edit a name, number, text item, or to change the image, select **Options > Edit**. You cannot edit an ID when it is on the **IM contacts** list.

■ Delete contacts

To delete all the contacts and the details attached to them from the phone or SIM card memory, select **Menu > Contacts > Delete all contacts > From phone memory** or **From SIM card**. Confirm with the security code.

To delete a contact, search for the desired contact, and select **Options > Delete contact**.

To delete a number, text item, or an image attached to the contact, search for the contact, and select **Details**. Scroll to the desired detail, and select **Options > Delete > Delete number, Delete detail, or Delete image**. Deleting an image from contacts does not delete it from **Gallery**.

■ Business cards

You can send and receive a person's contact information from a compatible device that supports the vCard standard as a business card.

To send a business card, search for the contact whose information you want to send, and select **Details** > **Options** > *Send business card* > *Via multimedia*, *Via text message*, *Via infrared*, or *Via Bluetooth*.

When you receive a business card, select **Show** > **Save** to save the business card in the phone memory. To discard the business card, select **Exit** > **Yes**.

■ Settings

Select **Menu** > *Contacts* > *Settings* and from the following options:

Memory in use — to select the SIM card or phone memory for your contacts. Select *Phone and SIM* to recall names and numbers from both memories. In that case, when you save names and numbers, they are saved in the phone memory.

Contacts view — to select how the names and numbers in *Contacts* are displayed.

Name display — to select whether the contact's first or last name is displayed first.

Font size — to set the font size for the list of contacts.

Memory status — to view the free and used memory capacity.

■ Groups

Select **Menu** > *Contacts* > *Groups* to arrange the names and phone numbers saved in the memory into caller groups with different ringing tones and group images.

■ Speed dials

To assign a number to a speed-dialing key, select **Menu** > *Contacts* > *Speed dials*, and scroll to the speed-dialing number that you want.

Select **Assign**, or if a number has already been assigned to the key, select **Options** > *Change*. Select **Search** and the contact you want to assign. If the *Speed dialling* function is off, the phone asks whether you want to activate it. See also *Speed dialling* in "Call" p. 41.

To make a call using the speed-dialing keys, see "Speed dialing" p. 11.

■ Service and my numbers

Select **Menu** > *Contacts* and from the following options:

Service numbers — to call the service numbers of your service provider if the numbers are included on your SIM card (network service).

My numbers — to view the phone numbers assigned to your SIM card. This is only shown if the numbers are included on your SIM card.

8. Log



To view the information on your calls, select **Menu** > *Log* > *Missed calls*, *Received calls*, or *Dialled numbers*. To view your recent missed and received calls and the dialed numbers chronologically, select *Call log*. To view the contacts to whom you most recently sent messages, select *Message recipients*.

To view the approximate information on your recent communications, select **Menu** > *Log* > *Call duration*, *Packet data counter*, or *Packet data conn. timer*.

To view how many text and multimedia messages you have sent and received, select **Menu** > *Log* > *Message log*.



Note: The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.



Note: Some timers, including the life timer, may be reset during service or software upgrades.

9. Settings



■ Profiles

Your phone has various setting groups, called profiles, which you can customize for different events and environments.


Select **Menu** > *Settings* > *Profiles* and the desired profile. Select from the following options:

Activate — to activate the selected profile.

Personalise — to personalise the profile. Select the setting you want to change, and make the changes.

Timed — to set the profile to be active until a certain time up to 24 hours, and set the end time. When the time set for the profile expires, the previous profile that was not timed becomes active.

■ Flight mode

You can deactivate all radio frequency functionality and still have access to offline games, calendar, and phone numbers. Use the flight mode in radio sensitive environments—on board aircraft or in hospitals. When the flight mode is active,  is shown.

Select **Menu** > *Settings* > *Profiles* > *Flight* > *Activate* or *Personalise*.

To deactivate the flight mode, select any other profile.

In the flight mode you can make an emergency call. Enter the emergency number, press the call key, and select *Yes* when asked *Exit flight profile?*

The phone attempts to make an emergency call.

When the emergency call ends, the phone automatically changes to the general profile mode.

■ Themes

A theme contains many elements for personalizing your phone, such as wallpaper, screen saver, color scheme, and a ringing tone.

Select **Menu** > *Settings* > *Themes* and from the following options:

Select theme — to set a theme in your phone. A list of folders in *Gallery* opens. Open the *Themes* folder, and select a theme.

Theme downloads — to open a list of links to download more themes.

Tones

You can change the settings of the selected active profile.

Select **Menu** > *Settings* > *Tones* > *Incoming call alert*, *Ringing tone*, *Ringing volume*, *Incom. call video*, *Vibrating alert*, *PTT voice opt.*, *PTT notif. tone*, *PTT callb. tone*, *Msg. alert tone*, *IM alert tone*, *Keypad tones*, *Other tones*, *App. tones* or *Alert for*. You can find the same settings in the *Profiles* menu.

To set the phone to ring only upon calls from phone numbers that belong to a selected caller group, select *Alert for*. Scroll to the caller group you want or *All calls*, and select **Mark**.

Display

With display settings you can personalise your phone display view.

Standby mode

Enable or disable active standby from idle

To enable the active standby mode, select **Menu** > *Settings* > *Display* > *Standby mode settings* > *Active standby* > *My active standby*.

To disable the active standby mode, select **Menu** > *Settings* > *Display* > *Standby mode settings* > *Active standby* > *Off*.

Standby settings

Select **Menu** > *Settings* > *Display* > *Standby mode settings* and from the following options:

Active standby > *My active standby* – to display the active standby.

Select **Options** and from the following options:

- *Personalise* – to change the content on the display.
- *Organise* – to reorganize the content on the display.
- *Enabling active standby* – to change the key for accessing the navigation mode. The same setting is also in the *My shortcuts* menu. See "Enable active standby" p. 35.

Wallpaper – to set your phone to display an image or a slide as wallpaper when the phone is in the standby mode. Select *Wallpapers* > *Image* or *Slide set*. Scroll to an image or a slide and select **Select** to activate the image or slide as wallpaper. Select *Open Camera* to create a new image. To download more graphics, select *Graphic downloads*.

Standby font colour – to select the color for the texts on the display in the standby mode.

Navigation key icons — to set the scroll key icons that are shown in the standby mode.

Operator logo — to set your phone to display or hide the operator logo.

Cell info display > On — to receive information from the network operator depending on the network cell used (network service).

Screen saver

To select a screen saver from *Gallery*, select **Menu > Settings > Display > Screen saver > Screen savers > Image, Slide set, Video clip, or Open camera, Analogue clock or Digital clock. To download more screen savers, select *Graphic downloads*. To select the time after which the screen saver is activated, select *Time-out*. To activate the screen saver, select *On*.**

Power saver

To save some battery power, select **Menu > Settings > Display > Power saver**. A digital clock is displayed when no function of the phone is used for a certain time.

Sleep mode

To save most battery power, select **Menu > Settings > Display > Sleep mode**. The display turns completely

black when no function of the phone is used for a certain time.

Font size

To set the font size for reading and writing messages and viewing contacts and Web pages, select **Menu > Settings > Display > Font size**.

Time and date

To change the time, time zone, and date settings, select **Menu > Settings > Time and date > Clock, Date, or Auto-update of date/time** (network service).

When traveling to a different time zone, select **Menu > Settings > Time and date > Clock > Time zone** and the time zone of your location in terms of the time difference with respect to Greenwich Mean Time (GMT) or Universal Time Coordinated (UTC). The time and date are set according to the time zone and enable your phone to display the correct sending time of received text or multimedia messages. For example, GMT -5 denotes the time zone for New York (USA), 5 hours west of Greenwich/London (UK).

Use for India (New Delhi) GMT +5.5, for Thailand/Indonesia/Vietnam GMT +7, for Singapore/Malaysia/Philippines GMT +8, for Australia (Sydney) GMT +10, and for New Zealand GMT +12.

■ My shortcuts

With personal shortcuts you get quick access to often used functions of the phone.

Left selection key

To select a function from the list for the left selection key, select **Menu** > *Settings* > *My shortcuts* > *Left selection key*. See also "Standby mode" p. 7.

To activate a function in the standby mode if the left selection key is **Go to**, select **Go to** and the desired function on your personal shortcut list. Select **Options** and from the following options:

Select options — to add a function to the shortcut list, or to remove one. Scroll to the function, and select **Mark** or **Unmark**.

Organise — to rearrange the functions on your personal shortcut list. Scroll to the function you want to move, and select **Move**. Scroll to where you want to move the function, and select **OK**.

Right selection key

To select a function from the list for the right selection key, select

Menu > *Settings* > *My shortcuts* > *Right selection key*. See also "Standby mode" p. 7.

Navigation key

To select shortcut functions for the scroll keys, select **Menu** > *Settings* > *My shortcuts* > *Navigation key*.

Scroll to the desired key, and select **Change** and a function from the list.

To remove a shortcut function from the key, select (*empty*) from the list of functions. To reassign a function for the key, select **Assign**. See "Standby mode shortcuts" p. 8.


Enable active standby

To select the key to access the active standby navigation mode, select

Menu > *Settings* > *My shortcuts* > *Enabling active standby* > *Navigation key up*, *Navigation key down*, or *Navigation key up/down*.

Voice commands

You can call contacts and carry out phone functions by saying voice commands. Voice commands are language-dependent. To set the language, see *Voice playback language* in "Phone" p. 42.

The phone voice commands are active by default. Select **Menu** > *Settings* > *My shortcuts* > *Voice commands* and a folder. Scroll to a function.  indicates that the voice tag is activated. To play the activated voice command, select **Playback**. To use voice commands, see "Enhanced voice dialing" p. 11.

To manage the voice commands, scroll to a phone function, and select from the following options:

Edit or *Remove* – to change or deactivate the voice command of the selected function. When you edit the voice tag text, the phone associates it to a new voice tag.

Add all or *Remove all* – to activate or deactivate voice commands to all functions in the voice commands list. *Add all* or *Remove all* is not shown if all voice commands are active or inactive.

Connectivity

You can connect the phone to a compatible device using an infrared, Bluetooth wireless technology, or USB data cable (CA-53 or DKU-2) connection. You can also define the settings for packet data dial-up connections.

Bluetooth wireless technology

This device is compliant with Bluetooth Specification 2.0 supporting the following profiles: hands-free, headset, object push profile, file transfer profile, dial-up networking profile, SIM access profile, and serial port profile. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved enhancements for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.


Features using Bluetooth technology, or allowing such features to run in the background while using other features, increase the demand on battery power and reduce the battery life.

Bluetooth technology allows you to connect the phone to a compatible Bluetooth device within 10 meters (32 feet). Since devices using Bluetooth technology communicate using radio waves, your phone and the other devices do not need to be in direct line-of-sight, although the connection can be subject to

interference from obstructions such as walls or from other electronic devices.

Set up a Bluetooth connection

Select **Menu** > *Settings* > *Connectivity* > *Bluetooth* and from the following options:

Bluetooth > *On* or *Off* — to activate or deactivate the Bluetooth function.  indicates an active Bluetooth connection. When activating Bluetooth technology for the first time, you are asked to give a name for the phone. Use a unique name that is easy for others to identify.

Search for audio enhanc. — to search for compatible Bluetooth audio devices. Select the device that you want to connect to the phone.

Paired devices — to search for any Bluetooth device in range. Select **New** to list any Bluetooth device in range. Scroll to a device, and select **Pair**. Enter the Bluetooth passcode of the device to associate (pair) the device to your phone. You must only give this passcode when you connect to the device for the first time. Your phone connects to the device, and you can start data transfer.

Bluetooth wireless connection

Select **Menu** > *Settings* > *Connectivity* > *Bluetooth*. To check which Bluetooth connection is currently active, select *Active devices*. To view a list of Bluetooth devices that are currently paired with the phone, select *Paired devices*.

Select **Options** to access available options depending on the status of the device and the Bluetooth connection. Select *Connect* > *Assign short name*, *Auto-conn. without conf.*, *Delete pairing* or *Pair new device*.

Bluetooth settings

To define how your phone is shown to other Bluetooth devices, select **Menu** > *Settings* > *Connectivity* > *Bluetooth* > *My phone's visibility* or *My phone's name*.

Operating the phone in hidden mode is a safer way to avoid malicious software.

Do not accept Bluetooth connectivity from sources you do not trust.

As another alternative, switch off the Bluetooth functionality. This does not affect other functions of the phone.

Infrared

You can send or receive data to or from a compatible phone or data device (for example, a computer) through the infrared (IR) port of your phone. To use an IR connection, the device with which you want to establish a connection must be IrDA compliant.

Do not point the IR (infrared) beam at anyone's eye or allow it to interfere with other IR devices. This device is a Class 1 laser product.


When sending or receiving data, ensure that the IR ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices.


To activate the IR port of your phone, select **Menu > Settings > Connectivity > Infrared**.

To deactivate the IR connection, select **Menu > Settings > Connectivity > Infrared**. When the phone displays *Deactivate infrared?*, select **Yes**.

If data transfer is not started within 2 minutes after the activation of the IR port, the connection is canceled and must be started again.

IR connection indicator

When  is shown continuously, the IR connection is activated, and your phone is ready to send or receive data through its IR port.

When  blinks, your phone is trying to connect to the other device, or a connection has been lost.

Packet data

WCDMA and general packet radio service (GPRS) are network services that allow mobile phones to send and receive data over an Internet protocol (IP)based network. WCDMA and GPRS are data bearers that enable wireless access to data networks such as the Internet.

Enhanced GPRS (EGPRS) is similar to GPRS but enables faster connections. For more information on availability of EGPRS and data transfer speed, contact your network operator or service provider.


 
The applications that may use WCDMA or (E)GPRS are MMS, video streaming, browsing sessions, remote SyncML, Java application downloading, and the PC dial-up.

When you have selected GPRS as a data bearer, the phone uses EGPRS instead of GPRS if this is available in the network. You cannot select between EGPRS and GPRS, but for some applications you may be able to select GPRS or *GSM data* (circuit switched data, CSD).

Packet data connection

Select **Menu** > *Settings* > *Connectivity* > *Packet data* > *Packet data connection* and from the following options:

Always online to set the phone to automatically register to a packet data network when you switch on the phone. **G** or **E** indicates that the packet data service is available.

If you receive a call or a text message, or make a call during a packet data connection,  or  indicates that the packet data connection is suspended (on hold).

When needed to register and establish a packet data connection when an application using packet data needs it, and to close the connection when you end the application.

Packet data settings

You can connect the phone using Bluetooth wireless technology, infrared, or USB data cable

connection to a compatible PC and use the phone as a modem to enable packet data connectivity from the PC.

To define the settings for the packet data connections from your PC, select **Menu** > *Settings* > *Connectivity* > *Packet data* > *Packet data settings* > *Active access point*, and activate the access point you want to use. Select *Edit active access point* > *Alias for access point*, enter a name to change the access point settings, and select **OK**. Select *Packet data access point*, enter the access point name (APN) to establish a connection to a network, and select **OK**.

You can also set the packet data service settings (access point name) on your PC using the Nokia Modem Options software. See "[Nokia PC Suite](#)" p. 75. If you have set the settings both on your PC and on your phone, the PC settings are used.

Data transfer

Synchronize your calendar, contacts data, and notes with another compatible device (for example, a mobile phone), a compatible PC, or a remote Internet server (network service).

Partner list

To copy or synchronize data from your phone, the name of the device and the settings must be in the list of partners in transfer contacts. If you receive data from another device (for example, a compatible mobile phone), the partner is automatically added to the list, using the contact data from the other device. *Serversync* and *PCsync* are the original items in the list.

To add a new partner to the list (for example, a new device), select **Menu > Settings > Connectivity > Data transfer > Options > Add contact > Phone sync** or **Phone copy**, and enter the settings according to the transfer type.

To edit the copy and synchronize settings, select a contact from the partner list and **Options > Edit**.

To delete a partner, select a contact from the partner list and **Options > Delete**, and confirm *Delete transfer contact?* You cannot delete *Server sync* or *PCsync*.

Data transfer with a compatible device

For synchronization, Bluetooth wireless technology or infrared is used. The other device is in the standby mode.

To start data transfer, select **Menu > Settings > Connectivity > Data transfer** and the transfer partner from the list, other than *Server sync* or *PCsync*. According to the settings, the selected data is copied or synchronized. The other device also must be activated for receiving data.

Synchronize from a compatible PC

Before you synchronize data from calendar, notes, and contacts from a compatible PC, you must install the Nokia PC Suite software of your phone on the PC. Use Bluetooth wireless technology, infrared, or a USB data cable for the synchronization, and start the synchronization from the PC.

Synchronize from a server

To use a remote Internet server, you must subscribe to a synchronization service. For more information and the settings required for this service, contact your service provider. You may receive the settings as a configuration message. See "[Configuration settings service](#)" p. xiii and "[Configuration](#)" p. 43.

If you have saved data on the remote Internet server, to synchronize your phone, start the synchronization from your phone.

Select **Menu** > *Settings* > *Connectivity* > *Data transfer* > *Server sync*. Depending on the settings, select *Initialising synchronisation* or *Initialising copy*.

If the contacts or calendar are full, synchronizing for the first time or after an interrupted synchronization may take up to 30 minutes to complete.

USB data cable

You can use the USB data cable to transfer data between the memory card inserted in the phone and a compatible PC or a printer supporting PictBridge. You can also use the USB data cable with Nokia PC Suite.

To activate the memory card for data transfer or picture printing, connect the USB data cable; when the phone displays *USB data cable connected. Select mode.*, select **OK** and from the following modes:

Default mode — to use the phone to interact with applications on a PC that has Nokia PC Suite installed.

Printing — to use the phone with a PictBridge compatible printer.

Data storage — to connect to a PC that does not have Nokia software and use the phone as a data storage device.

To change the USB mode, select **Menu** > *Settings* > *Connectivity* > *USB data cable* > *Default mode*, *Printing*, or *Data storage*.

■ Call

Select **Menu** > *Settings* > *Call* and from the following options:

Call divert — to divert your incoming calls (network service). You may not be able to divert your calls if some call barring functions are active. See *Call barring service* in "Security" p. 44.

Automatic redial > *On* — to make a maximum of 10 attempts to connect the call after an unsuccessful call attempt.

Anykey answer > *On* — to set the phone to answer an incoming call by pressing any key except the power or end keys.

Speed dialling > *On* — to dial the names and phone numbers assigned to the speed-dialing keys 2 to 9, press and hold the corresponding number key.

Call waiting > *Activate* — to have the network notify you of an incoming call while you have a call in progress (network service). See "Call waiting" p. 12.

Summary after call > *On* — to briefly display the approximate duration and cost (network service) of the call after each call.

Send my caller ID > *Yes* — to show your phone number to the person you are calling (network service). To use the setting agreed upon with your service provider, select *Set by network*.

Line for outgoing calls — to select the phone line 1 or 2 for making calls if supported by your SIM card (network service).

■ Phone

Select **Menu** > *Settings* > *Phone* and from the following options:

Language settings — to set the display language of your phone, select *Phone language*. If you select *Automatic*, the phone selects the language according to the information on the SIM card.

To select the USIM card language, select *SIM language*.

To set a language for the voice playback, select *Voice playback language*. See "Make a voice dialing

call" p. 11 and *Voice commands* in "My shortcuts" p. 35.

Memory Status — to view the amount of used and available phone memory.

Automatic keyguard — to set the keypad of your phone to lock automatically after a preset time delay when the phone is in the standby mode and no function of the phone has been used. Select *On*, and set the time.

Security keyguard — to set the phone to ask for the security code when you unlock the keyguard. Enter the security code, and select *On*.

When the keyguard is on, calls still may be possible to the official emergency number programmed into your device.

Welcome note — to write the note you want to be shown briefly when the phone is switched on.

Network mode — to select dual mode (UMTS and GSM), UMTS, or GSM. You cannot access this option during an active call.

Operator selection > *Automatic* — to set the phone to automatically select one of the cellular networks available in your area. With *Manual* you can select a network that has a roaming agreement with your home network operator.

Confirm SIM serv. actions — See "SIM services" p. 74.

Help text activation — to select whether the phone shows help texts.

Start-up tone — to select whether the phone plays a tone when the phone is switched on.

Flight query — to select whether *Activate flight profile?* appears every time the phone is switched on if the flight mode was set before switching off the device. See "Flight mode" p. 32.

■ Enhancements

This menu is shown only if the phone is or has been connected to a compatible mobile enhancement.

Select **Menu** > *Settings* > *Enhancements*.

Depending on the enhancement, you can select some of the following options:

Default profile — to select the profile that you want to be automatically activated when you connect to the selected enhancement.

Automatic answer — to set the phone to answer an incoming call automatically after 5 seconds. If *Incoming call alert* is set to *Beep once* or *Off*, automatic answer is off.

■ Configuration

You can configure your phone with settings that are required for certain services to function correctly. The services are multimedia messaging, instant messaging, synchronization, streaming, push to talk, IM, and Web. Your service provider may also send you these settings. See "Configuration settings service" p. xiii.

For information on availability and the appropriate configuration settings, contact your network operator or service provider.

Select **Menu** > *Settings* > *Configuration* and from the following options:

Default config. settings — to view the service providers saved in the phone. Scroll to a service provider, and select **Details** to view the applications that the configuration settings of this service provider support. To set the configuration settings of the service provider as default settings, select **Options** > *Set as default*. To delete configuration settings, select *Delete*.

Activ. default in all apps. — to activate the default configuration settings for supported applications.

Preferred access point — to view the saved access points. Scroll to an access point, and select **Options** > *Details* to view the name of the service provider, data bearer, and packet data access point or GSM dial-up number.

Connect to serv. support — to download the configuration settings from your service provider if this is supported by the service provider.

Personal config. settings — to add new personal accounts for various services, and to activate or delete them. To add a new personal account if you have not added any, select **Add**; otherwise, select **Options** > *Add new*. Select the service type, and select and enter each of the required parameters. The parameters differ according to the selected service type. To delete or activate a personal account, scroll to it, and select **Options** > *Delete* or *Activate*.

■ Security

When security features that restrict calls are in use (such as call barring, closed user group, and fixed dialing) calls still may be possible to the official emergency number programmed into your device.

Select **Menu** > *Settings* > *Security* and from the following options:

PIN code request and *UPIN code request* — to set the phone to ask for your PIN or UPIN code every time the phone is switched on. Some SIM cards do not allow the code request to be turned off.

Call barring service — to restrict incoming calls to and outgoing calls from your phone (network service). A barring password is required.

Fixed dialling — to create, edit, and activate a list of phone numbers or prefixes. When the list is activated, you can only call or send messages to the numbers on the list. If the SIM card does not support this option, *Fixed dialling* is hidden.

Closed user group — to specify a group of people whom you can call and who can call you (network service).

Security level > *Phone* — to set the phone to ask for the security code whenever a new SIM card is inserted into the phone. If you select *Security level* > *Memory*, the phone asks for the security code when the SIM card memory is selected, and you want to change the memory in use.

Access codes — to change the security code, PIN code, PIN2 code, or barring password.

Code in use — to select whether the PIN code or UPIN code is active.

Authority certificates or *User certificates* — to view the list of the authority or user certificates downloaded into your phone. See "Certificates" p. 72.

Security module settings — to view *Security module details*, activate *Module PIN request*, or change the module PIN and signing PIN. See also "Access codes" p. xii.

■ Digital rights management

Digital rights management (DRM) is copyright protection, designed to prevent modification and to limit distribution of protected files. When you download protected files, such as sound, video, themes, or ringing tones to your phone, the files are free, but locked. You pay for the key to activate the file, and the activation key is automatically sent to your phone when you download the file.

To view the permissions for a protected file, scroll to the file, and select **Options** > *Activation keys*. For example, you can see how many times you can view a video or how many days you have left for listening to a song.

To extend the permissions for a file, select **Options** and the corresponding option for the file type, such as *Activate theme*. You can send certain types of protected files to your friends, and they can buy their own activation keys.

This phone supports OMA DRM 1.0.

■ Restore factory settings

To reset some of the menu settings to their original values, select **Menu** > *Settings* > *Restore factory sett.*. Enter the security code.

10. Operator menu

This menu lets you access a portal to services provided by your network operator. The name and the icon depend on the operator. For more information, contact your network operator. If this menu is not shown, the other menu numbers change accordingly.

The operator can update this menu with a service message. For more information, see "[Service inbox](#)" p. 71.

11. Gallery



In this menu you can manage graphics, images, recordings, and tones. These files are arranged in folders.

Your phone supports an activation key system to protect acquired content. Always check the delivery terms of any content and activation key before acquiring them, as they may be subject to a fee.

The files stored in *Gallery* use a memory that mainly consists of the microSD card of your phone. You can store images, themes, graphics, ringing tones, video clips, and sound clips in *Gallery*.

To manage the files and folders, do the following:

1. Select **Menu** > *Gallery*. A list of folders is shown. If a memory card is inserted in the phone, the folder *Memory card, (unformatted)*, or the name of the memory card is shown.
2. Scroll to the desired folder. To view a list of files in the folder, select **Open**. For the available options, select **Options**.
3. Scroll to the file you want to view, and select **Open**. For the available options, select **Options**.

Copyright protections may prevent some images, music (including ringing tones), and other content from being copied, modified, transferred or forwarded.

■ Format memory card

To format a new memory card, select **Menu** > *Gallery*. Scroll to the memory card folder, and select **Options** > *Format memory card*.

12. Media



You can take photos or record live video clips with the built-in 1.3 megapixel camera.

■ Camera

The camera produces pictures in .jpg format, and you can digitally zoom up to four times.

Take a photo

1. To open the camera viewfinder, select **Menu** > **Media** > **Camera**.

If **Video** is selected as the default mode, select **Options** > **Still image**.

To zoom in or out, press the volume key up or down, or scroll left or right.

To take up to four photos in quick succession, select **Options** > **Img. sequence on**. The higher the resolution, the fewer photos you can take sequentially.

2. To take a photo, press the camera key, or select **Capture**.



The phone saves the photo in **Gallery** > **Images** unless you set the phone to use the memory card for saving the photos.

3. To take another photo, press the camera key after the photo saving indicator stops moving. To send the photo as a multimedia message, select **Options** > **Send**.



Tip: To activate the camera, press the camera key.

This device supports an image capture resolution of 1280 x 960 pixels. The image resolution in these materials may appear different.

Camera settings

Select **Menu** > **Media** > **Camera** > **Options** > **Settings**. You can define *Image quality*, *Image size*, *Video clip quality*, *Video clip length*, *Camera sounds*, *Default title*, *Image and video storage*, and *Default mode*. In *Image and video storage* you can select the folder or memory card to save your photos and video clips.

This device supports the following video sizes: SubQCIF (128x96 pixels) and QCIF (176x144 pixels).

■ Video

You can record video clips in .3gp format. Available recording time depends on the video clip length and quality settings.

The length and file size of the clips may vary depending on the selected quality and available memory. To set the quality of your video clips, select **Menu** > *Media* > *Video* > **Options** > *Settings* > *Image quality* > *High*, *Normal* or *Basic*.

To select the file size limit, select **Menu** > *Media* > *Video* > **Options** > *Settings* > *Video clip length*. *Default* means that the file size is limited so that it fits into a multimedia message (multimedia message size can vary among devices). *Maximum* means that all available memory is used. Available memory depends on where the video clip is stored.

Record a video clip

Select **Menu** > *Media* > *Video* > *Record*. You can also press and hold the camera key. To pause the recording, select *Pause*; to resume the recording, select *Continue*. To stop the recording, select *Stop*. The phone saves the recording in *Gallery* > *Video clips*. To change the folder for saving the recordings, see "Camera settings" p. 48.

To zoom in or out, press the volume key up or down, or scroll left and right.

Send a video clip

Select **Menu** > *Media* > *Media player* > *Open Gallery* > *Video clips*. Scroll to the video clip you want to send and select **Options** > *Send*. Select the format you want to use when sending the video clip, and select Send.

■ Media player

With the media player you can view, play, and download files, such as images, audio, video, and animated images. You can also view compatible streaming videos from a network server (network service).

Select **Menu** > *Media* > *Media player* > *Open gallery*, *Bookmarks*, *Go to address*, or *Media downloads*.

Progressive download

Progressive download allows you to watch a video while it is being downloaded and saved in the background. Playback starts immediately when enough data has been buffered.

Select **Menu** > *Media* > *Media player* > *Open gallery*, *Bookmarks*, *Go to address*, or *Media downloads*.

To learn more about accessing videos, see "[Download content](#)" p. [xiii](#).

Set up the phone for a streaming service

You may receive the configuration settings required for streaming as a configuration message from the network operator or service provider. See "[Configuration settings service](#)" p. [xiii](#). You can also enter the settings manually. See "[Configuration](#)" p. [43](#).

To activate the settings, do the following:

1. Select **Menu** > **Media** > **Media player** > **Streaming settings** > **Configuration**. Only the configurations that support streaming are shown
2. Select a service provider, **Default**, or **Personal configuration** for streaming.
3. Select **Account** and a streaming service account contained in the active configuration settings.




 
■ Music player


Your phone includes a music player for listening to music tracks, recordings, or other .mp3, .mp4, or .aac format sound files that you have transferred to the phone with the

Nokia Audio Manager application. .mp3 and .aac format files are stored in the memory card or in the **Gallery** folders. Music files saved in the **Music files** folder and in another location, such as a folder of the memory card, are automatically detected and added to the default track list.



Play the music tracks transferred to the phone

 

1. Select **Menu** > **Media** > **Music player**. The details of the first track on the default track list are shown.


To use the graphical keys , , , or  on the display, scroll left or right to the desired key, and select it.

2. To play a track, scroll to the track that you want, and select .

To adjust the volume level, use the volume keys on the side of the phone.

To skip to the beginning of the next track, select . To skip to the beginning of the previous track, select  twice.

To rewind the current track, select and hold . To fast forward the current track, select and hold . Release the key at the position you want.

3. To stop the playing, select .



Warning: Listen to music at a moderate level.

Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

Music player settings

In the *Music player* menu, the following options may be available:

Play via bluetooth — to make a connection to an audio enhancement using a Bluetooth connection.

Track list — to view all the tracks available on the track list. To play a track, scroll to the desired track, and select **Play**.

Select **Options** > *Refresh all tracks* or *Change track list* to refresh the track list (for example, after adding new tracks to the list) or to change the track list that is shown when you open the *Music player* menu, if several track lists are available in the phone.

Play options > *Random* > *On* — to play the tracks in the track list in random order. Select *Repeat* > *Current track* or *All tracks* to play the

current track or the entire track list repeatedly.

Media equaliser — to open the list of media equalizer sets. See “*Equalizer*” p. 54.

Loudspeaker or *Headset* — to listen to the music player through the loudspeaker or a compatible headset connected to the phone.



Tip: When using a headset, to skip to the next track, press the headset key.

Send — to send the selected file using MMS, Bluetooth wireless technology, or an infrared connection.

Music downloads — to connect to a browser service related to the current track. This function is only available when the address of the service is included in the track.

Memory status — to view the free and used memory capacity.

Radio

The FM radio depends on an antenna other than the wireless device's antenna. A compatible headset or enhancement needs to be attached to the device for the FM radio to function properly.



Warning: Listen to music at a moderate level.

Continuous exposure to high volume may damage your hearing. Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

Select **Menu** > **Media** > **Radio**.

To use the graphical keys ▲, ▼, ◀, or ▶ on the display, scroll left or right to the desired key, and select it.

Save radio channels

1. To start the channel search, select and hold ◀ or ▶. To change the radio frequency in 0.05 MHz steps, briefly press ◀ or ▶.
2. To save the channel to a memory location, 1 to 9, press and hold the corresponding number key. To save the channel to a memory location from 10 to 20, press briefly 1 or 2, and press and hold the desired number key, 0 to 9.
3. Enter the name of the channel, and select **OK**.

Listen to the radio

Select **Menu** > **Media** > **Radio**. To scroll to the desired channel, select ▲ or ▼, or press the headset key. To select a radio channel location, briefly press the corresponding number keys. To adjust the volume, press the volume keys.

Select from the following options:

Switch off — to turn off the radio.

Save station — to enter a channel name and save the new channel.

Visual Radio — to set whether the Visual Radio application is used.

Some radio channels may send text or graphical information that you can view using the Visual Radio application.



Note: This feature may not be available in your product due to your subscription (network service).

Visual Radio settings — to select the options for Visual Radio. To set whether the Visual Radio application starts automatically when you turn on the radio, select **Enable visual service** > **Automatically**.

Stations — to select the list of saved channels. To delete or rename a channel, scroll to the desired channel, and select **Options** > **Delete station** or **Rename**.

Mono output or **Stereo output** — to listen to the radio in monophonic sound or in stereo.

Loudspeaker or **Headset** — to listen to the radio using the loudspeaker or headset. Keep the headset connected to the phone. The lead of the headset functions as the radio antenna.

Set frequency — to enter the frequency of the desired radio channel.

You can normally make a call or answer an incoming call while listening to the radio. During the call, the volume of the radio is muted.

When an application using a packet data or HSCSD connection is sending or receiving data, it may interfere with the radio.




■ Voice recorder



You can record pieces of speech, sound, or an active call, and save them in **Gallery** or a memory card. This is useful when recording a name and phone number to write down later.

The recorder cannot be used when a data call or GPRS connection is active.

Record sound

1. Select **Menu** > **Media** > **Voice recorder**.

To use the graphical keys , , or  on the display, scroll left or right to the desired key, and select it.

2. To start the recording, select . To start the recording during a call, select **Options** > **Record**. While recording a call, all parties to the call hear a faint beeping sound about every 5 seconds. When recording a call, hold the phone in the normal position near to your ear.
3. To end the recording, select . The recording is saved in **Gallery** > **Recordings**.
4. To listen to the latest recording, select **Options** > **Play last recorded**.
5. To send the last recording using infrared, Bluetooth wireless technology, or a multimedia message, select **Options** > **Send last recorded**.

List of recordings

Select **Menu** > **Media** > **Voice recorder** > **Options** > **Recordings list**. The list of folders in the **Gallery** is shown. Open **Recordings** to see the list with recordings. Select **Options**

to select options for files in the *Gallery*. See "Gallery" p. 47.

Define a storage folder

To use another folder than *Recordings* as the default folder in *Gallery*, select **Menu** > *Media* > *Voice recorder* > **Options** > *Select memory*. Scroll to a folder, and select **Set**.

■ Equalizer

You can control the sound quality when using the music player by amplifying or diminishing frequency bands.

Select **Menu** > *Media* > *Equaliser*.

To activate a set, scroll to one of the equalizer sets, and select **Activate**.

To view, edit, or rename a selected set, select **Options** > *View*, *Edit*, or *Rename*. Not all sets can be edited or renamed.

13. Push to talk



Note: This feature may not be available in your product due to your subscription (network service).

Push to talk (PTT) over cellular is a two-way radio service available over a GSM/GPRS cellular network (network service). PTT provides direct voice communication. To connect, press the PTT key.


You can use PTT to have a conversation with one person or with a group of people having compatible devices. When your call is connected, the people you are calling do not have to answer the phone. The participants should confirm the reception of any communication where appropriate, as there is no other confirmation whether the recipients have heard the call.


To check availability and costs, and to subscribe to the service, contact your network operator or service provider. Roaming services may be more limited than for normal calls. Before you can use the PTT service, you must define the required PTT

service settings. See ["PTT settings"](#) p. 59.

While you are connected to the PTT service, you can use the other functions of the phone. The PTT service is not connected to traditional voice communication; therefore many of the services available for traditional voice calls (for example, voice mailbox) are not available for PTT communication.

■ Connect to the PTT service

To connect to the PTT service, select **Menu > Push to talk > Switch PTT on**.  indicates the PTT connection.

 indicates that the service is temporarily unavailable. The phone automatically tries to reconnect to the service until you disconnect from the PTT service. If you have added channels to the phone, you are automatically joined to the active channels, and if you have selected a contact, contact groups, or channel as the default action for the PTT key, then the name of the selected item is displayed in the standby mode.

To disconnect from the PTT service, select *Switch PTT off*.

■ Make and receive a PTT call



Set the phone to use the loudspeaker or earpiece for PTT communication. When the earpiece is selected, you can use the phone normally, by holding it to your ear.





Warning: Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

When connected to the PTT service, you can make or receive channel calls, group calls, or one-to-one calls. One-to-one calls are calls you make to only one person.

Press and hold the PTT key the entire time you are talking, and hold the phone in front of you so that you can see the display. When you are finished, release the PTT key. Talking is allowed on a firstcome, firstserved basis. When someone stops talking, the first person to press the PTT key can talk next.

To check the login status of your contacts, select **Menu** > *Push to talk* > *Contacts list*. This service depends on your network operator or service provider and is only available for subscribed contacts. , , or

 indicate that the contact is available, not logged into the PTT service, or unknown.  indicates that the contact does not want to be disturbed. You cannot call the contact, but you can send a callback request.

To subscribe a contact, select **Options** > *Subscribe contact*, or if one or more contacts are marked, select *Subscribe marked*.

Make a channel or a group call

To make a call to a channel, select *Channel list* in the PTT menu, scroll to the desired channel, and press the PTT key.

To make a group call from *Contacts*, the recipients must be connected to the PTT service. Select **Menu** > *Contacts* > *Groups*, scroll to the desired group, and press the PTT key.

Make a one-to-one call

To start a one-to-one call from the list of contacts to which you added the PTT address, select *Contacts list*. Scroll to a contact, and press the PTT key.

You can also select the contact from *Contacts*.

To start a one-to-one call from the list of PTT channels, select *Channel list*, and scroll to the desired channel. Select **Members**, scroll to the desired contact, and press the PTT key.

To start a one-to-one call from the list of callback requests you have received, select *Callback inbox*. Scroll to the desired contact, and press the PTT key.

Make a PTT call to multiple recipients

You can select multiple PTT contacts from the contact list. The recipients receive an incoming call and must accept the call to participate.

Select **Menu** > *Push to talk* > *Contacts list*, and mark the desired contacts. To make the call, press the PTT key. The contacts who accept the call are shown.

Receive a PTT call

A short tone notifies you of an incoming PTT call. Information such as the channel name or the nickname (network service) of the caller is displayed.

If you have set the phone to first notify you of one-to-one calls, accept or reject the call.

If you press the PTT key to try to respond to a call while another member is talking, you hear a tone, and *Queuing* is displayed as long as you press the PTT key. Press and hold the PTT key, and wait for the other person to finish; then you can talk.

■ Callback requests

If you make a one-to-one call and do not get a response, you can send a request for the person to call you back.

Send a callback request

You can send a callback request in the following ways:

- To send a callback request from the contacts list in the *Push to talk* menu, select *Contacts list*. Scroll to a contact, and select **Options** > *Send callback*.
- To send a callback request from *Contacts*, search for the desired contact, select **Details**, scroll to the PTT address, and select **Options** > *Send callback*.
- To send a callback request from the channel list in the *Push to talk* menu, select *Channel list*, and scroll to the desired channel. Select **Members**, scroll to the desired contact, and select **Options** > *Send callback*.

- To send a callback request from the callback request list in the *Push to talk* menu, select *Callback inbox*. Scroll to a contact, and select **Options** > *Send callback*.

Respond to a callback request

When you receive a callback request, *Callback request received* is shown in the standby mode. Select **View**. The list of contacts who have sent you callback requests is shown.

To make a one-to-one call, press the PTT key.

To send a call request back to the sender, select **Options** > *Send callback*.

To delete the request, select **Delete**.

To view the sender's PTT address, select **View**.

To save a new contact or to add the PTT address to a contact, select **Options** > *Save as* or *Add to contact*.

■ Add a one-to-one contact

You can save the names of persons to whom you often make one-to-one calls in the following ways:

- To add a PTT address to a name in *Contacts*, search for the desired contact, and select **Details** > **Options** > *Add detail* > *Push to talk address*.
- To add a contact to the PTT contacts list, select **Menu** > *Push to talk* > *Contacts list* > **Options** > *Add contact*.
- To add a contact from the channel list, connect to the PTT service, select *Channel list*, and scroll to the desired channel. Select **Members**, scroll to the member whose contact information you want to save, and select **Options**. To add a new contact, select *Save as*. To add a PTT address to a name in *Contacts*, select *Add to contact*.

■ PTT channels

When you call a channel, all members joined to the channel hear the call simultaneously.

There are three types of PTT channels:

- *Provisioned channel* — A permanent channel is created by the service provider.
- *Public channel* — Every channel member can invite other persons.

- *Private channel* — Only persons who receive an invitation from the channel creator can join in.

Add a channel

To add a public or private channel, select **Menu** > *Push to talk* > *Add channel*, and edit the settings in the form fields:

Channel status: — Select *Active* or *Inactive*.

Nickname in channel: — Enter your nickname for the channel.

Channel security: — Select *Public channel* or *Private channel*.

To send an invitation to the group, select **Yes** when the phone requests it. You can send the invitation using a text message or infrared.

To add a channel by entering the channel address manually, select **Menu** > *Push to talk* > *Add channel* > **Options** > *Edit address manually*. Enter the channel address provided by your service provider.

Receive an invitation

When you receive an invitation to a group, *Channel invitation received*: is displayed.

1. To view the contact who sent the invitation and the channel address if the group is not a private channel, select **View**.

2. To add the channel to your phone, select **Save**.
3. To set the status for the channel, select *Active* or *Inactive*.

To reject the invitation, select **View** > **Discard** > **Yes**.

■ PTT settings

There are two kinds of PTT settings: settings for connecting to the service and settings for use.

You may receive the settings for connecting to the service from your network operator or service provider. See "[Configuration settings service](#)" p. xiii. You can enter the settings manually. See "[Configuration](#)" p. 43.

To select the settings for connecting to the service, select **Menu** > *Push to talk* > *Configuration sett.* and from the following options:

Configuration — to select a service provider, *Default*, or *Personal configuration* for PTT service. Only the configurations that support the PTT service are shown.

Account — to select a PTT service account in the active configuration settings.

You can also select from the following options: *Push to talk user name*, *Default nickname*, *Push to talk password*, *Domain*, and *Server address*.

To edit the PTT settings for use, select **Menu** > *Push to talk* > *Push to talk settings* and from the following options:

1 to 1 calls > *On* — to set the phone to allow the reception of one-to-one calls. To make but not receive one-to-one calls, select *Off*. The service provider may offer some services that override these settings. To set the phone to first notify you of incoming one-to-one calls with a ringing tone, select *Notify*.

PTT key default function — to select the default action of the PTT key. You can set the key to open *Contacts list* or *Channel list*, or to make a PTT call to a selected contact, channel, or group.

Show my login status > *Yes* — to enable the sending of the login status.

PTT status in startup > *Yes* or *Ask first* — to set the phone to automatically connect to the PTT service when you switch on the phone.

Push to talk when abroad — to switch the PTT service on or off when the phone is used outside of the home network.

Send my PTT address > *No* — to hide your PTT address from calls.

14. Organizer



■ Alarm clock

You can set the phone to alarm at a desired time. Select **Menu** > *Organiser* > *Alarm clock*.

To set the alarm, select *Alarm time*, enter the alarm time, and select **OK**. To change the alarm time when the alarm time is set, select *On*.

To set the phone to alert you on selected days of the week, select *Repeat alarm*.

To select the alarm tone or set a radio channel as the alarm tone, select *Alarm tone*. If you select the radio as an alarm tone, connect the headset to the phone. The phone uses the last channel you listened to as the alarm, and the alarm plays through the loudspeaker. If you remove the headset or switch off the phone, the default alarm tone replaces the radio.

To set a snooze time-out, select *Snooze time-out* and the time.

Stop the alarm

The phone sounds an alert tone, and flashes *Alarm!* and the current time on the display, even if the phone was switched off. To stop the alarm,

select **Stop**. If you let the phone continue to sound the alarm for a minute or select **Snooze**, the alarm stops for the time you set in *Snooze time-out*, and then resumes.

If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone. If you select **Stop**, the device asks whether you want to activate the device for calls. Select **No** to switch off the device or **Yes** to make and receive calls. Do not select **Yes** when wireless phone use may cause interference or danger.






■ Calendar

Select **Menu** > *Organiser* > *Calendar*.


The current day is indicated by a frame in the month view. If there are any notes set for the day, the day is in bold type. To view the day notes, select **View**. To view a week, select **Options** > *Week view*. To delete all notes in the calendar, select the month or week view, and select **Options** > *Delete all notes*.

Other options for the calendar day view can make a note; delete, edit, move, or repeat a note; copy a note to another day; send a note with Bluetooth or Infrared technology; or send a note to the calendar of another compatible phone as a text message or multimedia message. In *Settings* you can set the date, time, time zone, date or time format, date separator, default view, or the first day of the week. In *Auto-delete notes* you can set the phone to delete old notes automatically after a specified time.

Make a calendar note

Select **Menu** > *Organiser* > *Calendar*. Scroll to the date you want, select **Options** > *Make a note* and one of the following note types:  *Meeting*,  *Call*,  *Birthday*,  *Memo*, or  *Reminder*. Fill in the fields for the note.

Note alarm

The phone beeps and displays the note. With a call note  on the display, to call the displayed number, press the call key. To stop the alarm and to view the note, select **View**. To stop the alarm for 10 minutes, select **Snooze**.

To stop the alarm without viewing the note, select **Exit**.

To-do list

To save a note for a task that you must do, select **Menu** > *Organiser* > *To-do list*.

To make a note if no note is added, select **Add**; otherwise, select **Options** > *Add*. Write the note, select **Save** and the priority, and set the deadline and alarm for the note.

To view a note, scroll to it, and select **View**.

You can also select an option to delete the selected note and delete all the notes that you have marked as done. You can sort the notes by priority or by deadline, send a note to another phone as a text message or a multimedia message, save a note as a calendar note, or access the calendar.

While viewing a note, you can also select an option to edit the deadline or priority for the note, or mark the note as done.

Notes

To write and send notes, select **Menu** > *Organiser* > *Notes*.

To make a note if no note is added, select **Add**; otherwise, select **Options** > *Make a note*. Write the note, and select **Save**.

Other options include deleting and editing a note. While editing a note, you can also exit the text editor without saving the changes. You can send the note to compatible devices through infrared, Bluetooth wireless technology, text message, or a multimedia message. If the note is too long to be sent as a text message, the phone asks you to delete the appropriate number of characters from your note.

■ Calculator

The calculator in your phone adds, subtracts, multiplies, divides, calculates the square and the square root, and converts currency values.



Note: This calculator has limited accuracy and is designed for simple calculations.

Select **Menu** > *Organiser* > *Calculator*. When 0 is displayed, enter the first number in the calculation. Press # for a decimal point. Select **Options** > *Add, Subtract, Multiply, Divide, Square, Square root, or Change sign*. Enter the second number. For a total, select **Equals**. To start a new calculation, first select and hold **Clear**.

Convert currency

Select **Menu** > *Organiser* > *Calculator*. To save the exchange rate, select **Options** > *Exchange rate*. Select either of the displayed options. Enter the exchange rate, press # for a decimal point, and select **OK**. The exchange rate remains in the memory until you replace it with another one. To perform the currency conversion, enter the amount to be converted, and select **Options** > *In domestic* or *In foreign*.



Note: When you change base currency, you must enter the new rates because all previously set exchange rates are cleared.

■ Countdown timer

Select **Menu** > *Organiser* > *Timer*. Enter the alarm time in hours, minutes, and seconds, and select **OK**. If you wish, write your own note text that is displayed when the time expires. To start the countdown timer, select **Start**. To change the countdown time, select *Change time*. To stop the timer, select *Stop timer*.

If the alarm time is reached when the phone is in the standby mode, the phone sounds a tone and flashes the note text if it is set or

Countdown time up. To stop the alarm, press any key. If no key is pressed, the alarm automatically stops within 30 seconds. To stop the alarm and delete the note text, select **Exit**. To restart the countdown timer, select **Restart**.

■ Stopwatch

You can measure time, take intermediate times, or take lap times using the stopwatch. During timing, the other functions of the phone can be used. To set the stopwatch timing in the background, press the end key.

Using the stopwatch or allowing it to run in the background when using other features increases the demand on battery power and reduces the battery life.

Select **Menu** > *Organiser* > *Stopwatch* and from the following options:

Split timing — to take intermediate times. To start the time observation, select **Start**. Select **Split** every time that you want to take an intermediate time. To stop the time observation, select **Stop**.

To save the measured time, select **Save**.

To start the time observation again, select **Options** > *Start*. The new time is added to the previous time. To reset the time without saving it, select *Reset*.

To set the stopwatch timing in the background, press the end key.

Lap timing — to take lap times. To set the stopwatch timing in the background, press the end key.

Continue — to view the timing that you have set in the background.

Show last — to view the most recently measured time if the stopwatch is not reset.

View times or *Delete times* — to view or delete the saved times.

15. Applications



■ Games

Besides the pre-installed games, the microSD card may contain games.

Launch a game

Select **Menu** > *Applications* > *Games*. Scroll to the desired game, and select **Open**, or press the call key.

For options related to a game, see "Application options" p. 65.

Game downloads

Select **Menu** > *Applications* > **Options** > *Downloads* > *Game downloads*. The list of available bookmarks is shown; see "Bookmarks" p. 69.



Important: Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

Game settings

To set sounds, lights, and shakes for the game, select **Menu** >

Applications > **Options** > *App. settings*.

■ Collection

Your phone software includes some Java applications.

Launch an application

Select **Menu** > *Applications* > *Collection*. Scroll to an application, and select **Open**, or press the call key.

Application options

Delete — to delete the application from the phone.

Details — to give additional information about the application.

Update version — to check if a new version of the application is available for download from *Web* (network service).

Web page — to provide further information or additional data for the application from an Internet page (network service). It is only shown if an Internet address has been provided with the application.

Application access — to restrict the application from accessing the network. Different categories are shown. Select in each category one of the available permissions.

Download an application

Your phone supports J2ME™ Java applications. Make sure that the application is compatible with your phone before downloading it.



Important: Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

You can download new Java applications in different ways:

- Select **Menu > Applications > Options > Downloads > App. downloads**, and the list of available bookmarks is shown. See "**Bookmarks**" p. 69.

For the availability of different services, pricing, and tariffs, contact your service provider.

- Use the game download function. See "**Game downloads**" p. 65.
- Use the Nokia Application Installer from Nokia PC Suite to download the applications to your phone.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.



16. Web

You can access various mobile Internet services with your phone browser.



Important: Use only services that you trust and that offer adequate security and protection against harmful software.

Check the availability of these services, pricing, tariffs, and instructions with your service provider.

With the phone browser you can view the services that use wireless markup language (WML) or extensible hypertext markup language (XHTML) on their pages. Appearance may vary due to screen size. You may not be able to view all details of the Internet pages.

■ Basic steps to access and use services

1. Save the service settings that are required to access the service that you want to use. See "[Set up browsing](#)" p. 67.
2. Make a connection to the service. See "[Connect to a service](#)" p. 67.

3. Start browsing the pages of the service. See "[Browse pages](#)" p. 68.
4. When you finish browsing, end the connection to the service. To disconnect, see "[Options while browsing](#)" p. 68.

■ Set up browsing

You may receive the configuration settings required for browsing as a configuration message from the network operator or service provider that offers the service that you want to use. See "[Configuration settings service](#)" p. xiii. You can also enter all the configuration settings manually. See "[Configuration](#)" p. 43.

■ Connect to a service

First, ensure that the correct configuration settings of the service that you want to use are activated.

1. To select the settings for connecting to the service, select **Menu > Web > Settings > Configuration settings**.

2. Select **Configuration**. Only the configurations that support browsing service are shown. Select a service provider, **Default**, or **Personal configuration** for browsing. See "Set up browsing" p. 67.
3. Select **Account** and a browsing service account contained in the active configuration settings.
4. Select **Display terminal window > Yes** to perform manual user authentication for intranet connections.

 

Secondly, make a connection to the service in one of the following ways:

- Select **Menu > Web > Home**; or in the standby mode, press and hold 0.
- To select a bookmark of the service, select **Menu > Web > Bookmarks**.
- To select the last URL, select **Menu > Web > Last web address**.
- To enter the address of the service, select **Menu > Web > Go to address**. Enter the address of the service, and select **OK**.

■ Browse pages

After you make a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services.

Follow the text guides on the phone display. For more information, contact your service provider.

If packet data is selected as the data bearer,  is shown on the top left of the display during browsing. If you receive a call or a text message, or make a call during a packet data connection,  is shown on the top right of the display to indicate that the packet data connection is suspended (on hold). After a call the phone tries to reconnect the packet data connection.

Browse with phone keys

To browse through the page, scroll in any direction.

To select a highlighted item, press the call key, or select **Select**.

To enter letters and numbers, press the 0 to 9 keys. To enter special characters, press *.

Options while browsing

Select from the following options:

Home — to return to your start page.

Shortcuts — to open a new list of options that are specific to the page. This option is only available if the page contains shortcuts.

Add bookmark — to save the page as a bookmark.

Bookmarks — to access the list of bookmarks. See "**Bookmarks**" p. 69.

Page options — to show the list of options for the active page.

History — to get a list showing the last visited URLs.

Other options — to show a list of other options.

Reload — to reload and update the current page.

Quit — to disconnect from a service.

The service provider may also offer other options.

Direct calling

The browser supports functions that you can access while browsing. You can make a phone call, send DTMF tones while a voice call is in progress, and save a name and a phone number from a page.

■ Bookmarks

You can save page addresses as bookmarks in the phone memory.

1. While browsing, select **Options** > **Bookmarks**; or in the standby mode, select **Menu** > **Web** > **Bookmarks**.
2. Scroll to a bookmark, and select it, or press the call key to make a connection to the page associated with the bookmark.

3. Select **Options** to view, edit, delete, or send the bookmark; to create a new bookmark; or to save the bookmark to a folder.

Your device may have some bookmarks loaded for sites not affiliated with Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

Receive a bookmark

When you have received a bookmark that is sent as a bookmark,

1 bookmark received is displayed. To save the bookmark, select **Show** > **Save**.

■ Appearance settings

While browsing, select **Options** > **Other options** > **Appearance settings**, or in the standby mode, select **Menu** > **Web** > **Settings** > **Appearance settings** and from the following options:

Text wrapping > **On** — to set the text to continue on the next line on the display. If you select **Off**, the text is abbreviated.

Font size > **Extra small**, **Small**, or **Medium** — to set the font size.

Show images > *No* — to hide pictures on the page. This can speed up the browsing of pages that contain a lot of pictures.

Alerts > *Alert for unsecure conn.* > *Yes* — to set the phone to alert when a secure connection changes to an unsecure one during browsing.

Alerts > *Alert for unsecure items* > *Yes* — to set the phone to alert when a secure page contains an unsecure item. These alerts do not guarantee a secure connection. For more information, see "[Browser security](#)" p. 72.

Character encoding > *Content encoding* — to select the encoding for the browser page content.

Character encoding > *Unicode (UTF-8) web add.* > *On* — to set the phone to send a URL as a UTF-8 encoding. You may need this setting when you access a Web page created in foreign language.

Screen size > *Full* or *Small* — to set the screen layout.

JavaScript > *Enable* — to enable the Java scripts.

■ Security settings

Cookies

A cookie is data that a site saves in the cache memory of your phone.

Cookies are saved until you clear the cache memory. See "[Cache memory](#)" p. 71.

While browsing, select **Options** > *Other options* > *Security* > *Cookie settings*; or in the standby mode, select **Menu** > *Web* > *Settings* > *Security settings* > *Cookies*. To allow or prevent the phone from receiving cookies, select *Allow* or *Reject*.

Scripts over secure connection

You can select whether to allow the running of scripts from a secure page. The phone supports WML scripts.

While browsing, to allow the scripts, select **Options** > *Other options* > *Security* > *WMLScript settings*; or in the standby mode, select **Menu** > *Web* > *Settings* > *Security settings* > *WMLScripts over secure connection* > *Allow*.

■ Download settings

To automatically save all downloaded files in *Gallery*, select **Menu** > *Web* > *Settings* > *Downloading settings* > *Automatic saving* > *On*.

■ Service inbox

The phone is able to receive service messages (pushed messages) sent by your service provider (network service). Service messages are notifications (for example, news headlines), and they may contain a text message or an address of a service.

To access the *Service inbox* in the standby mode, when you have received a service message, select **Show**. If you select **Exit**, the message is moved to the *Service inbox*. To access the *Service inbox* later, select **Menu** > *Web* > *Service inbox*.

To access the *Service inbox* while browsing, select **Options** > *Other options* > *Service inbox*. Scroll to the message you want, and to activate the browser and download the marked content, select **Retrieve**. To display detailed information on the service notification or to delete the message, select **Options** > *Details* or *Delete*.

Service inbox settings

Select **Menu** > *Web* > *Settings* > *Service inbox settings*.

To set whether you want to receive service messages, select *Service messages* > *On* or *Off*.

To set the phone to receive service messages only from content authors approved by the service provider, select *Message filter* > *On*. To view the list of the approved content authors, select *Trusted channels*.

To set the phone to automatically activate the browser from the standby mode when the phone has received a service message, select *Automatic connection* > *On*. If you select *Off*, the phone activates the browser only after you select *Retrieve* when the phone has received a service message.

■ Cache memory

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed is stored in the cache.

To empty the cache while browsing, select **Options** > *Other options* > *Clear the cache*; in the standby mode, select **Menu** > *Web* > *Clear the cache*.

■ Browser security

Security features may be required for some services, such as online banking or shopping. For such connections you need security certificates and possibly a security module, which may be available on your SIM card. For more information, contact your service provider.

Security module

The security module improves security services for applications requiring a browser connection, and allows you to use a digital signature. The security module may contain certificates as well as private and public keys. The certificates are saved in the security module by the service provider.

To view or change the security module settings, select **Menu** > *Settings* > *Security* > *Security module settings*.

Certificates




Important: Even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate

does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available. Certificates have a restricted lifetime. If Expired certificate or Certificate not valid yet is shown even if the certificate should be valid, check that the current date and time in your device are correct.

Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

There are three kinds of certificates: server certificates, authority certificates, and user certificates. You may receive these certificates from your service provider. Authority certificates and user certificates may also be saved in the security module by the service provider.

To view the list of the authority or user certificates downloaded into your phone, select **Menu** > *Settings* > *Security* > *Authority certificates* or *User certificates*.


 is displayed during a connection, if the data transmission between the phone and the content server is encrypted.

The security icon does not indicate that the data transmission between the gateway and the content server (or place where the requested resource is stored) is secure. The service provider secures the data transmission between the gateway and the content server.

Digital signature

You can make digital signatures with your phone if your SIM card has a security module. Using the digital signature can be the same as signing your name to a paper bill, contract, or other document.

To make a digital signature, select a link on a page, for example, the title of the book you want to buy and its price. The text to sign is shown, which may include the amount and date.

Check that the header text is **Read** and that the digital signature icon  is shown.

If the digital signature icon does not appear, there is a security breach, and you should not enter any personal data such as your signing PIN.

To sign the text, read all of the text first, and select **Sign**.

The text may not fit within a single screen. Therefore, make sure to scroll through and read all of the text before signing.

Select the user certificate you want to use. Enter the signing PIN (see **"Access codes"** p. xii), and select **OK**. The digital signature icon disappears, and the service may display a confirmation of your purchase.

17. SIM services



Your SIM card may provide additional services. You can access this menu only if it is supported by your SIM card. The name and contents of the menu depend on the available services.



Note: For availability, rates, and information on using SIM services, contact your SIM card vendor, for example, network operator, service provider, or other vendor.

To set the phone to show you the confirmation messages sent between your phone and the network when you are using the SIM services, select **Menu** > *Settings* > *Phone* > *Confirm SIM serv. actions* > *Yes*.

Accessing these services may involve sending messages or making a phone call for which you may be charged.

18. PC connectivity

You can access the Internet when your phone is connected to a compatible PC through an IR, Bluetooth wireless technology, or USB data cable connection. You can use your phone with a variety of PC connectivity and data communications applications.

■ Nokia PC Suite

With Nokia PC Suite you can synchronize contacts, calendar, notes, and to-do notes between your phone and the compatible PC or a remote Internet server (network service). You may find more information and PC Suite on the Nokia Web site at www.nokia-asia.com/6151/support.

■ EGPRS, HSCSD, CSD, and WCDMA

With your phone you can use the general packet radio service (GPRS), enhanced GPRS (EGPRS), circuit switched data (*GSM data*) services, high speed circuit switched data (HSCSD), and WCDMA packet and circuit switched data services.

For availability and subscription to data services, contact your network operator or service provider.

The use of HSCSD services consumes the phone battery faster than normal voice or data calls. You may need to connect the phone to a charger for the duration of data transfer.

See "Packet data settings" p. 39.

■ Data communication applications

For information on using a data communication application, refer to the documentation provided with it.

Making or answering phone calls during a computer connection is not recommended, as it might disrupt the operation.

For better performance during data calls, place the phone on a stationary surface with the keypad facing downward. Do not move the phone by holding it in your hand during a data call.

19. Battery information

■ Charging and discharging

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger and then disconnect and reconnect it to start the charging.

Unplug the charger from the electrical plug and the device when not in use. Do not leave fully a charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery

performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from an authorized Nokia dealer, look for the Nokia Original Enhancements logo on the packaging and inspect the hologram label using the following steps:

Successful completion of the four steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic original Nokia battery, you should refrain from using it, and take it to the nearest authorized Nokia service point or dealer for assistance. Your authorized Nokia service point or dealer will inspect the battery for authenticity. If authenticity cannot be verified, return the battery to the place of purchase.

Authenticate hologram


1. When looking at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.



2. When you angle the hologram left, right, down, and up, you should see 1, 2, 3, and 4 dots on each side respectively.



3. Scratch the side of the label to reveal a 20-digit code, for example, 12345678919876543210. Turn the battery so that the numbers are facing upwards. The 20-digit code reads starting from the number at the top row followed by the bottom row.

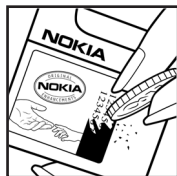

4. Confirm that the 20-digit code is valid by following the instructions at www.nokiaoriginals.com/check.



To create a text message enter the 20-digit code, for example, 12345678919876543210, and send to +44 7786 200276.

To create a text message,

- For countries in Asia Pacific, excluding India: Enter the 20-digit code, for example, 12345678919876543210, and send to +61 427151515.
- For India only: Enter Battery followed by the 20-digit battery code, for example, Battery 12345678919876543210, and send to 5555.

National and international operator charges will apply.

You should receive a message indicating whether the code can be authenticated.

If you need assistance confirming the battery code, contact your local Nokia Care Centres listed at www.nokia-asia.com/carecentrelocator.

What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram on the label is an authentic Nokia battery, please do not use the battery. Take it to the nearest authorized Nokia service point or dealer for assistance. The use of a battery that is not approved by the manufacturer may be dangerous and may result in poor performance and damage to your device and its enhancements. It may also invalidate any approval or warranty applying to the device.

To find out more about original Nokia batteries, visit www.nokiaoriginals.com/battery.

20. Genuine Enhancements

A new extensive range of enhancements is available for your phone. Select the enhancements which accommodate your specific communication needs.



Some of the enhancements are described in detail below.

For availability of the enhancements, please check with your local dealer.

A few practical rules about accessories and enhancements.

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.

Use only batteries, chargers and enhancements approved by the phone manufacturer. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

■ Battery

Type	GSM Talktime*	GSM Standby time*
BP-6M	up to 4.5 hours	up to 250 hours

*Variation in operation times may occur depending on SIM card, network and usage settings, usage style and environments. Use of FM radio and integrated hands-free will affect talktime and standby.

■ Wireless Headset

Nokia Bluetooth Headset BH-200

Equipped with a comfortable earhook and convenient control buttons, the Nokia Bluetooth Headset BH-200 is a great performer and easy to use, connecting to your phone via Bluetooth wireless technology. Simplicity and performance: two hallmarks of great design.

Nokia Bluetooth Headset BH-700

The lightweight elegance of the Nokia Bluetooth Headset BH-700 complements its simplicity and convenience perfectly. With an optional ear loop for a better fit and a strap to hold the headset when not in use, this headset lets you fully control your calls while keeping your sense of style.

■ Car Solutions

Nokia Advanced Car Kit CK-7W

Handsfree Communication The Nokia Advanced Car Kit CK-7W offers convenient handsfree communication while on the road. It connects to your compatible mobile phone wirelessly using Bluetooth wireless technology or it can be attached to a compatible mobile holder via Pop-Port™ interface extending the range of compatible mobile phones.

■ Data

Nokia Connectivity Cable CA-53

A connectivity cable for connecting a compatible PC and a Nokia phone. It enables data transfer and synchronization with a compatible PC, e.g. calendar, phonebook, notes, to-do list — depending on Nokia PC Suite features. Supports USB 2.0 standard and maximum data transfer speeds.

21. Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use a soft, clean, dry cloth to clean any lenses (such as camera, proximity sensor, and light sensor lenses).
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep (such as contacts and calendar notes) before sending your device to a service facility.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

22. Additional safety information

Your device and its enhancements may contain small parts. Keep them out of the reach of small children.

■ Operating environment

Remember to follow any special regulations in force in any area, and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 centimeters (7/8 inches) from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body. To transmit data files or messages, this device requires a quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

■ Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers should do the following:

- Always keep the device more than 15.3 centimeters (6 inches) from the pacemaker
- Not carry the device in a breast pocket

- Hold the device to the ear opposite the pacemaker to minimize the potential for interference.

If you suspect interference, switch off your device, and move the device away.

Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, and air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable

wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

■ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust, or metal powders.

■ Emergency calls



Important: Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

1. If the device is not on, switch it on.
Check for adequate signal strength.
Some networks may require that a valid SIM card is properly inserted in the device.
2. Press the end key as many times as needed to clear the display and ready the device for calls.
3. Enter the official emergency number for your present location. Emergency numbers vary by location.
4. Press the call key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

■ Certification information (SAR)

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 watts/kilogram (W/kg)*. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the device

while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device.

The highest SAR value for this device when tested for use at the ear is 1.02 W/kg.

SAR values may vary depending on national reporting and testing requirements and the network band. Use of device accessories and enhancements may result in different SAR values. Additional SAR information may be provided under product information at www.nokia-asia.com.

* The SAR limit for mobile devices used by the public is 2.0 W/kg averaged over 10 grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions, please look under product information at www.nokia.com.

Index

A

- About your device x
- Access codes xii
- Activation keys 45
- Active standby 7, 33, 35
- Add a channel 59
- Add a one-to-one contact 58
- Additional safety information 82
- Alarm clock 61
- Answer or reject a voice call 12
- Appearance settings 69
- Application options 65
- Applications 65
- Audio messages 22

B

- Barring password xii
- Basic steps to access and use services 67
- Battery 76, 79
 - Installation 1
- Battery information 76
 - Type 79
- Bluetooth 36
- Bluetooth settings 37
- Bluetooth wireless connection 37
- Bluetooth wireless technology 36
- Bookmarks 69
- Browse pages 68
- Browse with phone keys 68
- Browser 67
- Browser security 72
- Business cards 29

C

- Cable
 - USB 41

- Cache memory 71
- Calculator 63
- Calendar 61
- Call functions 11
- Call key 6
- Callback requests 57
- Calls
 - Diverting 41
 - Ending 11
 - Making 11
 - Missed 31
 - Received 31
 - Settings 41
 - Waiting 12
- Camera 48
- Camera key 6
- Camera settings 48
- Cancel message sending 21
- Car Solutions 80
- Care and maintenance 81
- Certificates 72
- Certification information (SAR) 85
- Charge level 7
- Charge the battery 3
- Charging and discharging 76
- Clock settings 34
- Collection 65
- Configuration 43
- Configuration settings service xiii
- Connect to a service 67
- Connect to the PTT service 55
- Connectivity 36
- Contact information xiii
- Contacts 27
- Convert currency 63
- Cookies 70
- Copyright protection 45

Countdown timer 63
Create an audio message 23

D

Data 80
Data cable
 USB 41
Data communication applications 75
Data transfer 39
Data transfer with a compatible device 40
Date settings 34
Define a storage folder 54
Delete contacts 28
Delete messages 24
Dial numbers 31
Digital rights management 45
Digital signature 73
Direct calling 69
Display 33
Download content xiii
Download settings 70
Downloading
 Applications 66
 Content xiii
 Games 65
 Protected files 45
DTMF tones 12

E

Edit contact details 28
Emergency calls 84
End key 6
Ending a call 12
Enhancement settings 43
Enhancements xi
Equalizer 54

F

Flash messages 22

Flight query 43
FM radio 51
Folders 22
Font size 34
For your safety ix
Format memory card 47

G

Gallery 47
Game settings 65
Games 65
General 24
General information xii
Genuine Enhancements 79
Get started 1
Groups 29

I

Image size 25
Indicators 8
Info messages 23
Infrared 38
IR port 6

K

Keyguard 9
Keypad lock 9
Keys and parts 6

L

Launch a game 65
Launch an application 65
Left selection key 35
List of recordings 53
Listen to the radio 52
Locking the keypad 9
Log 31
Loudspeaker 6

M

- Maintenance service xiii
- Make a calendar note 62
- Make a channel or a group call 56
- Make a one-to-one call 56
- Make a PTT call to multiple recipients 57
- Make and receive a PTT call 56
- Media 48
 - Media player 49
- Memory card 2
- Memory card slot 6
- Memory full 21
- Message center number 17
- Message settings 24
- Messages
 - Audio 22
 - Counter 31
 - Flash 22
 - Multimedia 19
 - SMS e-mail 17
 - Templates 22
 - Text 17
- Messaging 17
- Move or copy contacts 28
- Multifunction key 6
- Multimedia message 25
- Multimedia messages 19
- Music player 50
- Music player settings 51
- Mute 12
- My numbers 30
- My shortcuts 35

N

- Navigate the menus 16
- Navigation key 35
- Network services x
- Nokia Advanced Car Kit CK-7W 80
- Nokia battery authentication guidelines 77

- Nokia Bluetooth Headset BH-200 79
- Nokia Bluetooth Headset BH-700 80
- Nokia Connectivity Cable CA-53 80
- Nokia contact information xiii
- Nokia support xiii
- Normal operating position 5
- Note alarm 62
- Notes 62

O

- On/off switching 4
- Operating environment 82
- Operator logo 34
- Operator menu 46
- Options during a voice call 12
- Options while browsing 68
- Organizer 61

P

- Packet data 38, 75
- Packet data connection 39
- Packet data settings 39
- PC connectivity 75
- PC Suite 75
- Personalise 32, 33
- Phone settings 42
- PIN code xii
- Play the music tracks transferred to the phone 50
- Plug and play service 4
- Power on/off 4
- Power saver 8, 34
- Predictive text input 14
- Profiles 32
- Progressive download 49
- Protected files 45
- PTT 55
- PTT channels 58
- PTT settings 59

PUK code xii
Push to talk. See PTT

R

Radio 51
Read and reply to a multimedia message 21
Read and reply to an SMS message 18
Receive a bookmark 69
Receive a flash message 22
Receive a PTT call 57
Receive an audio message 23
Receive an invitation 59
Record a video clip 49
Record sound 53
Repair service xiii
Respond to a callback request 58
Restore factory settings 45
Right selection key 35
Ringing tones 12, 32

S

Safety
 Emergency calls 84
 Explosive environments 83
 Hearing aids 83
 Medical devices 82
 Operating environment 82
 Pacemakers 82
 Vehicles 83
Save names and phone numbers 27
Save numbers and text items 27
Save radio channels 52
Screen saver 34
Scripts over secure connection 70
Scroll key 6
Search for a contact 27

Security code xii
Security module 72
Security settings 44, 70
Send a callback request 57
Send a message 20
Send a video clip 49
Service and my numbers 30
Service commands 23
Service inbox 71
Service inbox settings 71
Set the time, time zone, and date 4
Set up a Bluetooth connection 37
Set up browsing 67
Settings 14, 29, 32
 Clock 34
 Date 34
 Multimedia 25
 Time 34
Shared memory xi
Signal strength 7
SIM card 1
SIM messages 18
SIM services 74
Sleep mode 34
SMS e-mail 18
Special characters 15
Speed dialing 11, 29
Standby mode 7, 33
Standby mode shortcuts 8
Standby settings 33
Start up without a SIM card 4
Stop the alarm 61
Stopwatch 64
Streaming service 50
Support xiii
Synchronize 40
 From PC 40
 From server 40

T

Take a photo 48

Templates 18

Text

Predictive 14

Traditional 15

Writing 14

Text message and SMS e-mail 24

Text messages 17

Themes 32

Time settings 34

To-do list 62

Tones 33

Traditional text input 15

U

Unlocking the keypad 10

V

Vibrating alert 33

Video 49

Voice commands 35

Voice dialing 11

Voice messages 23

Voice recorder 53

Volume keys 6

W

Wallpaper 32, 33

Web 67

Wireless Headset 79

Write a flash message 22

Write and send SMS messages 17

Writing language 14

Y

Your phone 6