



■ Addendum to Nokia Wireless Image Headset HS-13W User Guide



Restart the headset

If the headset does not respond to joystick or power key presses, you may need to restart it. To restart the headset, press the power key for about 10 seconds. Restarting the headset resets the time and date to their factory settings. All other information, including Bluetooth pairing and contact information, remains the same.

9246004

Issue 1

Copyright © Nokia. All rights reserved.

