

# User's Guide for Nokia 7250i

---

# List of menu functions

## 1. Messages

1. Text messages
2. Multimedia msgs.
3. Chat
4. Voice messages
5. Info messages
6. Message settings
7. Service commands



## 2. Call register

1. Missed calls
2. Received calls
3. Dialed numbers
4. Delete recent call lists
5. Call duration
6. Call costs
7. GPRS data counter
8. GPRS connection timer



## 3. Contacts

1. Search
2. Add contact
3. Delete
4. Copy
5. Settings
6. Speed dials
7. Info numbers<sup>1</sup>



## 8. Service numbers<sup>1</sup>

9. My numbers<sup>2</sup>
10. Caller groups<sup>2</sup>

## 4. Profiles

1. General
2. Silent
3. Meeting
4. Outdoor
5. Pager



## 5. Settings

1. Personal shortcuts
2. Time and date settings
3. Call settings
4. Phone settings
5. Display settings
6. Tone settings
7. Enhancement settings<sup>3</sup>
8. Security settings
9. Restore factory settings



## 6. Radio



## 7. Camera

1. Standard photo
2. Portrait photo
3. Night mode
4. Self-timer
5. Settings



- 
1. Shown if supported by your SIM card. For availability, contact your network operator or service provider.
  2. If Info numbers, Service numbers or both are not supported, the number of this menu item changes accordingly.
  3. This menu is shown only if the phone is or has been connected to a compatible enhancement available for the phone.

## 8. Gallery

1. View folders
2. Add folder
3. Delete folder
4. Rename folder
5. Gallery downloads



## 9. Organiser

1. Alarm clock
2. Calendar
3. To-do list



## 10. Games

1. Select game
2. Game downloads
3. Memory
4. Settings



## 11. Applications

1. Select application
2. App. downloads
3. Memory



## 12. Extras

1. Calculator
2. Countdown timer
3. Stopwatch
4. Wallet
5. Synchronisation



## 13. Connectivity

1. Infrared
2. GPRS



## 14. Services

1. Home
2. Bookmarks
3. Download links
4. Service inbox
5. Settings
6. Go to address
7. Clear the cache



## 15. Go to



## 16. SIM services<sup>1</sup>



---

1. Only shown if supported by your SIM card. The name and contents may vary depending on the SIM card.

## DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the product NHL-4jx is in conformity with the provisions of the following Council Directive: 1999/5/EC. A copy of the Declaration of Conformity can be found at [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

Copyright © 2003 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, Xpress-on and Pop-Port are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia tune is a sound mark of Nokia Corporation.

US Patent No 5818437 and other pending patents. T9 text input software Copyright (C) 1997-2003. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

# Contents

<b>FOR YOUR SAFETY .....</b>	<b>x</b>
<b>Network Services .....</b>	<b>xi</b>
<b>About accessories .....</b>	<b>xi</b>
<b>General information .....</b>	<b>xii</b>
Access codes .....	xii
Security code (5 to 10 digits) .....	xii
PIN and PIN2 codes (4 to 8 digits), Module PIN and Signing PIN .....	xii
PUK and PUK2 codes (8 digits) ....	xii
Barring password (4 digits) .....	xiii
Wallet code (4 to 10 digits) .....	xiii
<b>Overview of the functions of the phone .....</b>	<b>xiv</b>
Camera .....	xiv
Multimedia messaging service (MMS) .....	xiv
Polyphonic sound (MIDI) .....	xiv
Java™ applications .....	xv
General Packet Radio Service (GPRS) .....	xv
Over the Air (OTA) settings service .....	xv
Shared memory .....	xvi
<b>1. Your phone .....</b>	<b>1</b>
Keys and connectors .....	1
Standby mode .....	2
Screen saver .....	3
Wallpaper .....	3
Essential indicators in standby mode .....	3
Headset .....	4
Putting on the wrist strap .....	4
<b>2. Getting started .....</b>	<b>5</b>
Installing the SIM card and the battery .....	5
Charging the battery .....	6
Switching the phone on and off ..	7
Keypad lock (Keyguard) .....	7
Changing the covers .....	8
<b>3. Call functions .....</b>	<b>10</b>
Making a call .....	10
Speed dialling a phone number ...	10
Answering or rejecting an incoming call .....	10
Call waiting .....	11
Options during a call .....	11
<b>4. Writing text .....</b>	<b>13</b>
Setting predictive text input on or off .....	13
Using predictive text input .....	13
Writing compound words .....	14
Using traditional text input .....	14
Tips for writing text .....	14
<b>5. Using the menu .....</b>	<b>16</b>
Accessing a menu function .....	16
<b>6. Menu functions .....</b>	<b>17</b>
Messages (Menu 1) .....	17
Text messages (SMS) .....	17
Multimedia messages .....	22
Multimedia messages memory full .....	25
Deleting messages .....	25
Chat .....	25
Voice messages .....	26
Info messages .....	26
Message settings .....	27
Service commands .....	29

Call register (Menu 2).....	29	Organiser (Menu 9).....	51
Recent calls lists .....	30	Alarm clock.....	51
Call counters and call timers.....	30	Calendar.....	52
Contacts (Menu 3).....	31	To-do list .....	53
Selecting settings for contacts....	31	Games (Menu 10).....	54
Saving names and phone numbers (Add name) .....	32	Launching a game .....	54
Searching for a name in contacts.....	33	Memory status for games.....	55
Editing a name, number or text item or changing an image.....	34	Game settings.....	55
Deleting names, numbers and images.....	34	Applications (Menu 11) .....	55
Copying contacts .....	34	Launching an application .....	55
Sending and receiving a business card .....	35	Other options available for an application or application set .....	56
Speed dials.....	35	Downloading an application.....	56
Info numbers and service numbers.....	36	Memory status for applications...	57
My numbers.....	36	Extras (Menu 12) .....	57
Caller groups.....	36	Calculator.....	57
Profiles (Menu 4) .....	37	Countdown timer.....	58
Settings (Menu 5).....	37	Stopwatch.....	59
Personal shortcuts.....	37	Wallet.....	60
Time and date settings.....	38	Synchronisation.....	62
Call settings.....	39	Connectivity (Menu 13).....	64
Phone settings.....	40	Infrared .....	64
Display settings .....	42	GPRS.....	65
Tone settings.....	43	Services (Menu 14) .....	66
Enhancement settings.....	44	Basic steps for accessing and using services.....	66
Security settings .....	44	Setting up the phone for a service.....	67
Restore factory settings.....	45	Making a connection to a service	68
Radio (Menu 6).....	45	Browsing the pages of a service..	68
Tuning a radio channel.....	46	Disconnect from a service.....	69
Using the radio .....	46	Appearance settings of the multi-mode browser.....	70
Camera (Menu 7).....	47	Cookies.....	70
To take a photo.....	47	Bookmarks.....	70
Camera settings .....	48	Downloading .....	71
Gallery (Menu 8) .....	48	Service inbox.....	71
		The cache memory.....	72
		Browser security.....	72
		Go to (Menu 15) .....	74
		SIM services (Menu 16) .....	74

7. PC Connectivity .....	76
PC Suite .....	76
GPRS, HSCSD and CSD .....	77
Using data communication applications .....	77
8. Battery information .....	78
Charging and Discharging .....	78
9. Genuine Enhancements ....	79
Battery .....	79
Indoor .....	79
Travel Charger (ACP-12) .....	79
Indoor and Vehicle .....	80
Boom Headset (HDB-4) .....	80
Stereo Headset (HDS-3) .....	80
Vehicle .....	80
Mobile Charger (LCH-9) .....	80
10. Care and Maintenance ....	81
11. Important Safety Information .....	82
Index .....	86

# FOR YOUR SAFETY

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.



Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.



## ROAD SAFETY COMES FIRST

Don't use a hand-held phone while driving.



## INTERFERENCE

All wireless phones may get interference, which could affect performance.



## SWITCH OFF IN HOSPITALS

Follow any regulations or rules. Switch the phone off near medical equipment.



## SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft.



## SWITCH OFF WHEN REFUELLING

Don't use the phone at a refuelling point. Don't use near fuel or chemicals.



## SWITCH OFF NEAR BLASTING

Don't use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.



## USE SENSIBLY

Use only in the normal position. Don't touch the antenna unnecessarily.



## QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment.



## ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.



## CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user's guide for detailed safety instructions. Do not connect incompatible products.



## BACKUP COPIES

Remember to make backup copies of all important data.






## WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.





## CALLING

Ensure the phone is switched on and in service. Enter the phone number, including the area code, then press . To end a call, press . To answer a call, press .



## EMERGENCY CALLS

Ensure the phone is switched on and in service. Press  as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display. Enter the emergency number, then press . Give your location. Do not end the call until told to do so.



# Network Services

The wireless phone described in this guide is approved for use on the EGSM 900, GSM 1800 and GSM 1900 network.

Triband is a network dependent feature. Check with your local service provider if you can subscribe to and use this feature.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.



**Note:** Some networks may not support all language-dependent characters and/or services.

## About accessories

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from ACP-7, ACP-8, ACP-12 and LCH-9.



**Warning:** Use only batteries, chargers and accessories approved by the phone manufacturer for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

For availability of approved accessories, please check with your dealer.

### A few practical rules for accessory operation

- Keep all accessories out of the reach of small children.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that any vehicle-installed accessories are mounted and are operating properly.
- Installation of any complex car accessories must be made by qualified personnel only.

# General information

## ■ Access codes

### Security code (5 to 10 digits)

The security code protects your phone against unauthorised use. The pre-set code is 12345. Change the code, and keep the new code secret and in a safe place separate from your phone. To change the code, and to set the phone to request the code, see "[Security settings](#)" on page 44.

### PIN and PIN2 codes (4 to 8 digits), Module PIN and Signing PIN

- The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. Set the phone to request the PIN code each time the phone is switched on, see "[Security settings](#)" on page 44.
- The PIN2 code may be supplied with the SIM card and is required to access some functions, such as charging unit counters.

- The module PIN is required to access the information in the security module. See "[Security module](#)" on page 72. The module PIN is supplied with the SIM card if the SIM card has a security module in it.
- The signing PIN is required for the digital signature. See "[Digital signature](#)" on page 74. The signing PIN is supplied with the SIM card if the SIM card has a security module in it.

If you key in an incorrect PIN code three times in succession, the phone may display *SIM blocked* or *PIN code blocked*, for example, and ask you to enter the PUK code.

### PUK and PUK2 codes (8 digits)

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. The PUK2 code is required to change a blocked PIN2 code.

If the codes are not supplied with the SIM card, contact your network operator or service provider for the codes.

## Barring password (4 digits)

The barring password is required when using the *Call barring service*, see "Security settings" on page 44. You can obtain the password from your service provider.

## Wallet code (4 to 10 digits)

The wallet code is required to access the wallet services. If you key in an incorrect wallet code several times, the wallet application is blocked for five minutes. For further information, see "Wallet" on page 60.

# Overview of the functions of the phone

The Nokia 7250i phone provides many functions, which are practical for daily use, such as a calendar, a clock, an alarm clock, a camera, a radio, and many more. Also a range of Nokia Xpress-on™ colour covers is available for your phone. To change the covers, see "[Changing the covers](#)" on page 8.

## ■ Camera

Your phone has a built-in camera that can be used for taking pictures. For sending a picture via the Multimedia Messaging Service (MMS), see "[Multimedia messages](#)" on page 22, see "[Camera \(Menu 7\)](#)" on page 47. The pictures can also be used as wallpapers in standby mode or as thumbnail pictures in [Contacts](#).

You can save your pictures in a compatible PC using the PC Suite software.

## ■ Multimedia messaging service (MMS)

The phone is able to send and receive multimedia messages composed of text, sound and a picture. You can save the pictures and ringing tones for personalising your phone. See "[Multimedia messages](#)" on page 22.

## ■ Polyphonic sound (MIDI)

Polyphonic sound consists of several sound components played at the same time. Your phone has sound components from over 40 instruments, but the phone can only play a few instruments at the same time. Polyphonic sounds are used, for example, in ringing tones and message alert tones. The phone supports Scalable Polyphonic MIDI (SP-MIDI) format.

You can receive polyphonic ringing tones via a multimedia service, see "[Reading and replying to a multimedia message](#)" on page 24, or you can download them via the gallery menu, see "[Gallery \(Menu 8\)](#)" on page 48 or via PC suite, see "[PC Suite](#)" on page 76.

## ■ Java™ applications

Your phone supports Java 2 Micro Edition, J2ME™, and includes some Java™ applications and games that have been specially designed for mobile phones. You can download new applications and games to your phone, see ["Applications \(Menu 11\)"](#) on page 55.

## ■ General Packet Radio Service (GPRS)

GPRS technology is a network service that allows mobile phones to be used for sending and receiving data over an Internet Protocol (IP) – based network. GPRS is a data bearer that enables wireless access to data networks such as the Internet. The applications that may use GPRS are MMS and SMS messaging (SMS, Short Message Service), browsing sessions, Java application downloading and the PC dial-up (for example, Internet and e-mail).

Note that your phone supports three simultaneous GPRS connections. For example, you can receive multimedia messages and, at the same time, have an ongoing PC dial-up connection or browsing session.

Before you can use GPRS technology

- Contact your network operator or service provider for availability and subscription to the GPRS service.
- Save the GPRS settings for each of the applications used over GPRS.

See ["Setting up the phone for a service"](#) on page 67, ["Message settings"](#) on page 27 and ["GPRS"](#) on page 65.

### Pricing for GPRS and applications

For more detailed information on pricing, contact your network operator or service provider.

## ■ Over the Air (OTA) settings service

In order to use MMS, GPRS and other wireless services, you need to have proper settings on your phone. You may be able to receive the settings directly as an OTA message and you need to save the settings on your phone. For more information on the availability of the settings, contact your network operator, service provider or nearest authorised Nokia dealer.


## ■ Shared memory

The following features in this phone may share memory: contacts, text and multimedia messages, images and ringing tones in the gallery, calendar, to-do notes, and Java games and applications. Using any such features may reduce the memory available for any features sharing memory. This is especially true with heavy use of any of the features (although some of the features may have a certain amount of memory specially allotted to them in addition to the amount of memory shared with other features). For example, saving many images, Java applications, etc. may take all of the shared memory and your phone may display a message that the memory is full. In this case, delete some of the information or entries stored in the shared memory features before continuing.

# 1. Your phone

## ■ Keys and connectors

### 1. Power key ①

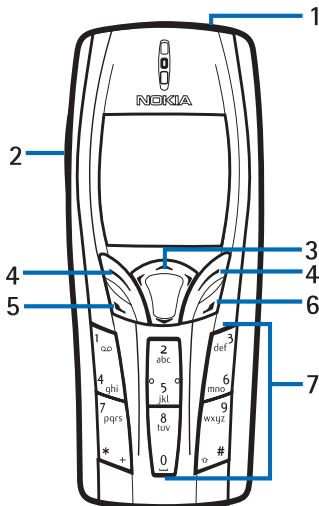


Switches the phone on and off.

When the keypad is locked, pressing the power key briefly turns the phone's display lights on for approximately 15 seconds.

### 2. Volume keys

Adjust the volume of the earpiece or the loudspeaker, or the headset when it is connected to the phone.

### 3. 4-way scroll keys



Enables, for example, scrolling through contacts, menus or settings and in calendar, or moving the cursor when writing text.



### 4. Selection keys and

The function of these keys depends on the guiding text shown on the display above the keys. See "[Standby mode](#)" on page 2.


### 5. dials a phone number, and answers a call. In standby mode it shows the list of the most recently called numbers.

### 6. ends an active call. Exits from any function.

### 7. - enter numbers and characters.

 and  are used for various purposes in different functions.

## 1. Charger connector

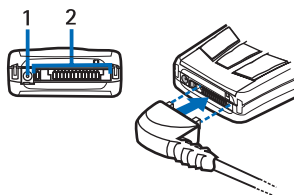


## 2. Pop-Port™ connector used, for example, for headsets and the data cable.

Connect an enhancement to the Pop-Port connector as shown in the picture.

## 3. Infrared (IR) port



## 4. Camera lens on the back cover of the phone.

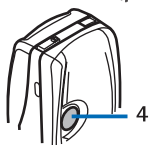


## Standby mode

When the phone is ready for use, and you have not keyed in any characters, the phone is in standby mode.

### 1. Shows the operator logo to indicate in which cellular

network the phone is currently being used.

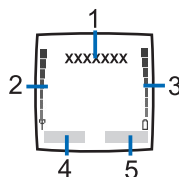

2. Shows the signal strength of the cellular network at your current location. The higher the bar, the stronger the signal.
3. Shows the battery charge level. The higher the bar, the more power in the battery.
4. The left selection key in standby mode is **Menu**.
5. The right selection key in standby mode is **Contacts** or **Go to** or it has an operator specific name. If you press the right selection key when it is
  - **Contacts**, you can access the **Contacts** menu.
  - the operator specific key, you can access an operator's homepage.
  - **Go to**, you can then scroll to the specific function and select it. To set the functions for your personal shortcut, see "**Personal shortcuts**" on page 37. Same functions can also be activated if you select the menu **Go to**, see "**Go to (Menu 15)**" on page 74.






## Screen saver

The phone automatically activates a screen saver in standby mode after a certain length of time if no phone function is used. See "[Screen saver](#)" on page 42. Press any key to deactivate the screen saver.

## Wallpaper

You can set your phone to display a background picture, wallpaper, when the phone is in standby mode. See "[Wallpaper](#)" on page 42.

## Essential indicators in standby mode

-  You have received one or several text or picture messages. See "[Reading and replying to a SMS message or an e-mail](#)" on page 19.
-  You have received one or several multimedia messages. See "[Reading and replying to a multimedia message](#)" on page 24.
-  The phone's keypad is locked. See "[Keypad lock \(Keyguard\)](#)" on page 7.



The phone does not ring for an incoming call or text message when *Incoming call alert* is set to *Off* and *Message alert tone* is set to *Off*. See "[Tone settings](#)" on page 43.



The alarm clock is set to *On*. See "[Alarm clock](#)" on page 51.



The countdown timer is running. See "[Countdown timer](#)" on page 58.



The stopwatch is running in the background. See "[Stopwatch](#)" on page 59.



When the GPRS connection mode *Always online* is selected and the GPRS service is available, the indicator is shown on the top left of the display. Refer to "[GPRS connection](#)" on page 65.



When a GPRS connection is established, the indicator is shown on the top left of the display. Refer to "[GPRS connection](#)" on page 65 and "[Browsing the pages of a service](#)" on page 68.





The GPRS connection is suspended (on hold), for example if there is an incoming or outgoing call during a GPRS dial-up connection. The indicator is shown on the top right of the display.



Infrared connection indicator, see ["Infrared"](#) on page 64.



All your calls are diverted to another number, *Divert all voice calls*. If you have two phone lines, the divert indicator for the first line is  and for the second line . See ["Call divert"](#) on page 39.



If you have two phone lines, the indicator displays the selected phone line. See ["Line for outgoing calls"](#) on page 40.



The loudspeaker has been activated, see ["Options during a call"](#) on page 11.



Calls are limited to a closed user group. See ["Security settings"](#) on page 44.



The timed profile is selected. See ["Profiles \(Menu 4\)"](#) on page 37.




A headset, handsfree, loopset or music stand enhancement is connected to the phone.

To enable the phone to show the time and date in standby mode, see ["Clock"](#) on page 38 and ["Date"](#) on page 38.

## Headset

For example, you can carry the stereo headset HDS-3 as shown in the picture.

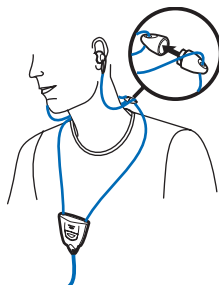

## Putting on the wrist strap

Thread the strap as shown in the picture and then tighten it.



## 2. Getting started

### ■ Installing the SIM card and the battery

- Keep all miniature SIM cards out of the reach of small children.

The SIM card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting or removing the card.


Before installing the SIM card, always make sure that the phone is switched off and disconnected from any enhancement and then remove the battery.

1. To remove the back cover from the phone:


With the back of the phone facing you, push the back cover release button (1) and remove the cover from the phone (2).




2. Remove the battery by lifting it from the end from the finger grip (3).

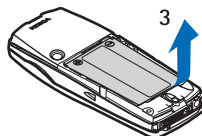


3. To release the SIM card holder, slide the card holder backwards (4) and open it by lifting (5).

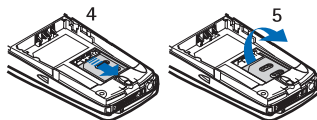


4. Insert the SIM card into the SIM card holder (6). Make sure that the SIM card is properly inserted and that the golden contact area on the card is facing downwards.

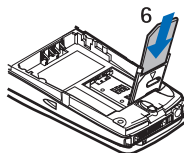

5. Close the SIM card holder (7) and slide it forwards to lock it (8).

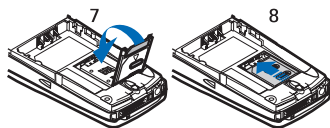


6. Replace the battery (9).

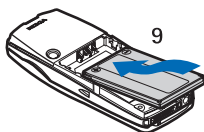


7. To replace the back cover:

First place the top of the back cover over the locking catch on the top of the phone (10). Direct the back cover towards the locking catches on both sides of the phone and press to lock the cover into place (11).

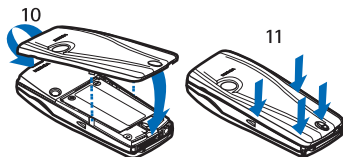

## ■ Charging the battery

1. Connect the lead from the charger to the socket on the bottom of your phone.

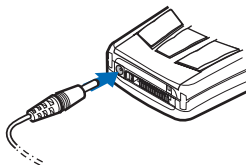

2. Connect the charger to an AC wall socket.

The text **Charging** is displayed briefly if the phone is switched on. If the battery is completely flat, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

You can use the phone while the charger is connected.

The charging time depends on the charger and the battery used. For example, charging a BLD-3 battery with the ACP-12 charger takes up to one hour and 30 minutes while the phone is in standby mode.

## ■ Switching the phone on and off



**Warning:** Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Press and hold the power key **Ⓚ**.

Note that if the phone displays *Insert SIM card* even though the SIM card is properly inserted, or *SIM card not supported*, contact your network operator or service provider. Your phone does not support 5-Volt SIM cards and the card may need to be changed.




- If the phone asks for a PIN code, key in the PIN code (displayed as \*\*\*\*), and press **OK**.

See also *PIN code request* in "Security settings" on page 44 and "Access codes" on page xii.

- If the phone asks for a security code, key in the security code (displayed as \*\*\*\*), and press **OK**.  
See also "Access codes" on page xii.

**TIPS ON EFFICIENT OPERATION:**  
Your phone has a built-in antenna.

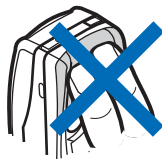


As with any other radio-transmitting device, do not touch the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed. Not touching the antenna area during a phone call optimises the antenna performance and the talktime of your phone.

## ■ Keypad lock (Keyguard)


You can lock the keypad to prevent the keys being accidentally pressed, for example, when your phone is in your handbag.


- Locking the keypad

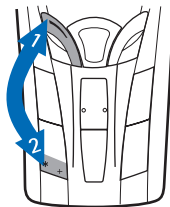

In standby mode, press **Menu** and then **\*+**  within 1.5 seconds.

- **Unlocking the keypad**


Press **Unlock** and then  within 1.5 seconds.

To answer a call when the keyguard is on, press . During a call, the phone can be operated normally. When you end or reject the call, the keypad will automatically be locked.

For automatic keypad locking, see ["Automatic keyguard"](#) on page 40.

For locking the keypad during a call, see ["Options during a call"](#) on page 11.




**Note:** When Keyguard is on, calls may be possible to the emergency number programmed into your phone (e.g. 112, 911 or other official emergency number). Key in the emergency number and press . The number is displayed only after you have keyed in its last digit.


## ■ Changing the covers

Before changing the cover, always switch off the power and disconnect the phone from the charger or any other device. Avoid touching electronic components while changing the covers. Always store and use the phone with the covers attached.


1. Remove the back cover from the phone. See step 1 in ["Installing the SIM card and the battery"](#) on page 5.
2. To remove the front cover, gently pull the locking catch on the top of the front cover from the locking hole in the phone (1) and remove the cover starting from the top.

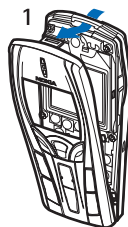

3. Place the key mat on the new front cover (2).

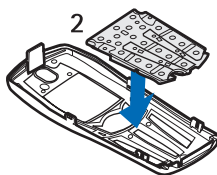

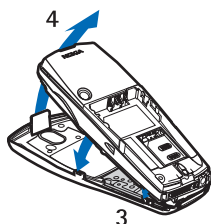


4. To replace the front cover, first place the catches on the lower part of the cover into the corresponding holes on the phone (3) and then gently push the catch on the top of the cover through the locking hole on the top of the phone (4). Press the cover into place.



5. Replace the back cover of the phone. See step 7 in ["Installing the SIM card and the battery"](#) on page 5.


## 3. Call functions

### ■ Making a call



1. Key in the phone number, including the area code. If you key in an incorrect character, press **Clear** to delete it.  
For international calls, press  twice for the international prefix (the + character replaces the international access code) and then key in the country code, the area code without the leading 0, if necessary, and the phone number.
2. Press  to call the number.
3. Press  to end the call or to cancel the call attempt.

See also "Options during a call" on page 11.




#### Making a call using contacts

- To search for a name/phone number that you have saved in **Contacts**, see "Searching for a name in contacts" on page 33.  
Press  to call the number.



#### Last number redialling


- In standby mode, press  once to access the list of the most recent 20 numbers that you called or attempted to call. Scroll to the number or name that you want, and press  to call the number.

#### Calling your voice mailbox




- In standby mode, press and hold , or press  and .  
If the phone asks for the voice mailbox number, key it in and press **OK**. See also "Voice messages" on page 26.

### Speed dialling a phone number

Before you can use speed dialling, assign a phone number to one of the speed-dialling keys, from  to , see "Speed dials" on page 35.  
Call the number in either of the following ways:

- Press the speed-dialling key that you want and then press .
- If **Speed dialling** is set to on, press and hold a speed-dialling key until the call is started. See "Speed dialling" on page 39.

### ■ Answering or rejecting an incoming call

Press  to answer an incoming call and press  to end the call.  
Press  to reject an incoming call.

If you press **Silence**, only the ringing tone is muted. Then either answer or reject the call.





If a compatible headset supplied with the headset key is connected to the phone, you can answer and end a call by pressing the headset key.



**Tip:** If the *Divert if busy* function is activated to divert the calls, for example to your voice mailbox, rejecting an incoming call will also divert the call. See "*Call divert*" on page 39.

Note that when somebody is calling you, the phone shows the caller's name, phone number or the text *Private number* or *Call*. If more than one name is found in *Contacts* with the same seven last digits of the phone number as the caller's number, only the phone number will be displayed, if this is available. The phone may display an incorrect name, if the caller's number is not saved in *Contacts* but there is another name saved with the same seven last digits in the phone number as in the phone number of the caller.

## Call waiting

During a call, press  to answer the waiting call. The first call is put on hold. Press  to end the active call.


To activate the *Call waiting* function, see "*Call waiting*" on page 39.

## Options during a call

Many of the options that you can use during a call are network services. For availability, contact your network operator or service provider.

Press **Options** during a call for some of the following options:

- *Mute* or *Unmute*, *End call*, *End all calls*, *Contacts*, *Menu* and *Hold* or *Unhold*, *New call*, *Private*, *Answer* and *Reject*.
- *Conference* to make a conference call that allows up to six persons to take part in a conference call. During a call, make a call to a new participant (*New call*). The first call is put on hold. When the new call has been answered, select *Conference* to include the first participant in the conference call. To have a private conversation with one of the participants, select *Private* and select the desired participant. To rejoin the conference call after a private conversation, select *Conference*.
- *Lock keypad* to activate the keypad lock.





- **Send DTMF** to send DTMF (Dual Tone Multi-Frequency) tone strings, for example passwords or bank account numbers. The DTMF system is used by all touch-tone telephones. Key in the DTMF string or search for it in **Contacts** and press **OK**. Note that you can key in the wait character w and the pause character p by repeatedly pressing .
- **Swap** to switch between the active call and the call on hold, **Transfer** to connect a call on hold to an active call, and disconnect yourself from the calls.
- **Loudspeaker** to use your phone as a loudspeaker during a call. Do not hold the phone to your ear during loudspeaker operation. To activate/deactivate the loudspeaker, select **Loudspeaker/Handset** or press **Loudsp./Handset**, respectively. The loudspeaker is automatically deactivated when you end the call or call attempt, or connect the handsfree unit or headset to the phone.

If you have connected a compatible handsfree unit or the headset to the phone, **Handset** in the options list is replaced with **Handsfree** or **Headset** and the selection key **Handset** with **Handsfr.** or **Headset**, respectively.

Using the loudspeaker with the radio, see ["Using the radio"](#) on page 46.

## 4. Writing text

You can key in text, for example, when writing messages, using traditional or predictive text input.


When you are writing text, the predictive text input is indicated by  and the traditional text input by  at the top left of the display. The character case is indicated by **Abc**, **abc**, or **ABC** next to the text input indicator. You can change the character case by pressing  **#**. The number mode is indicated by **123**, and you can change between the letter and number mode by pressing and holding  **#**.

### ■ Setting predictive text input on or off

When writing text, press **Options** and select *Dictionary*.



- To set the predictive text input on, select a language in the dictionary options list. Predictive text input is only available for the languages on the list.
- To revert to traditional text input, select *Dictionary off*.








**Tip:** To quickly set the predictive text input on or off when writing text, press  **#** twice, or press and hold **Options**.

### ■ Using predictive text input

You can key in any letter with a single keypress. The predictive text input is based on a built-in dictionary to which you can also add new words.


1. Start writing a word using the keys  to . Press each key only once for one letter. The word changes after each keystroke.




**Example:** To write **Nokia** when the English dictionary is selected, press , , ,  and .

To insert a number while in letter mode, press and hold the desired number key.

For more instructions for writing text, see "[Tips for writing text](#)" on page 14.


2. When you have finished writing the word and it is correct, confirm it by adding a space with  or by pressing any of the scroll keys. Pressing a scroll key also moves the cursor.

If the word is not correct, press  repeatedly or press **Options** and select *Matches*. When the word that you want appears, confirm it.



If the ? character is displayed after the word, the word you intended to write is not in the dictionary. To add the word to the dictionary, press **Spell**, key in the word (traditional text input is used) and press **Save**. When the dictionary becomes full, the new word replaces the oldest one that was added.

3. Start writing the next word.


## Writing compound words

Key in the first part of the word and confirm it by pressing . Write the last part of the word and confirm the word.

## ■ Using traditional text input

Press a number key,  to , repeatedly until the desired character appears. Not all characters available under a number key are printed on the key. The characters available depend on the language selected in the *Language* menu, see "*Language*" on page 40.






To insert a number while in letter mode, press and hold the desired number key.

- If the next letter you want is located on the same key as the present one, wait until the cursor appears, or press any of the scroll keys and then key in the letter.
- The most common punctuation marks and special characters are available under the number key .



More instructions for writing text, see "*Tips for writing text*" on page 14.

## ■ Tips for writing text






The following functions may also be available for writing text:

- To insert a space, press .
- To move the cursor to the left, right, down or up, press the scroll keys , ,  or , respectively.
- To delete a character to the left of the cursor, press **Clear**. Press and hold **Clear** to delete the characters more quickly.

To delete all the characters at once when writing a message, press **Options** and select *Clear text*.

- To insert a word when using the predictive text input, press **Options** and select *Insert word*. Write the word using the traditional text input and press **Save**. The word is also added to the dictionary.
- To insert a special character when using the traditional text input, press , or when using the predictive text input, press and hold , or press **Options** and select *Insert symbol*.

Press any of the scroll keys to scroll to a character and press **Use** to select the character.

You can also scroll to a character by pressing , ,  or , and select the character by pressing .

The following options are available when writing text messages:



- To insert a phone number while in letter mode, press **Options** and select *Insert number*. Key in the phone number or search for it in *Contacts* and press **OK**.
- To insert a name from *Contacts*, press **Options** and select *Insert contact*. To insert a phone number or a text item attached to the name, press **Options** and select *View details*.

## 5. Using the menu

The phone offers you an extensive range of functions, which are grouped into menus. Most of the menu functions are provided with a brief help text. To view the help text, scroll to the menu function you want and wait for 15 seconds. To exit the help text, press **Back**. See ["Help text activation"](#) on page 41.



### ■ Accessing a menu function

#### By scrolling

1. To access the menu, press **Menu**.
2. Scroll with  or  through the menu (or with any of the scroll keys if the grid menu view is selected), and select, for example, *Settings* by pressing **Select**. To change the menu view, see ["Menu view"](#) on page 42.
3. If the menu contains submenus, select the one that you want, for example *Call settings*.
4. If the selected submenu contains further submenus, repeat step 3. Select the next submenu, for example *Anykey answer*.
5. Select the setting of your choice.
6. Press **Back** to return to the previous menu level, and **Exit** to exit the menu.

#### By using a shortcut

The menus, submenus and setting options are numbered and you can access some of them by using their shortcut number.

To access the menu, press **Menu**. Key in quickly, within two seconds, the index number of the menu function you want to access. Note that to access the menu functions in menu 1, press **Menu** and key in  and  and then key in the rest of the desired shortcut number.

Press **Back** to return to the previous menu level, and **Exit** to exit the menu.

## 6. Menu functions

### ■ Messages (Menu 1)



You can read, write, send and save text, multimedia and e-mail messages. All messages are organised into folders.

Before you can send any text, picture, or e-mail message, you need to save your message centre number, see "[Message settings](#)" on page 27.

### Text messages (SMS)

Using SMS (Short Message Service), your phone can send and receive multi-part messages, which consist of several ordinary text messages (network service). Invoicing is based on the number of ordinary messages that are required for a multi-part message.

You can also send and receive text messages that contain pictures.




**Note:** The picture message function can be used only if it is supported by your network operator or service provider. Only phones that offer picture message features can receive and display picture messages.

### Writing and sending messages

The number of available characters / the current part number of a multi-part message are shown on the top right of the display, for example 120/2.

1. Press **Menu**, and select *Messages*, *Text messages* and *Create message*.



**Tip:** To start writing messages quickly, press  in standby mode.

2. Key in a message. See "[Writing text](#)" on page 13. To insert text templates or a picture into the message, see "[Templates](#)" on page 21. Each picture message is made up of several text messages. Therefore, sending one picture message may cost more than sending one text message.
3. To send the message, press **Options** and select *Send*.
4. Enter the recipient's phone number or search for the phone number in *Contacts*.  
Press **OK** to send the message.



**Note:** When sending messages via the SMS network service, your phone may display the words *Message sent*. This is an indication that the message has been sent by your phone to the message centre number programmed into your phone. This is not an indication that the message has been received at the intended destination. For more details about SMS services, check with your service provider.

## Options for sending a message

After you have written a message, press **Options** and select *Sending options*.

- To send a message to several recipients, select *Send to many*. When you have sent the message to everyone you want to send it to, press **Done**.
- To send a message using a distribution list, select *Send to list*.  
To create a distribution list, see ["Distribution lists"](#) on page 20.
- To send a message using a message profile, select *Sending profile* and then the desired message profile.

To define a message profile, see ["Message settings"](#) on page 27.

## Writing and sending e-mail

Before you can send an e-mail via SMS, you need to save the settings for sending e-mail, see ["Message settings"](#) on page 27. To check e-mail service availability and to subscribe to the service, contact your network operator or service provider. To save an e-mail address in *Contacts*, see ["Saving multiple numbers and text items per name"](#) on page 32.

1. Press **Menu**, and select *Messages, Text messages* and *Create SMS e-mail*.
2. Key in the recipient's e-mail address or search for it in *Contacts* and press **OK**.
3. If you wish, you can key in a subject for the e-mail and press **OK**.
4. Key in the e-mail message. See ["Writing text"](#) on page 13. The total number of characters that you can key in is shown on the top right of the display. The e-mail address and subject are included in the total number of characters.

See also ["Inserting a text template into a message or into an e-mail"](#) on page 21. Pictures cannot be inserted.




5. To send the e-mail, press **Options** and select *Send e-mail*. If you have not saved the settings for sending e-mails, the phone asks for the number of the e-mail server.


Press **OK** to send the e-mail.



**Note:** When sending e-mails via the SMS network service, your phone may display the words *Message sent*. This is an indication that the e-mail has been sent by your phone to the e-mail server. This is not an indication that the e-mail has been received at the intended destination. For more details about e-mail services, check with your service provider.

### Reading and replying to a SMS message or an e-mail

When you have received a message or an e-mail, the indicator  and the number of new messages followed by ... *messages received* are shown.


The blinking  indicates that the message memory is full. Before you can receive new messages, delete some of your old messages in the *Inbox* folder.

The text messages function uses shared memory, see "*Shared memory*" on page xvi.

1. Press **Show** to view the new message, or press **Exit** to view it later.

#### Reading the message later:

Press **Menu**, and select *Messages, Text messages* and *Inbox*.

2. If more than one message has been received, select the one that you want to read. An unread message is indicated by  in front of it.
3. While reading or viewing the message, press **Options**.

You can select an option, for example, to delete, forward or edit the message as a text message or an e-mail, rename the message you are reading or to move it to another folder.

Select *Copy to calendar* to copy text at the beginning of the message to your phone's calendar as a reminder note for the current day.

Select *Message details* to view, if available, the sender's name and phone number, the message centre used, and the date and time of receipt.

Select *Use detail* to extract numbers, e-mail addresses and website addresses from the current message.

When reading a picture message, select *Save picture* to save the picture in the *Templates* folder.

4. Select *Reply* to reply to a message. Select *Original text* to include the original message in the reply, or select a standard answer to be included in the reply, or select *Empty screen*.

When replying to an e-mail, confirm or edit the e-mail address and subject first. Then write your reply message.

5. Press **Options**, select *Send*, and press **OK** to send the message to the displayed number.

## Inbox and sent items folders

The phone saves incoming text messages in the *Inbox* folder and sent messages in the *Sent items* folder of the *Text messages* submenu.

Text messages that you wish to send later can be saved in the *Archive*, *My folders* or *Templates* folder.

## Distribution lists

If you need to send messages frequently to a fixed group of recipients, you can define a distribution list for that purpose. You can save these distribution lists in the phone's memory. Note that the phone sends the message separately to each recipient on the list. Therefore, sending a message using a

distribution list may cost more than to send a message to one recipient.

Make sure that the contacts you want to add to the distribution lists, are saved in the phone's internal contact memory.

Press **Menu**, and select *Messages*, *Text messages* and *Distribution lists*. The names of the available distribution lists are shown.



- If you have not saved any lists, press **Add** to create one.
  - Key in the name for the list and press **OK**. Press **Options**, and select *View list*. Press **Add** and select a contact from the phone's contact memory. To add more contacts to the created list, press **Options**, select *Add contact* and select a new contact.
- Otherwise, scroll to a list, press **Options** and you can select
  - *View list* to view the contacts on the selected list. Press **Options** and you can also delete or view details of a selected contact or add a new contact.
  - *Add list* to create a distribution list.
  - *Rename list* to change the name of the selected list.
  - *Clear list* to delete all names and phone numbers from the selected list.

- *Delete list* to delete the selected distribution list.

If the message cannot be sent to certain recipients on the distribution list, select *Undelivered*. Press **Options** and select

- *Resend to list* to resend the message to the recipients on the *Undelivered* list.
- *View list* to view the list of the recipients to whom the latest message sending failed.
- *Delete list* to delete the *Undelivered* list.
- *View message* to view the failed message.

## Templates


Your phone includes text templates, indicated by , and picture templates, indicated by .

To access the template list, press **Menu**, and select *Messages*, *Text messages* and *Templates*.

Inserting a text template into a message or into an e-mail

- When you are writing or replying to a message or an e-mail, press **Options**. Select *Use template* and select the template that you want to insert.

Inserting a picture into a text message

- When you are writing or replying to a message, press **Options**. Select *Insert picture* and select a picture to view it. Press **Insert** to insert the picture into your message. The  indicator in the header of the message indicates that a picture has been attached. The number of characters that you can enter in a message, depends on the size of the picture.

To view the text and the picture together before sending the message, press **Options** and select *Preview*.

## Archive folder and My folders

To organise your messages, you can move some of them to the *Archive* folder, or add new folders for your messages.

While reading a message, press **Options**. Select *Move*, scroll to the folder that you want to move the message to and press **Select**.

To add or delete a folder, press **Menu**, and select *Messages*, *Text messages* and *My folders*.

- To add a folder, press **Options** and select *Add folder*.
- To delete a folder, scroll to the folder that you want to delete, press **Options** and select *Delete folder*.

## Multimedia messages



**Note:** This function can be used only if it is supported by your network operator or service provider. Only phones that offer compatible multimedia message features can receive and display multimedia messages.

A multimedia message can contain text, sound and a picture. The phone supports multimedia messages that are up to 45 kB in size. If the maximum size is exceeded, the phone may not be able to receive the message. Depending on the network, you may receive a text message that includes an Internet address where you can view the multimedia message.

If the message contains a picture, the phone scales it down to fit the display area.



**Note:** If *Allow multimedia reception* is set to *Yes* or *In home network*, your operator or service provider may charge you for every message you receive.

Multimedia messaging supports the following formats:

- Picture: JPEG, GIF, PNG, and BMP.
- Sound: Scalable Polyphonic MIDI (SP-MIDI) and monophonic ringing tones.

The phone does not necessarily support all variations of the aforementioned file formats. If a received message contains any unsupported elements, they may be replaced with the file name and the text *Object format not supported*.

Note that you are not able to receive any multimedia messages if you have a call in progress, a game or another Java application running, or an active browsing session over GSM data (see "[Keying in the service settings manually](#)" on page 67). Because delivery of multimedia messages can fail for a variety of reasons, do not rely solely upon them for essential communications.



## Writing and sending a multimedia message

To set the settings for multimedia messaging, see "[Settings for multimedia messages](#)" on page 28.

To check availability and to subscribe to the multimedia messaging service, contact your network operator or service provider.

1. Press **Menu**, and select *Messages, Multimedia msgs.* and *Create message*.


2. Key in a message. See "[Writing text](#)" on page 13.

To insert a picture or a sound clip, press **Options**, and select *Insert image* or *Insert sound clip*, respectively. The list of available folders in the *Gallery* is shown. Open a specific folder, scroll to the desired picture or sound, press **Options** and select *Insert*. The  or  indicator in the header of the message indicates that a picture or sound has been attached. Copyright protections may prevent some images, ringing tones and other content from being copied, modified, transferred or forwarded.

To insert a name from *Contacts*, press **Options**, select *More options* and *Insert contact*. Scroll to the desired name, press **Options** and select *Insert contact*.



To insert a number, press **Options**, select *More options* and *Insert number*. Key in the number or search for it in *Contacts*, and press **OK**.


3. To view the message before sending it, press **Options** and select *Preview*.
4. To send the message, press **Options** and select *Send to number* (or *Send to e-mail* or *Send to many*).
5. Enter the recipient's phone number (or e-mail address) or search for it in *Contacts*. Press **OK** and the message is moved to the *Outbox* folder for sending.

It takes more time to send a multimedia message than to send a text message. While the multimedia message is being sent, the animated indicator  is displayed and you can use other functions on the phone. If there is an interruption while the message is being sent, the phone tries to resend it a few times. If this fails, the message will remain in the *Outbox* folder and you can try to resend it later.

The messages that you have sent will be saved in the *Sent items* folder if the setting *Save sent messages* is set to *Yes*. See "[Settings for multimedia messages](#)" on page 28. This is not an indication that the message has been received at the intended destination.

## Reading and replying to a multimedia message

When your phone is receiving a multimedia message, the animated indicator  is displayed. When the message has been received, the indicator  and the text *Multimedia message received* are shown.

The blinking  indicates that the memory for multimedia messages is full, see "Multimedia messages memory full" on page 25.

The multimedia message function uses shared memory, see "Shared memory" on page xvi.

1. Press **Show** to view the message, or press **Exit** to view it later.

Reading the message later: Press **Menu**, and select *Messages*, *Multimedia msgs.* and *Inbox*.

2. Scroll to view the message. Press **Options** and some of the following options may be available:

- *Delete message* to delete a saved message.
- *Reply* or *Reply to all* to reply to the message. To send the reply, refer to "Writing and sending a multimedia message" on page 22

- *Forward to no.*, *Forward to e-mail* or *Send to many* to forward the message.
- *Edit* to edit a message. You can only edit messages you have created. See "Writing and sending a multimedia message" on page 22.
- *Message details* to view the subject, size and the type of message.
- *Details* to view the details of the attached image or sound.
- *Save sound clip* to save the ringing tone in the *Gallery*.
- *Save image* to save the picture in the *Gallery*.

Refer also to the file options in *Gallery*, see "Gallery (Menu 8)" on page 48.

## Inbox, Outbox, Saved and Sent items folders


The phone saves the multimedia messages that have been received in the *Inbox* folder of the *Multimedia msgs.* submenu.

Multimedia messages that have not yet been sent are moved to the *Outbox* folder of the *Multimedia msgs.* submenu.

The multimedia messages that you wish to send later, can be saved in the *Saved items* folder of the *Multimedia msgs.* submenu.

The multimedia messages that have been sent are saved in the *Sent items* folder of the *Multimedia msgs.* submenu if the setting *Save sent messages* is set to *Yes*. See "[Settings for multimedia messages](#)" on page 28.

## Multimedia messages memory full

When you have a new multimedia message waiting and the memory for the messages is full, the indicator  blinks and *Multimedia memory full, view waiting msg.* is shown. To view the waiting message, press **Show**. To save the message, press **Options**, select *Save message* and delete old messages by first selecting the folder and then the old message to be deleted.

To discard the waiting message, press **Exit** and **Yes**. If you press **No**, you can view the message.

## Deleting messages

1. To delete text messages, press **Menu**, and select *Messages, Text messages* and *Delete messages*.

To delete all messages from all folders, select *All messages* and when *Delete all messages from all folders?* is displayed, press

**OK**. If the folders contain unread messages, the phone will ask whether you want to delete them also.

To delete multimedia messages, press **Menu**, and select *Messages, Multimedia msgs.* and *Delete messages*.

2. To delete all messages from a folder, select the folder from which you want to delete the messages and press **OK**. If the folder contains unread messages, the phone will ask whether you want to delete them also.

## Chat

You can have a conversation with another person using this faster text messaging application (network service). You cannot save received or sent messages, but you can view them while chatting. Each chat message is sent and priced as a separate text message.

1. To start a chat session, press **Menu**, select *Messages* and *Chat*. Key in or search the *Contacts* for the phone number of the person with whom you want to start a chat session and press **OK**.

**Another way to start a chat session:** When you have received a message, press **Show** to read it. To start a chat session, press **Options** and select *Chat*.

2. Key in your nickname for the chat session and press **OK**.
3. Write your chat message, see "Writing text" on page 13.
4. To send the message, press **Options** and select **Send**.
5. The reply message from the other person is shown above your original message.  
To reply to the message, press **OK** and repeat steps 3 and 4.
6. To end the chat session, press **OK** and press **Options** and select **Quit**.

To view the most recent messages of the current chat session, press **Options** and select **Chat history**. The messages that you sent are indicated by "<" and your nickname and the messages that you received are indicated by ">", and the sender's nickname. Press **Back** to return to the message you are currently writing. To edit your nickname, select the option **Chat name**.

## Voice messages


The voice mailbox is a network service and you may need to subscribe to it. For more information and for the voice mailbox number, contact your service provider.

Press **Menu**, and select **Messages** and **Voice messages**. Select


- **Listen to voice messages** to call your voice mailbox at the phone number that you have saved in the **Voice mailbox number** menu.

If you have two phone lines available (network service), each phone line may have its own voice mailbox number. Refer to "Line for outgoing calls" on page 40.

- **Voice mailbox number** to key in, search for or edit your voice mailbox number and press **OK** to save it.

If supported by the network, the indicator  will show new voice messages. Press **Listen** to call your voice mailbox number.



**Tip:** Pressing and holding  calls your voice mailbox.

## Info messages

With the info message network service you can receive messages on various topics from your service provider. These messages may include, for example, weather or traffic conditions. For availability, topics and the relevant topic numbers, contact your service provider.



## Message settings

The message settings affect the sending, receiving and viewing of messages.

### Settings for text and e-mail messages

1. Press **Menu**, and select *Messages*, *Message settings*, *Text messages* and *Sending profile*.
2. If more than one message profile set is supported by your SIM card, select the set you want to change.
  - Select *Message centre number* to save the phone number of the message centre that is required for sending text messages. You will receive this number from your service provider.
  - Select *Messages sent via* to select the message type *Text*, *E-mail*, *Paging* or *Fax*.
  - Select *Message validity* to select the length of time for which the network should attempt to deliver your message.
  - For message type *Text*, select *Default recipient number* to save a default number for sending messages for this profile.

For message type *E-mail*, select *E-mail server* to save the e-mail server number.

- Select *Delivery reports* to ask the network to send delivery reports about your messages (network service).
- Select *Use GPRS* and select *Yes* to set GPRS as the preferred SMS bearer. Also, set the *GPRS connection* to *Always online*, see "*GPRS connection*" on page 65.
- Select *Reply via same centre* to allow the recipient of your message to send you a reply via your message centre (network service).
- Select *Rename sending profile* to change the name of the selected message profile. The message profile sets are only displayed if your SIM card supports more than one set.

### Overwrite settings

When the text message memory is full, the phone cannot receive or send any new messages. However, you can set the phone to automatically replace old text messages in the *Inbox* and *Sent items* folders with the new ones.

Press **Menu**, and select *Messages*, *Message settings*, *Text messages* and *Overwriting in inbox* or *Overwriting in sent items*. Select *Allowed* to set the phone to replace the old text messages with new ones in the *Inbox* or the *Sent items* folder, respectively.

## Settings for multimedia messages


Press **Menu**, and select *Messages*, *Message settings* and *Multimedia msgs..* Select


- *Save sent messages*. Select *Yes* to set the phone to save sent multimedia messages in the *Sent items* folder. If you select *No*, the sent messages are not saved.
- *Delivery reports* to ask the network to send delivery reports about your messages (network service)
- *Scale image down* to define the image size for the multimedia messages you are writing.
- *Allow multimedia reception*. Choose *No*, *Yes* or *In home network* to use the multimedia service. If you choose *In home network*, you cannot receive multimedia messages when outside your home network. The default setting is *In home network*.

- *Incoming multimedia messages*. Select *Retrieve* to set the phone to automatically fetch newly received multimedia messages, or select *Reject* if you do not wish to receive multimedia messages. This setting is not shown if the *Allow multimedia reception* is set to *No*.

- *Connection settings*. Define connection settings for retrieving multimedia messages. Activate the set in which you want to save the connection settings and then edit the active settings.

Select each of the settings one by one and key in all the required settings. Contact your network operator or service provider for the the settings.

- *Settings' name*. Key in the new name for the connection set and press **OK**.
- *Homepage*. Key in the homepage address of the service provider that you want to use, press  for a dot, and press **OK**.
- *Session mode*. Select *Permanent* or *Temporary*.
- *Data bearer*. Select *GPRS*.

- *Bearer settings* to set the settings for the selected bearer.
- *GPRS access point*. Key in the access point name to establish a connection to a GPRS network and press **OK**.
- *IP address*. Key in the address, press  for a dot, and press **OK**.
- *Authentication type*. Select *Secure* or *Normal*.
- *User name*. Key in the user name and press **OK**.
- *Password*. Key in the password and press **OK**.
- *Allow adverts*. You can receive or reject advertisements. This setting is not shown if the *Allow multimedia reception* is set to *No*.

To receive the multimedia connection settings as an OTA message

You may receive the multimedia connection settings as an OTA message from the network operator or service provider. For more information, contact your network operator or service provider.

## Font size setting

To select the font size for reading and writing messages, press **Menu**, and select *Messages*, *Message settings*, *Other settings* and *Font size*.

## Service commands

Press **Menu**, and select *Messages* and *Service commands*. Key in and send service requests (also known as USSD commands), such as activation commands for network services, to your service provider.

## ■ Call register (Menu 2)



The phone registers the phone numbers of missed, received and dialled calls, and the approximate length and cost of your calls.

The phone registers missed and received calls only if the network supports these functions, the phone is switched on and within the network's service area.


When you press **Options** in the *Missed calls*, *Received calls* and *Dialled numbers* menu, you can, for example, view the date and the time of the call, edit or delete the phone number from the list, save the number in *Contacts* or send a message to the number.

## Recent calls lists

Press **Menu**, and select *Call register* and then select

- *Missed calls* to view the list of the last ten phone numbers from which somebody has tried to call you (network service). The number in front of the (name or) phone number indicates the amount of call attempts from that caller.



**Tip:** When a note about missed calls is displayed, press **List** to access the list of phone numbers. Scroll to the number you would like to call back and press .

- *Received calls* to view the list of the last ten phone numbers from which you have most recently accepted calls (network service).
- *Dialled numbers* to view the list of the 20 phone numbers that you have most recently called or attempted to call. See also "*Last number redialling*" on page 10.
- *Delete recent call lists* to delete the recent calls lists. Select whether you want to delete all the phone numbers in the recent calls lists, or only those numbers in the missed calls, received calls or dialled numbers lists. You cannot undo the operation.

## Call counters and call timers



**Note:** The actual invoice for calls and services from your service provider may vary, depending upon network features, rounding-off for billing, taxes and so forth.

Press **Menu**, and select *Call register* and then select

- *Call duration*, scroll to view the approximate duration of your incoming and outgoing calls in hours, minutes and seconds. The security code is required to clear the timers.

If you have two phone lines available (network service), each phone line has its own call duration timers. The timers of the currently selected line are displayed. Refer to "*Line for outgoing calls*" on page 40.

- *Call costs* (network service). Select *Last call units* or *All calls' units* to check the cost of your most recent call or all calls in terms of units specified within the *Show costs in* function.

Select *Call cost settings* and select *Clear counters* to clear the counters, or select *Show costs in* to set the phone to show the remaining talk time in terms of charging units, *Units*, or units of currency, *Currency*. Contact your service provider for charging unit prices.

Select *Call cost limit* to limit the cost of your calls to a certain amount of charging units or units of currency. The PIN2 code is required for the call cost settings.



**Note:** When no more charging units or currency units are left, calls may only be possible to the emergency number programmed into your phone (e.g. 112, 911 or other official emergency number).

- *GPRS data counter.* Scroll to check the amounts of data that were sent or received in the last session, data sent and received in total, and to clear the counters. The counter unit is a byte. The security code is required to clear the counters.
- *GPRS connection timer.* Scroll to check the duration of the last GPRS connection or the total GPRS connection time. You can also clear the timers. The security code is required to clear the timers.


## ■ Contacts (Menu 3)



You can save names and phone numbers (contacts) in the phone's memory and in the SIM card's memory.

- The phone's memory may save up to 500 names with numbers and text notes about each name. You can also save an image for a certain number of names. The number of names that can be saved depends on the length of the names, and the number and length of the phone numbers and text items.

Contacts use shared memory, see "*Shared memory*" on page xvi.

- The phone supports SIM cards that can save up to 250 names and phone numbers. Names and numbers saved in the SIM card's memory, are indicated by .

## Selecting settings for contacts

Press **Menu** and select *Contacts* and *Settings*. Select

- *Memory in use* to select the memory you want to use for your contacts. To recall names and numbers from both memories for contacts, select *Phone and SIM*. In that case, the names and numbers will be saved in the phone's memory.

- **Contacts view** to select how the names, numbers and images in contacts are displayed.
- **Memory status** to see how many names and phone numbers are currently saved and how many can still be saved in the selected memory for contacts.

## Saving names and phone numbers (Add name)

Names and numbers will be saved in the used memory, see "[Selecting settings for contacts](#)" above.

1. Press **Menu** and select **Contacts** and **Add contact**.
2. Key in the name and press **OK**. See "[Using traditional text input](#)" on page 14.
3. Key in the phone number, and press **OK**. To key in the numbers, see "[Making a call](#)" on page 10.
4. When the name and number are saved, press **Done**.



**Tip: Quick save** In standby mode, key in the phone number. Press **Options**, and select **Save**. Key in the name, press **OK** and **Done**.

## Saving multiple numbers and text items per name

You can save different types of phone numbers and short text items per name in the phone's internal memory for contacts.

The first number saved is automatically set as the default number and it is indicated with a frame around the number type indicator, for example . When you select a name from contacts, for example to make a call, the default number is used unless you select another number.

1. Make sure that the memory in use is either **Phone** or **Phone and SIM**. See "[Selecting settings for contacts](#)" on page 31.
2. To access the list of names and phone numbers, press in standby mode.
3. Scroll to the name saved in the phone's internal memory for the contact to which you want to add a new number or text item, and press **Details**.
4. Press **Options** and select **Add number** or **Add detail**.

5. Select one of the following number types *General*, *Mobile*, *Home*, *Office* and *Fax*, or text types *E-mail address*, *Web address*, *Postal address* and *Note*.  
To change the number or text type, select *Change type* in the options list.
6. Key in the number or text item and press **OK** to save it.
7. Press **Back** and then **Exit** to return to standby mode.

### Changing the default number

Press in standby mode, scroll to the name you want and press **Details**. Scroll to the number you want to set as the default number. Press **Options** and select *Set as default*.

### Adding an image to a name or number in contacts

You can add an image in supported format to a name or number saved in the phone's internal memory.

Press in standby mode, scroll to the name (and number) you want to add an image to and press **Details**. Press **Options** and select *Add image*. The phone opens the list of folders in the *Gallery*. Scroll to the desired image, press **Options** and select *Save to contacts*. A copy of the image is added to the contact.

## Searching for a name in contacts

1. Press **Menu** and select *Contacts* and *Search*.
2. You can key in the first characters of the name you are searching for in the pop-up window.  
Press and to scroll through the names in the list, and and to move the cursor in the pop-up window.
3. Scroll to the name you want, and press **Details**. Scroll to view the details of the selected name.



**Tip:** To quickly find a name and phone number, press in standby mode. Key in the first letter(s) of the name, and/or scroll to the name you want.

**Tip:** To quickly view a specific name with the default phone number, press and hold at the name while scrolling through the names.

## Editing a name, number or text item or changing an image


Search for the name (and number) you want to edit and press **Details**. Scroll to the name, number, text item or image, and press **Options**. Select *Edit name*, *Edit number*, *Edit detail* or *Change image* and edit the name, number or text or change the image and press **OK**.

## Deleting names, numbers and images

Press **Menu** and select *Contacts* and *Delete*. Deleting a name and number will also delete an image attached to it.

- To delete names and numbers one by one, select *One by one* and scroll to the name (and number) you want to delete. Press **Delete** and press **OK** to confirm.
- To delete names and numbers in contacts all at once, select *Delete all* and then scroll to either of the memories *Phone* or *SIM card* and press **Delete**. Press **OK** and confirm with the security code.

## Deleting numbers, text items or images

Press  in standby mode, scroll to the desired name (and number) and press **Details**. Scroll to the number or text item you want to delete, press **Options** and select *Delete number* or *Delete detail*, respectively. If you have an image attached to the name or number and you want to delete it, press **Options** and select *Delete image*. Deleting an image from contacts does not delete it from *Gallery*.

## Copying contacts

You can copy names and phone numbers from the phone's memory to your SIM card's memory and vice versa. Note that any text items saved in the phone's internal memory, such as e-mail addresses, will not be copied to the SIM card.

1. Press **Menu** and select *Contacts* and *Copy*.
2. Select the copying direction, *From phone to SIM card* or *From SIM card to phone*.
3. Select *One by one*, *All* or *Default numbers*.
  - If you select *One by one*, scroll to the name you want to copy and press **Copy**.



*Default numbers* is shown if you copy from the phone to the SIM card. Only the default numbers will be copied.

4. To choose whether you want to keep or delete the original names and numbers, select *Keep original* or *Move original*.
  - If you select *All* or *Default numbers*, press **OK** when *Start copying?* or *Start moving?* is displayed.

## Sending and receiving a business card

You can send and receive a person's contact information from a compatible device as a business card either via IR or as an Over The Air (OTA) message if supported by the network.

### Receiving a business card

To receive a business card via IR, make sure that your phone is ready to receive data through its IR port, see "*Infrared*" on page 64. The user of the other phone can now send the name and phone number via Infrared.

When you have received a business card via IR or as an OTA message, press **Show**. Press **Save** to save the business card in the phone's memory. To discard the business card, press **Exit** and then **OK**.

## Sending a business card

You can send a business card via IR or as an OTA message to a compatible phone or other compatible device which supports the vCard standard. You can also send an image attached to the business card via IR, if you have saved images in the phone's memory.

1. To send a business card, search for the name and phone number you want to send from contacts, press **Details** and **Options** and select *Send bus. card*.
2. To send the business card via IR, make sure that the other phone or the PC is set up to receive data via its IR port and select *Via infrared*.

To send the business card as an Over The Air (OTA) message, select *Via text message*.

## Speed dials


To assign a number to a speed-dialling key, press **Menu** and select *Contacts* and *Speed dials* and scroll to the speed-dialling key number that you want.

Press **Assign**, press **Search**, and select first the name and then the number you want to assign. If a number has already been assigned to the key, press **Options**, and you can view, change or delete the assigned number. If the *Speed dialling* function is off, the phone asks whether you want to activate it. Press **Yes** to activate the function. Refer to "*Speed dialling*" on page 39.

To make a call using the speed-dialling keys, see "*Speed dialling a phone number*" on page 10.

## Info numbers and service numbers

Your service provider may have included information numbers or service numbers in your SIM card.

Press **Menu** and select *Contacts* and *Info numbers* or *Service numbers*. Scroll through a category to an information number, or to a service number, and press  to call the number.

## My numbers

The phone numbers assigned to your SIM card are saved in *My numbers* if this is allowed by the card. To view the numbers press **Menu** and select *Contacts* and *My numbers*. Scroll to the desired name or number, and press **View**.

## Caller groups

You can arrange the names and phone numbers saved in *Contacts* into caller groups. For each caller group, you can set the phone to sound a specific ringing tone and show a selected graphic on the display when you receive a call from a phone number in the group, see below. To set the phone to ring only upon calls from phone numbers belonging to a selected caller group, see *Alert for* in "*Tone settings*" on page 43.

Press **Menu** and select *Contacts* and *Caller groups* and select the desired caller group. Select

- *Group name*, key in a new name for the caller group and press **OK**.
- *Group ringing tone* and select the ringing tone for the group. *Default* is the ringing tone selected for the currently active profile.
- *Group logo* and select *On* to set the phone to display the group logo, *Off* not to display it, or *View* to view the logo.
- *Group members* to add a name to the caller group. If there are no names in the group, press **Add**, or otherwise, press **Options** and select *Add contact*. Scroll to the name you want to add to the group and press **Add**.

To remove a name from a caller group, scroll to the name you want to remove, and press **Options** and select *Remove contact*.

## ■ Profiles (Menu 4)



Your phone has various setting groups, profiles, for which you can customise the phone tones for different events and environments. Initially, personalise the profiles to your own liking and then you only need to activate a profile to use it. Available profiles are *General*, *Silent*, *Meeting*, *Outdoor*, and *Pager*.

Press **Menu**, and select *Profiles*. Scroll to a profile and press **Select**.

- To activate the selected profile, select *Activate*.
- To set the profile to be active for a certain amount of time up to 24 hours, select *Timed* and set the end time. When the time set for the profile expires, the previous profile that was not timed, becomes active.
- To personalise the profile, select *Personalise*. Select the setting you want to change and make the changes. The same settings can also be changed in the *Tone settings* menu, see "*Tone settings*" on page 43.

To rename a profile, *Profile name*. The *General* profile cannot be renamed.



**Tip:** To change the profile quickly in standby mode, press the power key **⓪**, scroll to the profile you want to activate and press **Select**.

## ■ Settings (Menu 5)



### Personal shortcuts

You can add some specific functions to your personal shortcut list and activate them either by pressing **Go to** or accessing the *Go to* menu. Refer to "*Go to (Menu 15)*" on page 74 and "*Standby mode*" on page 2.

To select the name for the right selection key and the functions for your personal shortcut list, press **Menu**, and select *Settings* and *Personal shortcuts*.

- To select the name for the right selection key displayed in standby mode, select *Right selection key*. Select an operator specific name, *Go to* or *Contacts*.
- To select the desired functions for your personal shortcut list, select *Select Go to options* and the list of available functions is shown.

Scroll to the desired function and press **Mark** to add it to the shortcut list.

To remove a function from the list, press **Unmark**.

- To rearrange the functions on the list, select *Organise Go to options* and the desired function. Press **Move** and select where you want to move the function.

## Time and date settings

### Clock

Press **Menu**, and select *Settings, Time and date settings* and *Clock*.

Select *Show clock* (or *Hide clock*) to show (or hide) the time on the top right of the display in standby mode. Select *Set the time* to adjust the clock to the correct time, and *Time format* to select the 12-hour or 24-hour time format.

The clock serves the functions *Messages, Call register, Alarm clock*, timed *Profiles, Calendar* and screen saver, for example.

If the battery is removed from the phone or if it is flat for a long time, you may need to set the time again.

### Date

Press **Menu**, and select *Settings, Time and date settings* and *Date*.

Select *Show date* (or *Hide date*) and the date is shown (or hidden) on the display when the phone is in standby mode. Select *Set the date* to adjust the date. You can also select the date format and date separator.

### Auto update of date and time

Press **Menu**, and select *Settings, Time and date settings* and *Auto-update of date & time* (network service). To set the phone to automatically update the time and date according to the current time zone, select *On*. To set the phone to ask for a confirmation before the update, select *Confirm first*.

The automatic update of the date and time does not change the time that you have set for the alarm clock, calendar or the alarm notes. They are in local time. Updating may cause some alarms that you have set to expire.

For information on availability, contact your network operator or service provider.

## Call settings

### Call divert




Press **Menu**, and select *Settings*, *Call settings* and *Call divert* (network service). With call divert, you can direct your incoming calls to another number, for example to your voice mailbox number. For details, contact your service provider. Divert options not supported by your SIM card or your network operator may not be shown.

Select the divert option you want, for example, select *Divert if busy* to divert voice calls when your number is busy or when you reject an incoming call.

To set the divert setting to on, select *Activate* and then select the timeout after which the call is diverted, if this is available for the divert option. To set the divert setting to off, select *Cancel*, or select *Check status*, if this is available for the divert option, to check whether call divert is activated or not. Several divert options may be active at the same time.

To see the divert indicators in standby mode, see "[Standby mode](#)" on page 2.



### Anykey answer

Press **Menu**, and select *Settings*, *Call settings* and then *Anykey answer*. Select *On* and you can answer an incoming call by briefly pressing any key, except **0**, selection keys  and , and .

### Automatic redial

Press **Menu**, and select *Settings*, *Call settings* and *Automatic redial*. Select *On* and your phone will make a maximum of ten attempts to connect the call after an unsuccessful call attempt.

### Speed dialling

Press **Menu**, and select *Settings*, *Call settings* and *Speed dialling*. Select *On* and the names and phone numbers assigned to the speed-dialling keys, from  to , can be dialled by pressing and holding the corresponding number key.

### Call waiting

Press **Menu**, and select *Settings*, *Call settings* and *Call waiting*. Select *Activate* and the network will notify you of an incoming call while you have a call in progress (network service). See "[Call waiting](#)" on page 11.

## Summary after call

Press **Menu**, and select *Settings*, *Call settings* and *Summary after call*. Select *On* and the phone will briefly display the duration and cost (network service) of the call after each call.

## Send my caller identity

Press **Menu**, and select *Settings*, *Call settings* and *Send my caller identity*. Select *Yes* and your phone number will be displayed to the person you are calling (network service). Select *Set by network* and the setting agreed upon with your service provider is used.

## Line for outgoing calls

Line for outgoing calls is a network service to select the phone line 1 or 2, that is, the subscriber number, for making calls. For example, you can have a private and a business line. For more information on availability, contact your network operator or service provider.

Press **Menu**, and select *Settings*, *Call settings* and *Line for outgoing calls*. If you select *Line 2* and have not subscribed to this network service, you will not be able to make calls. However, calls on both lines can be answered regardless of the selected line.

If supported by your SIM card, you can prevent the line selection by selecting the option *Lock*.



**Tip:** In standby mode, you can switch from one line to the other by pressing and holding



## Phone settings

### Language

Press **Menu**, and select *Settings*, *Phone settings* and *Language*. Select the language for the display texts. If *Automatic* is selected, the phone selects the language according to the information on the SIM card.


### Memory status

Press **Menu**, and select *Settings*, *Phone settings* and *Memory status*. Scroll to view the free memory, the total used memory and the memory used for each function in the list.

You may also find the memory information in the menu of some of those functions, for example in Gallery.

### Automatic keyguard



**Note:** When keyguard is on, calls may be possible to the emergency number programmed into your phone (e.g. 112, 911 or other official emergency number). Key in the emergency number and press .

The number is displayed only after you have keyed in its last digit.

You can set the keypad of your phone to lock automatically after a pre-set time delay when the phone is in standby mode and none of the phone's functions have been used.

Press **Menu**, and select *Settings*, *Phone settings* and *Automatic keyguard*. Select *On* and set the time delay from 10 seconds to 60 minutes. To deactivate the automatic keyguard, select *Off*.

Refer also to "Keypad lock (Keyguard)" on page 7.

### Cell info display

Press **Menu**, and select *Settings*, *Phone settings* and *Cell info display*. Select *On* to set the phone to indicate when it is used in a cellular network based on Micro Cellular Network (MCN) technology.

### Welcome note

Press **Menu**, and select *Settings*, *Phone settings* and *Welcome note*. Key in the note you would like to be shown briefly when the phone is switched on. To save the note, press **Options**, and select *Save*.

### Network selection

Press **Menu**, and select *Settings*, *Phone settings* and *Network selection*. Select *Automatic* and the phone automatically selects one of the cellular networks available in your area.

If you select *Manual*, you can select a network that has a roaming agreement with your home network operator. If *No access* is displayed, you must select another network. The phone stays in manual mode until the automatic mode is selected or another SIM card is inserted into the phone.

### Confirm SIM service actions

See "SIM services (Menu 16)" on page 74.

### Help text activation

To set the phone to show or not to show the help texts, press **Menu**, and select *Settings*, *Phone settings* and *Help text activation*.

See also "Using the menu" on page 16.

### Start-up tone

To set the phone to play or not to play a start-up tone when the phone is switched on, press **Menu**, and select *Settings*, *Phone settings* and *Start-up tone*.

## Display settings

### Wallpaper

You can set your phone to display a background image, known as wallpaper, when the phone is in standby mode. Some images are pre-saved in the *Gallery* menu. You can also receive images, for example, via multimedia messages, or transfer them with PC Suite from your PC and then save them in *Gallery*. Your phone supports JPEG, GIF, BMP and PNG formats but not necessarily all variations of these file formats.

Press **Menu**, and select *Settings*, *Display settings* and *Wallpaper*.

- Select *Change image* and open an image folder. Scroll to the image you want to set as wallpaper, press **Options** and select *Set as wallpaper*.
- To activate/deactivate the wallpaper, select *On/Off*, respectively.

Note that the wallpaper is not displayed when the phone activates the screen saver.

### Colour schemes

You can change the colour in some display components, for example, indicators and signal and battery bars.

Press **Menu**, and select *Settings*, *Display settings* and *Colour schemes*. Select the desired colour scheme.

### Menu view

To select the way the phone displays the main menu, press **Menu**, and select *Settings*, *Display settings* and *Menu view*. Select *List* for the menu list view and *Grid* for the menu grid view.

### Operator logo

To set your phone to display or hide the operator logo, press **Menu**, and select *Settings*, *Display settings* and *Operator logo*. If you have not saved the operator logo, the *Operator logo* menu is dimmed.

Note that the operator logo is not displayed when the phone activates the screen saver.

For more information on availability of an operator logo, contact your network operator or service provider. See also "PC Suite" on page 76.

### Screen saver

The digital clock screen saver is used for power saving in standby mode. It is activated when none of the phone's functions have been used for a certain time. Press any key to deactivate the screen saver. The screen saver is also deactivated when the phone is out of the network coverage area.





Press **Menu**, and select *Settings*, *Display settings* and *Screen saver timeout*. Select the timeout after which the digital clock display will be activated from 5 seconds to 60 minutes.

Note that the screen saver overrides all the graphics and texts on the display in standby mode.

### Display brightness

You can change the display brightness level used on the phone display.

Press **Menu**, and select *Settings*, *Display settings* and *Display brightness*. Scroll with  and  to decrease and increase the brightness level, and press **OK** to accept it.

### Tone settings

Press **Menu**, and select *Settings* and then *Tone settings*. You can find the same settings in the *Profiles* menu, see "*Profiles (Menu 4)*" on page 37. Note that the settings you make, will change the settings in the active profile.

Select *Incoming call alert* to choose how the phone notifies you of an incoming voice call. The options are *Ringing*, *Ascending*, *Ring once*, *Beep once* and *Off*.

Select *Ringing tone* for incoming voice calls. To select ringing tones that have been saved in the *Gallery*, select *Open gallery* from the ringing tone list.

Select *Ringing volume* and *Vibrating alert* for incoming voice calls and messages. The vibrating alert does not work when the phone is connected to a charger, a desktop stand, or a car kit.



**Tip:** If you receive a ringing tone via infrared connection or by downloading, you can save the ringing tone in the *Gallery*.

Select *Message alert tone* to set the alert tone for the incoming messages, *Keypad tones*, or *Warning tones* to set the phone to sound tones, for example, when the battery is running out of power.

Select *Alert for* to set the phone to ring only upon calls from phone numbers that belong to a selected caller group. Scroll to the caller group you want or *All calls* and press **Mark**.

## Enhancement settings

The enhancement settings menu is shown only if the phone is or has been connected to some mobile enhancements, chargers and handsfree units, for example.

Press **Menu**, and select *Settings* and *Enhancement settings*. You can select *Headset*, *Handsfree*, *Loopset*, *Text phone*, *Music stand* or *Charger*, if the corresponding enhancement is or has been connected to the phone. Depending on the enhancement, you can select some of the following options:

- *Default profile* to select the profile that you want to be automatically activated when you connect to the selected enhancement. You can select another profile while the enhancement is connected.
- *Automatic answer* to set the phone to answer an incoming call automatically after five seconds. If the *Incoming call alert* is set to *Beep once* or *Off*, automatic answer will not be used.
- *Lights* to set the lights permanently *On*. Select *Automatic* to set the lights on for 15 seconds after a keypress.

- When the phone is connected to the full car kit, select *Ignition detector* and *On* to automatically switch off the phone approximately 20 seconds after you have switched off the car's ignition.
- For *Text phone*, select *Use text phone* and select *Yes* to use the text phone settings instead of headset or loopset settings.

## Security settings



**Note:** When security features that restrict calls are in use (call barring, closed user group and fixed dialling), calls may be possible to certain emergency numbers in some networks (e.g. 112, 911 or other official emergency numbers).

Press **Menu**, and select *Settings* and *Security settings*. Select

- *PIN code request* to set the phone to ask for your PIN code every time the phone is switched on. Some SIM cards do not allow the PIN code request to be turned off.
- *Call barring service* (network service) to restrict incoming calls to and outgoing calls from your phone. A barring password is required.

- **Fixed dialling** to restrict your outgoing calls and text messages to selected phone numbers if this function is supported by your SIM card. The PIN2 code is required.

When the fixed dialling is on, GPRS connections are not possible except while sending text messages over a GPRS connection. In this case, the recipient's phone number and the message centre number have to be included on the fixed dialling list.

- **Closed user group.** Closed user group is a network service that specifies the group of people whom you can call and who can call you. For more information contact your network operator or service provider.
- **Security level.** Select **Phone** and the phone will ask for the security code whenever a new SIM card is inserted into the phone.

Select **Memory** and the phone will ask for the security code when the SIM card's memory is selected and you want to change the memory in use, (see "**Selecting settings for contacts**" on page 31) or copy from one memory to another ("**Copying contacts**" on page 34).

- **Access codes** to change the security code, PIN code, PIN2 code or barring password. Codes can only include numbers from 0 to 9.

## Restore factory settings

To reset some of the menu settings to their original values, press **Menu**, and select **Settings** and **Restore factory settings**. Key in the security code and press **OK**. Note that the data you have keyed in or downloaded, for example, the names and phone numbers saved in **Contacts** are not deleted.

## Radio (Menu 6)




**Note:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

To listen to the radio on your phone connect the compatible headset to the headset connector on the bottom of the phone. The lead of the headset functions as the radio antenna, so let it hang freely.



Note that the quality of the radio broadcast depends on the radio station's coverage in that particular area.

1. To turn on the radio, press **Menu** and select **Radio**. The display shows the
  - Channel location number and the name of the radio channel if you have saved the channel.
  - Frequency of the radio channel.
2. If you have already saved radio channels, you can scroll to the channel you would like to listen to, or select a radio channel location 1 to 9 by pressing the corresponding number key. When using the compatible headset supplied with the headset key, press the key to scroll to the desired saved radio channel.
3. When the radio is on, press **Options** and select **Switch off** to turn off the radio.



**Tip:** To quickly turn off the radio, press and hold .

## Tuning a radio channel





When the radio is on, press and hold  or  to start the channel search. Searching stops when a channel is found. To save the channel, press **Options**, and select **Save channel**. Key in the name of the channel and press **OK**. Select the location where you want to save the channel.




**Tip:** To quickly save the channel in a location 1 to 9, press and hold the corresponding number key, then key in the name of the channel and press **OK**.

## Using the radio

When the radio is on, press **Options** and select

- **Switch off** to turn off the radio.
- **Save channel** to save the radio channel you have found, refer to "Tuning a radio channel" above. Up to 20 radio channels can be saved.
- **Automatic tuning**. Briefly press  or  to start the channel search upwards or downwards. The search stops when a channel has been found, press **OK**. To save the channel, see **Save channel** above.
- **Manual tuning**. Briefly press  or  to move the channel search 0.1 MHz upwards or downwards or press and hold down the keys to quickly search upwards or downwards for a channel. To save the channel, press **OK** and see **Save channel** above.



**Tip:** To quickly select **Manual tuning**, press  **#** when in the **Radio** menu.

- **Set frequency.** If you know the frequency of the radio channel you would like to listen to (between 87.5 MHz and 108.0 MHz), key it in and press **OK**. To save the channel, see **Save channel** above.



**Tip:** To quickly select **Set frequency**, press **\*+**  when in the **Radio** menu.

- **Delete channel.** To delete a saved channel, scroll to it, press **Delete**, and **OK**.
- **Rename.** Key in a new name for the saved channel and press **OK**.
- **Loudspeaker** (or **Headset**) to listen to the radio using the loudspeaker (or headset). Keep the headset connected to the phone. The lead of the headset functions as the radio antenna.
- **Mono output** (or **Stereo output**) to listen to the radio in mono (or in stereo).

You can normally make a call or answer an incoming call while listening to the radio. The volume of the radio is muted. When you end the call, the radio will automatically be turned on.

When an application using a GPRS or HSCSD connection is sending or receiving data, it may interfere with the radio.

## ■ Camera (Menu 7)



**Note:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

**Note:** Obey all local laws governing the taking of pictures. Do not use this feature illegally.


In this menu you can take photos with the phone's built-in camera and adjust its settings. The camera lens is on the back of the phone, and the display of the phone works as a viewfinder. The camera produces JPEG pictures.

If there is not enough memory to take a new photo, you need to free some by deleting old photos or other files in the gallery. Note that the camera uses shared memory, see **"Shared memory"** on page xvi.

## To take a photo

1. Press **Menu**, and select **Camera** and **Standard photo**, **Portrait photo** or if the lighting is dim for taking photos, select **Night mode**. If you want to add the photo to a name/phone number saved in contacts, select **Portrait photo**.



**Tip:** To quickly open the camera viewfinder with standard photo view, press  in standby mode.

- The live image appears on the display, and you can use the display as a viewfinder.
- To take a photo, press **Capture**. The phone saves the photo in the *Photos* folder of the *Gallery* menu. The saved photo will be shown on the display.  
To define the default title for the photo, see *Default title* in "Camera settings" on page 48.
- Select **Back** to take another photo, or press **Options** and select, for example, an option to delete or rename the saved photo, send it as a multimedia message, or attach the photo to a name or phone number in contacts, or access the gallery.



**Tip:** You can activate the self-timer of the camera for one picture at a time. Press **Menu**, and select *Camera*, *Self-timer* and *Standard photo*, *Portrait photo* or *Night mode*. Press **Start**, and after the timeout, the camera takes the photo and saves it in the *Gallery* menu. While the self-timer is running, a beeping sound is heard.

## Camera settings

Press **Menu**, and select *Camera* and *Settings*. Select

- Image quality* to define how much the photo file will be compressed when saving the image. Select *High*, *Normal* or *Basic*. *High* provides the best image quality but takes more memory.
- Camera sounds* to set the shutter sound and the self-timer tone to *On* or *Off*.
- Default title* to define the title that will be used when saving a photo. If you select *Automatic*, the default title will be used, or if you select *My title*, you can key in or edit a new title.

## Gallery (Menu 8)



**Note:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

In Gallery you can manage images, photos and tones saved in your phone.

The gallery uses shared memory, see "[Shared memory](#)" on page [xvi](#).

1. Press **Menu** and select **Gallery**.  
The list of options is shown.
2. Select **View folders** to open the list of folders.

Other available options are:

- **Add folder** to add a new folder. Key in a name for the folder and press **OK**.
- **Delete folder** to select the folder you want to delete. You cannot delete the original folders on the phone.
- **Rename folder** to select the folder you want to rename. You cannot rename the original folders on the phone.
- **Gallery downloads** to download more images and tones. Select **Image downloads** or **Tone downloads**, respectively. The list of available browser bookmarks is shown. Select **More bookmarks** to access the list of bookmarks in the **Services** menu, see "[Bookmarks](#)" on page [70](#).

Select the appropriate bookmark to connect to the desired page. If the connection fails, you may not be able to access the page from the service whose connection settings are currently active. In this case, enter the **Services** menu and activate another set of service settings, see "[Making a connection to a service](#)" on page [68](#). Try again to connect to the page.

For the availability of different services, pricing and tariffs, contact your network operator and/or the service provider. Download content only from the sources you trust.

3. Open the folder you want and the list of files in the folder is shown. **Photos**, **Graphics** and **Tones** are the original folders in the phone.

Press **Options** and some of the following options are available:

- **Open** to open the selected file.
- **Delete** to delete the selected file.
- **Send** to send the selected file via MMS.
- **Move** to move a file to another folder.

- *Rename* to give a new name to the file.
  - *Set as wallpaper* to set the selected image file as wallpaper.
  - *Set as ring tone* to set the selected sound file as the ringing tone.
  - *Details* to see the details of the file, for example the size of the file.
  - *Sort* to sort the files and folders by date, type, name or size.
  - *Delete all* to delete all the files in the selected folder.
  - *Edit image* to insert text, a frame or clip-art into the selected picture.
4. Open the file you want. Press **Options** and some of the following options are available:
- *Play (Pause)* to listen to or to view a sound or image file that is contained in the message.
  - *Zoom* to increase the size of the image that is contained in the message.
  - *Mute audio (Unmute audio)* to mute (unmute) the sound file.
  - *Set contrast* to adjust the contrast level of the image.
  - *Set as wallpaper* to set the selected image file as wallpaper.
  - *Set as ring tone* to set the selected sound file as the ringing tone.
  - *Edit image* to insert text, a frame or clip-art to the selected picture.
  - *Details* to see the details of the file, for example the size of the file.
  - *Delete* to delete the selected file.
  - *Send* to send the selected file via MMS.
  - *Rename* to give a new name to the file.
  - *View in sequence* to view the files in the folder sequentially.

Note that copyright protections may prevent some images, ringing tones and other content from being copied, modified, transferred or forwarded.



## ■ **Organiser** (Menu 9)



**Note:** Your phone must be switched on to use the functions in the *Organiser* menu. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

### Alarm clock

The alarm clock uses the time format set for the clock. The alarm clock works even when the phone is switched off if there is enough power in the battery.

Press **Menu**, and select *Organiser* and *Alarm clock*.

- Select *Alarm time*, key in the alarm time and press **OK**.  
To change the alarm time, select *On*.
- Select *Alarm tone* and select the default alarm tone, personalise the alarm tone by selecting one from the ringing tone list or from the gallery, or set a radio channel as the alarm tone.

If you select the radio as an alarm tone, connect the headset to the phone. The phone uses the most recent channel you listened to as an alarm tone via the loudspeaker. If the headset is removed, the default alarm tone will be used instead of the radio.

### When the alarm time expires

The phone will sound an alert tone, and flash *Alarm!* and the current time on the display.

Press **Stop** to stop the alarm. If you let the phone continue to sound the alarm for a minute or press **Snooze**, the alarm stops for about ten minutes and then resumes.

If you have selected the radio as an alarm tone, instead of **Snooze** the phone asks whether you want to switch off the radio or not.

If the alarm time is reached while the phone is switched off, the phone switches itself on and starts sounding the alarm tone. If you press **Stop**, the phone asks whether you want to activate the phone for calls, *Switch the phone on?* Press **No** to switch off the phone or **Yes** to make and receive calls.



**Note:** Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.


## Calendar

The calendar helps you to keep track of reminders, calls that you need to make, meetings, and birthdays.

The calendar uses shared memory, see "[Shared memory](#)" on page [xvi](#).

Press **Menu**, and select *Organiser* and *Calendar*.



**Tip:** To quickly open the *Calendar* menu, press  in standby mode.

Scroll to the day you want. The current day is indicated by a frame around the day. If there are any notes set for the day, the day is in bold type. To view the day notes, press **Options** and select *Day notes*.

- To view a single note, scroll to the note you want to view, press **Options** and select *View*. The note view allows you to view the details of the selected note. You can scroll through the note.
- For example, there are also options for making a note, or for sending a note via IR, or as a note directly to another compatible phone's calendar or as a text message.


There are also options for deleting, editing, moving and repeating a note and for copying a note to another day.





*Settings* to set the date, time, date or time format, or the first day of the week. In the *Auto-delete* option you can set the phone to delete old notes automatically after a specified time. However, the repeat notes, for example, birthday notes, will not be deleted.


## Making a calendar note

For keying in letters and numbers, see "[Writing text](#)" on page [13](#).



Press **Menu**, and select *Organiser* and *Calendar*. Scroll to the date you want, press **Options** and select *Make a note*. Select one of the following note types:

-  *Meeting* – Key in the note (or press **Options** and search for the name in contacts). Press **Options** and select *Save*. Key in the location for the meeting and press **Options** and select *Save*. Key in the start time for the meeting and press **OK**, and then the end time and press **OK**. To set the alarm for the note, select *With tone* or *Silent* (no alarm tone) and then set the alarm time.

-  **Call** - Key in the phone number, press **Options** and select **Save**. Key in the name, press **Options** and select **Save**. (Instead of keying in the phone number, press **Options** to search for the name and number in contacts.) Then key in the time for the call and press **OK**. To set the alarm for the note, select **With tone** or **Silent** (no alarm tone) and then set the alarm time.
-  **Birthday** - Key in the person's name (or press **Options** and search for it in contacts), press **Options** and select **Save**. Then key in the year of birth, and press **OK**. To set the alarm for the note, select **With tone** or **Silent** (no alarm tone) and then set the alarm time.
-  **Memo** - Key in the note, press **Options** and select **Save**. Key in the end day for the note and press **OK**. To set the alarm for the note, select **With tone** or **Silent** (no alarm tone) and then set the alarm time.
-  **Reminder** - Key in the subject for the reminder, press **Options** and select **Save**. To set the alarm for the note, select **Alarm on** and then set the alarm time.

When you have set the alarm, the indicator  is displayed when you view the notes.

## When the phone sounds an alarm for a note

The phone beeps, and displays the note. With a call note  on the display, you can call the displayed number by pressing . To stop the alarm and view the note, press **View**. To stop the alarm without viewing the note, press **Exit**.

## To-do list

You can save a note for a task that you have to do, select a priority level for the note and mark it as done when you have completed it. You can sort the notes by priority or by date.

The to-do list uses shared memory, see "[Shared memory](#)" on page [xvi](#).

Press **Menu**, and select **Organiser** and **To-do list** and the list of notes is shown. Press **Options**, or scroll to the desired note and press **Options**.

- To add a new note, select **Add**. Key in the subject for the note. When you have keyed in the maximum number of characters for a note, no further characters are accepted. Press **Options** and select **Save**. Select the priority for the note, **High**, **Medium**, or **Low**. The phone automatically sets the deadline without an alarm for the note. To change the deadline, view the note and select the option for the deadline.

*Dictionary*, refer to "Setting predictive text input on or off" on page 13.

- For example, you can also view and delete the selected note and delete all the notes that you have marked as done. You can sort the notes by priority or by deadline, send a note to another phone, save a note as a calendar note, or access the calendar.

While viewing a note, you can also, for example, select an option to edit the selected note, edit the deadline or priority for the note, or mark the note as done.

## ■ Games (Menu 10)



**Note:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

### Launching a game

- Press **Menu**, and select *Games* and *Select game*.
- Scroll to a game or a game set (the name depends on the game).

- Press **Options** and select *Open* or press . If the selection is a single game it will be launched.

Otherwise, a list of games in the selected game set is displayed. To launch a single game, scroll to the desired game and press **Options** and select *Open*, or press .

Note that running some games may consume the phone's battery faster (and you may need to connect the phone to the charger).

### Other options available for a game or game set

Options for games, see "Other options available for an application or application set" on page 56.

### Game downloads

Press **Menu**, and select *Games* and *Game downloads*. The list of available bookmarks is shown. Select *More bookmarks* to access the list of bookmarks in the *Services* menu, see "Bookmarks" on page 70.

Select the appropriate bookmark to connect to the desired page. If the connection fails, you may not be able to access the page from the service whose connection settings are currently active. In this case, enter the *Services* menu and activate another set of service settings, see "Making a connection to a service" on page 68. Try again to connect to the page.

For the availability of different services, pricing and tariffs, contact your network operator and/or the service provider.

To download more games, refer also to "[Downloading an application](#)" on page 56.

Note that when downloading a game, it may be saved in the *Applications* menu instead of the *Games* menu.

## Memory status for games

To view the amount of memory available for game and application installations, press **Menu**, and select *Games* and *Memory*. See also "[Memory status for applications](#)" on page 57.

The games use shared memory, see "[Shared memory](#)" on page xvi.

## Game settings

Press **Menu**, and select *Games* and *Settings* to set sounds, lights and shakes for the game.

## Applications (Menu 11)



**Note:** The phone must be switched on to use this function. Do not switch on the phone when the use of a wireless phone is prohibited or when it may cause interference or danger.

## Launching an application

1. Press **Menu**, and select *Applications* and *Select application*.
2. Scroll to an application or an application set (the name depends on the application).
3. Press **Options** and select *Open* or press . If the selection is a single application it will be launched.

Otherwise, a list of applications in the selected application set is displayed. To launch a single application, scroll to the desired application and press **Options** and select *Open*, or press .

Note that running some applications may consume the phone's battery faster (and you may need to connect the phone to the charger).

## Other options available for an application or application set

- *Delete* to delete the application or application set from the phone.  
Note that if you delete a pre-installed application or an application set from your phone, you may download it again to your phone from the Nokia Software Market, <http://www.softwaremarket.nokia.com/wap>.
- *Web access* to restrict the application from accessing the network. Select *Ask first* to set the application to ask for your permission to connect to the network, or *Allowed / Not allowed* to allow or not allow the connection.
- *Update version* to check if a new version of the application is available for download from the services (network service).
- *Web page* to provide further information or additional data for the application from an Internet page. This feature needs to be supported by the network. It is only shown if an Internet address has been provided with the application.

- *Service settings* for some applications that need specific service settings. Your phone is set to use as default the service settings for the browser.
- *Details* to give additional information about the application.

## Downloading an application

Your phone supports J2ME™ Java applications. Make sure that the application is compatible with your phone before downloading it. You can download new Java applications in different ways:

- Press **Menu**, and select *Applications* and *App. downloads* and the list of available bookmarks is shown. Select *More bookmarks* to access the list of bookmarks in the *Services* menu, see "[Bookmarks](#)" on page 70.

Select the appropriate bookmark to connect to the desired page. If the connection fails, you may not be able to access the page from the service whose connection settings are currently active. In this case, enter the *Services* menu and activate another set of service settings, see "[Making a connection to a service](#)" on page 68. Try again to connect to the page.

For the availability of different services, pricing and tariffs, contact your network operator and/or service provider.

- Press **Menu**, and select **Services** and **Download links**. Select to download an appropriate application or game. See "Downloading" on page 71.
- Use the game download functionality, see "Game downloads" on page 54.
- Use the Nokia Application installer from PC Suite to download the applications in your phone.



Note that Nokia does not warrant for applications from non-Nokia sites. If you choose to download Java applications from them, you should take the same precautions, for security or content, as you would with any site.

Note that when downloading an application, it may be saved in the **Games** menu instead of the **Applications** menu.

## Memory status for applications

To view the amount of memory available for game and application installations, press **Menu**, and select **Applications** and **Memory**.

The applications use shared memory, see "Shared memory" on page xvi.

## Extras (Menu 12)



**Note:** Your phone must be switched on to use the functions in the **Extras** menu. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.






## Calculator

The calculator in your phone adds, subtracts, multiplies, divides, calculates the square and the square root and converts currency values.





This calculator has a limited accuracy and rounding errors may occur, especially in long divisions.

1. Press **Menu**, and select **Extras** and **Calculator**.

- When '0' is displayed on the screen, key in the first number in the calculation, press   for a decimal point.
  - Press **Options** and select *Add, Subtract, Multiply, Divide, Square, Square root* or *Change sign*.
-  **Tip:** Alternatively, press   once to add, twice to subtract, three times to multiply or four times to divide.
- Key in the second number.
  - For a total, press **Options** and select *Equals*. Repeat steps 3 to 5 as many times as is necessary.
  - To start a new calculation, first press and hold **Clear**.

### Performing a currency conversion

- Press **Menu**, and select *Extras* and *Calculator*.
- To save the exchange rate, press **Options** and select *Exchange rate*. Select either of the displayed options. Key in the exchange rate, press   for a decimal point, and press **OK**. The exchange rate remains in the memory until you replace it with another one.

- To perform the currency conversion, key in the amount to be converted, press **Options** and select *In domestic* or *In foreign*.



**Tip:** You can also perform the currency conversion in standby mode. Key in the amount to be converted, press **Options** and select *In domestic* or *In foreign*.

### Countdown timer


Press **Menu**, and select *Extras* and *Countdown timer*. Key in the alarm time in hours and minutes and press **OK**. If you wish, write your own note text which is displayed when the time expires, and press **OK** to start the countdown timer.

- To change the countdown time, select *Change time*, or to stop the timer, select *Stop timer*.

If the alarm time is reached when the phone is in standby mode, the phone sounds a tone and flashes the note text if it is set or else *Countdown time up*. Stop the alarm by pressing any key. If no key is pressed, the alarm automatically stops within 30 seconds. To stop the alarm and to delete the note text, press **OK**.



## Stopwatch

You can measure time, take intermediate times or lap times using the stopwatch. During timing, the other functions of the phone can be used. To set the stopwatch timing in the background, press .

Using the stopwatch consumes the battery and the phone's operating time will be reduced. Be careful not to let it run in the background when performing other operations with your phone.

### Time observation and time splitting

1. Press **Menu**, and select *Extras*, *Stopwatch* and *Split timing*. You can select *Continue* if you have set the timing in the background.
2. Press **Start** to start the time observation. Press **Split** every time you want to take an intermediate time. The intermediate times are listed below the running time on the display. Scroll to view the times.
3. Press **Stop** to stop the time observation.

4. Press **Options** and select *Start* to start the time observation again. The new time is added to the previous time.  
*Save* to save the time. Key in a name for the measured time and press **OK**. If no name is keyed in, the total time is used as the title.  
*Reset* to reset the time without saving it.

### Lap times

Press **Menu**, and select *Extras*, *Stopwatch* and *Lap timing*. Press **Start** to start the time observation and **Lap** to take a lap time. Press **Stop** to stop the lap timing. Press **Options** and you can save or reset the lap times. Refer to "[Time observation and time splitting](#)" above.

### Viewing and deleting times

Press **Menu**, and select *Extras*, and *Stopwatch*.

If the stopwatch is not reset, you can select *Show last* to view the most recent measured time. Select *View times* and a list of names or final times of the time sets is shown, select the time set you want to view.

To delete the saved times, select *Delete times*. Select *Delete all* and press **OK**, or select *One by one*, scroll to the times you want to delete, press **Delete** and press **OK**.

## Wallet

In *Wallet* you can save personal information, for example, credit card numbers and make purchases with your phone where supported by the service provider.

You can access wallet via the *Wallet* menu or via the browser, see "[Options while browsing](#)" on page 69.

When you access wallet for the first time, you need to create your own wallet code. At *Create wallet code*: key in the code and press **OK** to confirm it and at *Verify wallet code*: key in the code again and press **OK**.

If you want to delete all the content of the wallet and the wallet code, key in \*#7370925538# (\*#res0wallet# in letters) in standby mode. You also need the phone's security code.

See also "[General information](#)" on page xii.

## Saving and changing personal card information

To access the wallet, press **Menu**, select *Extras* and *Wallet*. If required, key in your wallet code and press **OK**, see "[Wallet settings](#)" on page 61. Select *Cards* to view the list of cards. The maximum number of cards is five. Scroll to the desired card.

- To save information on a card, press **Options** and select *View*. Select
  - *Card info* to key in, for example, card holder's name, card type, number and expiry information.
  - *User info* to save user name and password for accessing sites.
  - *Shipping info* to save your contact information.
  - *Billing info* to save the contact information in case the invoicing address differs from your own, for example, with company credit cards.
  - *Receipt info* to save phone numbers and e-mail addresses where you want the service provider to send a receipt of your purchase.
- To make a copy of the card, press **Options** and select *Copy card*.
- To delete all the information on the card, press **Options** and select *Clear card*.
- To rename the card, press **Options** and select *Rename card*.

## Personal notes

You can save up to 30 confidential personal notes, for example, passwords, codes or notations.

Press **Menu**, select *Extras, Wallet* and *Personal notes*. Press **Options** and you can view, add, edit a selected note and sort notes either by name or date or delete notes. When viewing a note, the option *Edit* is for editing a note, and *Send via text msg.* copies the note as a text message. *Copy to calendar* copies the note to the calendar as a memo. *Use detail* extracts numbers, e-mail addresses and web addresses from a note.

## Wallet settings

Press **Menu**, select *Extras, Wallet* and *Settings*. Select

- *Code request* to set the wallet code request to on or off. You need to key in the correct wallet code before you can set the code request to on or off. Note that if you set the code request *Off*, the wallet can be accessed without a wallet code.
- *Change code* to change the wallet code.

## Guidelines for paying for your purchases with wallet

1. Access the desired site that supports wallet, to do your shopping, see "[Making a connection to a service](#)" on page 68, and choose the product you want to buy.

Read carefully all information provided before your purchase.



**Note:** The text may not fit within a single screen. Therefore, make sure to scroll through and read all of the text before signing.

2. To pay for the items you wish to purchase, press **Options** and select *Use wallet info*. See "[Options while browsing](#)" on page 69.
3. Select the card you want to pay with. Fill in the data form you receive from the service provider by transferring the credit card details from the wallet. If you want to fill in all the fields automatically, select *Fill in all fields*. The option is shown only when the service supports the Electronic Commerce Modelling Language standard. You can also fill the form by selecting information fields from the card one by one. The phone displays the filled form.

4. Approve the purchase, and the information is sent forward.
5. You may receive a sign-in document from the service that you need to sign to make the purchase binding, see "[Digital signature](#)" on page 74.
6. To close the wallet, select *Close wallet*. See "[Options while browsing](#)" on page 69.



**Note:** If you have tried to access or have accessed confidential information requiring passwords (for example, your bank account), empty the cache of your phone after each use.

To empty the cache, see "[The cache memory](#)" on page 72.

## Synchronisation

Synchronisation allows you to save your calendar and contacts data in a remote Internet server or in a compatible PC. If you have saved data in the remote Internet server, you can synchronise your phone by starting the synchronisation from your phone. Synchronising to the remote server is a network service. You can also synchronise the data in your phone's contacts and calendar to correspond with the data of your compatible PC by starting the synchronisation from your PC. The

contact data in your SIM card will not be synchronised.

Note that answering an incoming call during synchronisation will end the synchronisation and you need to start it again.

## Synchronising from your phone to a remote server

Before synchronising from your compatible phone, you may need to do the following:

- Subscribe to a synchronisation service. For more information on availability and the synchronisation service settings, contact your network operator or service provider.
- Retrieve the synchronisation settings from your network operator or service provider.

You may receive the synchronisation settings as an OTA message, see "[Saving the synchronisation settings received as an OTA message](#)" on page 63 or you may have to key in the settings manually, see "[Keying in the synchronisation settings manually](#)" on page 63.

To start the synchronisation from your phone:

1. Press **Menu**, and select *Services*, *Active service settings* and select the connection settings you need for synchronisation.

The synchronisation settings may differ from the service settings required for browsing. After synchronising, change your *Active service settings* back to the previous ones if you want to use other services later.

2. Mark the data to be synchronised. See *Data to be synchronised* in "Keying in the synchronisation settings manually" on page 63.
3. Press **Menu**, and select *Extras*, *Synchronisation* and *Synchronise*.
4. The marked data of the active set will be synchronised after confirmation.

Note that synchronising for the first time or after an interrupted synchronisation may take time up to 30 minutes, if contacts or calendar are full.

### Saving the synchronisation settings received as an OTA message

When you receive the synchronisation settings as an OTA message, *Synchronisation settings received* is displayed.

Press **Options** and select *Details* to view the received settings first, *Save* to save the synchronisation settings, or *Discard* to discard them.

### Keying in the synchronisation settings manually

Press **Menu**, select *Extras*, *Synchronisation* and *Settings*.

Select *Active Internet sync. settings*.

You need to activate the set where you want to save the synchronisation settings. A set is a collection of settings required to make a connection to a service.

Scroll to the set you wish to activate and press **Activate**.

Select *Edit active Internet sync. settings*. Select each setting one by one and key in all the required settings.

- *Settings' name*. Key in the name for the set and press **OK**.
- *Data to be synchronised*. Mark the data you want to synchronise, *Contacts* and/or *Calendar*, and press **Done**.
- *Database addresses*. Select *Contacts database* and/or *Calendar database* to be edited. Key in the name of the database and press **OK**.
- *User name*. Key in the user name and press **OK**.
- *Password*. Key in the password and press **OK**.
- *Synchronisation server*. Key in the name of the server and press **OK**.

## Synchronising from your PC

To synchronise contacts and calendar from your PC, use either an IR connection or a data cable. You also need the PC Suite software of your phone installed on your PC. Start the synchronisation from your PC using PC suite.

## ■ Connectivity (Menu 13)



### Infrared

You can set up the phone to receive data through its infrared (IR) port. To use an IR connection, the device with which you want to establish a connection must be IrDA compliant. You can send or receive data such as business cards and calendar notes to or from a compatible phone or data device (for example, a computer) via the IR port of your phone.

Do not point the IR (infrared) beam at anyone's eye or allow it to interfere with other IR devices. This device is a Class 1 Laser product.



**Note:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

## Sending and receiving data via IR

- Ensure that the IR ports of the sending and receiving devices are pointing at each other and that there are no obstructions between the devices. The preferable distance between the two devices in an infrared connection is 1 metre at most.
- To activate the IR port of your phone to receive data via IR, press **Menu**, and select *Connectivity* and *Infrared*.
- The user of the sending phone selects the desired IR function to start data transfer.

If data transfer is not started within 2 minutes after the activation of the IR port, the connection is cancelled and has to be started again.

### IR connection indicator




- When **p...** is shown continuously, the IR connection is activated and your phone is ready to send or receive data via its IR port.
- When **p...** blinks, your phone is trying to connect to the other device or a connection has been lost.

## GPRS

### GPRS connection

GPRS is a network service. You can set the phone to automatically register to a GPRS network when you switch the phone on. Press **Menu**, and select *Connectivity*, *GPRS*, *GPRS connection* and *Always online*. When you start an application using GPRS, the connection between phone and network is established, and data transfer is possible. When you end the application, the GPRS connection is ended but the registration to the GPRS network remains.

If you select *When needed*, the GPRS registration and connection are established when an application using GPRS needs it and closed when you end the application.

When *Always online* is selected and the GPRS service is available, the indicator  is shown on the top left of the display. When the GPRS connection is established, the indicator  is shown. If you receive a call or a text message, or make a call during a GPRS connection, the indicator  will be shown on the top right of the display to indicate that the GPRS connection is suspended (on hold).

Note that your phone supports three simultaneous GPRS connections. For example, you can browse pages, receive multimedia messages and have an ongoing PC dial-up connection at the same time.

### GPRS modem settings

You can connect the phone via an infrared or a data cable connection to a compatible PC and use the phone as a modem to enable GPRS connectivity (network service) from the PC.

Press **Menu**, and select *Connectivity*, *GPRS* and *GPRS modem settings*. Select *Active access point* and activate the access point you want to use. Select *Edit active access point* to change the access point settings.

- Select *Alias for access point*. Key in the name you would like for the activated access point and press **OK**.
- Select *GPRS access point*. Key in the Access Point Name (APN) to establish a connection to a GPRS network and press **OK**. Contact your network operator or service provider for the access point name.

You can also set the GPRS dial-up service settings (Access Point Name) on your PC using the Nokia Modem Options software, see ["PC Suite"](#) on page 76. If you have set the settings both on your PC and on your phone, note that the PC's settings will be used.

## ■ Services (Menu 14)



**Note:** Your phone must be switched on to use this function. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

You can access various services on the Internet. For example, these services may include weather reports, news or flight times and financial information.

Check the availability of these services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. The service provider will also give you instructions on how to use their services.

With your phone's multi-mode browser you can view the services that use Wireless Mark-Up Language (WML) or extensible HyperText Markup Language (xHTML) on their pages. Since the phone's display and the memory capacity are much smaller than in a computer, Internet content is displayed differently on the phone's display. Note that you may not be able to view all details on the Internet pages.

Your phone XHTML browser supports unicode.

## Basic steps for accessing and using services

1. Save the service settings that are required to access the service that you want to use. See page 67.
2. Make a connection to the given service. See page 68.
3. Start browsing the pages of the service. See page 68.
4. Once you are finished browsing, end the connection to the service. See page 69.



## Setting up the phone for a service

You may receive the service settings as an OTA message from the network operator or service provider that offers the service that you want to use. You can also key in the settings manually or add and edit the settings with PC Suite.

For more information and for appropriate settings, contact your network operator or service provider that offers the service that you want to use. The settings may be available, for example, on their website.

## Saving the service settings received as an OTA message

When you receive the service settings as an OTA message, *Service settings received* is displayed.

- To save the received settings, press **Options** and select **Save**.  
If no settings are saved in *Active service settings*, the settings are saved under the first free connection set and are also activated.  
If there are settings saved in *Active service settings*, *Activate saved service settings?* will be displayed. To activate the saved settings, press **Yes**, or to save them only, press **No**.

- To view the received settings first, press **Options** and select **View**. To save the settings, press **Save**.
- To discard the received settings, press **Options** and select **Discard**.

## Keying in the service settings manually

1. Press **Menu**, and select *Services*, *Settings* and *Connection settings*.
2. Select *Active service settings*.
3. Scroll to the connection set you would like to activate and press **Activate**.

You need to activate the connection set where you want to save the service settings. A connection set is a collection of settings required to make a connection to a service.

4. Select *Edit active service settings*.

Select each of the settings one by one and key in all the required settings according to the information you have received from your network operator or service provider. Note that all the bearer-related settings are in the *Bearer settings* menu.


## Making a connection to a service

1. Firstly, make sure that the service settings of the service you want to use are activated. To activate the settings:

- Press **Menu**, and select *Services*, *Settings* and *Connection settings*. Select *Active service settings* and scroll to the connection set you want to activate and press **Activate**.

2. Secondly, make a connection to the service. There are three ways to connect:

- Open the start page, for example, the homepage of the service provider:

Press **Menu**, and select *Services* and *Home*, or in standby mode press and hold .

- Select a bookmark of the service:

Press **Menu**, and select *Services*, *Bookmarks*, and select a bookmark.

If the bookmark does not work with the current active service settings, activate another set of service settings and try again.



- Key in the address of the service:

Press **Menu**, and select *Services* and then *Go to address*. Key in the address of the service and press **OK**.





Note that it is not necessary to add the prefix `http://` in front of the address since it will be added automatically.

## Browsing the pages of a service

After you have made a connection to the service, you can start browsing its pages. The function of the phone keys may vary in different services. Follow the text guides on the phone display. For more information, contact your service provider.

Note that if GPRS is selected as the data bearer, the indicator  is shown on the top left of the display during browsing. If you receive a call or a text message, or make a call during a GPRS connection, the indicator  will be shown on the top right of the display to indicate that the GPRS connection is suspended (on hold). After the call, for example, the phone tries to reconnect the GPRS connection.

## Using the phone keys while browsing

- Use any of the scroll keys to browse through the page.
- To select a highlighted item, press .
- To enter letters and numbers, press the keys  -  and to enter special characters, press the key .

## Options while browsing

Press **Options** and the following options may be available. The service provider may also offer other options. Select

- **Home** to return to the homepage.
- **Add bookmark** to save the page as a bookmark.
- **Bookmarks**. See "**Bookmarks**" on page 70.
- **Download links** to show the list of bookmarks for downloading.
- **Shortcuts** to open a new list of options that are, for example, specific to the page.
- **Other options** to show a list of other options, for example, options for wallet and some security options.

- **Reload** to reload and update the current page.
- **Quit**. See "**Disconnect from a service**" on page 69.



**Note:** If you have tried to access or have accessed confidential information requiring passwords (for example, your bank account), empty the cache of your phone after each use.



To empty the cache, see "**The cache memory**" on page 72.

## Direct calling

The multi-mode browser supports functions that you can access while browsing. You can make a voice call, send DTMF tones while a voice call is in progress, and save in contacts a name and a phone number from a page.

## Disconnect from a service

To quit browsing and to end the connection, press **Options** and select **Quit**. When **Quit browsing?** is shown, press **Yes**.

Alternatively, press . If **GSM data** is the selected data bearer, press  twice. The phone ends the connection to the service.

## Appearance settings of the multi-mode browser

1. While browsing, press **Options** and select *Other options* and *Appear. settings*, or in standby mode, press **Menu**, and select *Services*, *Settings* and *Appearance settings*.
2. Select *Text wrapping*. Select *On* and the text continues on the next line if it cannot be shown on one line. If you select *Off*, the text is abbreviated if it is too long to be shown on one line.  
Select *Show images*. Select *No* and any pictures appearing on the page are not shown. This can speed up the browsing of pages that contain a lot of pictures.

## Cookies

A cookie is data that a site saves in your phone's browser cache memory. The data can be, for example, your user information or your browsing preferences. Cookies will be saved until you clear the cache memory, see "[The cache memory](#)" on page 72.

1. While browsing, press **Options** and select *Other options*, *Security* and *Cookies*, or in standby mode, press **Menu**, and select *Services*, *Settings*, *Security settings* and *Cookies*.

2. Select *Allow* or *Reject* to allow or prevent the phone receiving cookies.

## Bookmarks

You can save page addresses as bookmarks in the phone's memory.

1. While browsing, press **Options** and select *Bookmarks*, or in standby mode, press **Menu**, and select *Services* and *Bookmarks*.
2. Scroll to the bookmark you want to use and press **Options**.
3. Select *Go to* to make a connection to the page associated with the bookmark. You can also view the title and the address of the selected bookmark, edit or delete the selected bookmark, or send it directly to another phone as a bookmark, or as an OTA message, or create a new bookmark.

Note that your phone may have some pre-installed bookmarks for sites not affiliated to Nokia. Nokia does not warrant or endorse these sites. If you choose to access them, you should take the same precautions, for security or content, as you would with any Internet site.

## Receiving a bookmark

When you have received a bookmark (sent as a bookmark) *1 bookmark received* is displayed. Press **View**, then press **Options** and select *View* to view the bookmark, *Save* to save the bookmark, or *Discard* to discard it.

## Downloading

1. To download more tones, images, games or applications to your phone, press **Menu**, and select *Services* and *Download links*.
2. Select *Tone downloads*, *Image downloads*, *Game downloads* or *App. downloads* to download tones, images, games or applications, respectively.

Download content only from the sources you trust.

## Service inbox

The phone is able to receive service messages (pushed messages) sent by your service provider. Service messages are notifications of, for example, news headlines, and they may contain a text message or an address of a service.

To access the *Service inbox* in standby mode, when you have received a service message, press **Show**.

- If you press **Exit** the message is moved to the *Service inbox*. To access the *Service inbox* later, press **Menu**, and select *Services*, *Settings* and *Service inbox*.

To access the *Service inbox* while browsing, press **Options** and select *Other options* and *Service inbox*. Scroll to the message you want, press **Options**. Select *Retrieve* to activate the multi-mode browser and download the marked content, or *Details* to display detailed information on the service notification, or select *Delete* to delete it.

## Service inbox settings

Press **Menu**, and select *Services*, *Settings* and *Service inbox settings*.

- Select *Service messages* and *On* (or *Off*) to set the phone to receive (or not to receive) service message.
- Select *Automatic connection*. If you have set the phone to receive service messages and select *Automatic connection on*, the phone will automatically activate the browser when the phone has received a service message.

If you select *Automatic connection off*, the phone will activate the browser only after you have selected *Retrieve* when the phone has received a service message.

## The cache memory

The information or services you have accessed are stored in the cache of your phone. A cache is a buffer memory, which is used to store data temporarily. To empty the cache:

- while browsing, press **Options** and select *Other options* and *Clear the cache*, or
- in standby mode, press **Menu**, and select *Services*, and *Clear the cache*.

## Browser security

Security features may be required for some services, such as banking services or shopping on a site. For such connections you need security certificates and possibly a security module which may be available on your SIM card. For more information, contact your service provider.

## Security module

The security module can contain certificates as well as private and public keys. The security module may improve the security services for applications requiring browser connection, and allows you to use a digital signature. The certificates are saved in the security module by the service provider.

Press **Menu** and select *Services*, *Settings*, *Security settings* and *Security module settings*. Select


- *Security module details* to show the security module title, its status, manufacturer and serial number.
- *Module PIN request* to set the phone to ask for the module PIN when using services provided by security module. Key in the code and select *On*. To disable the module PIN request, select *Off*.
- *Change module PIN* to change the module PIN, if allowed by the security module. Enter the current module PIN code, then enter the new code twice.
- *Change signing PIN*. Select the signing PIN you want to change. Enter the current PIN code, then enter the new code twice.

See also "[General information](#)" on page [xii](#).

## Certificates

There are three kinds of certificates: server certificates, authority certificates and user certificates.

- The phone uses a server certificate to improve security in connection between the phone and the gateway. The phone receives the server certificate from the service provider before the connection is established and its validity is checked using the authority certificates saved in the phone. Server certificates are not saved.

The security indicator  is displayed during a connection, if the data transmission between the phone and the gateway (identified by the *IP address* in the *Edit active service settings – Bearer settings*) is encrypted.

However, the security indicator does not indicate that the data transmission between the gateway and the content server (place where the requested resource is saved) is secure. It is up to the service provider to secure the data transmission between the gateway and the content server.

- Authority certificates are used by some services, such as banking services, for checking the validity of other certificates. Authority certificates can either be saved in the security module by the service provider, or they can be downloaded from the network, if the service supports the use of authority certificates.
- User certificates are issued to users by a Certifying Authority. User certificates are required, for example, to make a digital signature and they associate the user with a specific private key in a security module.



**Important:** Note, however, that even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available.


**Important:** Certificates have a restricted lifetime. If Expired certificate or Certificate not valid yet is shown even if the certificate should be valid, check that the current date and time in your phone are correct.

**Important:** Before changing these settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

## Digital signature

You can make digital signatures with your phone. The signature can be traced back to you via the private key on the security module and the user certificate that was used to perform the signature. Using the digital signature can be the same as signing your name to a paper bill, contract or other document.

To make a digital signature, select a link on a page, for example, the title of the book you want to buy and its price. The text to sign (possibly including amount, date, etc.) will be shown.

Check that the header text is *Read* and that the digital signature icon  is shown.



**Note:** If the digital signature icon does not appear, there is a security breach, and you should not enter any personal data such as your signing PIN.

To sign the text, read all of the text first and then you can select *Sign*.



**Note:** The text may not fit within a single screen. Therefore, make sure to scroll through and read all of the text before signing.

Select the user certificate you want to use. Key in the signing PIN (see "*General information*" on page xii) and press *OK*. The digital signature icon will disappear, and the service may display a confirmation of your purchase.

## Go to (Menu 15)



To access some specific functions quickly, press *Menu* and select *Go to* and select the desired function from the list.

If there are no functions on the list, press *Add*, scroll to the function that you want to add to the list and press *Mark*.

To remove or add more functions on the list, see "*Personal shortcuts*" on page 37.

## SIM services (Menu 16)



In addition to the functions available on the phone, your SIM card may provide additional services that you can access in Menu 16. Menu 16 is shown only if it is supported by your SIM card. The name and contents of the menu depend entirely on the service available.





**Note:** For availability, rates and information on using SIM services, contact your SIM card vendor, e.g. network operator, service provider or other vendor.

You can set the phone to show you the confirmation messages sent between your phone and the network when you are using the SIM services by selecting the option **Yes** within the menu **Confirm SIM service actions** in **Phone settings**.

Note that accessing these services may involve sending a text message (SMS) or making a phone call for which you may be charged.

## 7. PC Connectivity

You can send and receive e-mails, and access the Internet when your phone is connected to a compatible PC via an IR connection or a data cable. You can use your phone with a variety of PC connectivity and data communications applications. With PC Suite you can, for example, send text messages, synchronise contacts, calendar and to-do notes between your phone and the compatible PC.

You may find more information and downloadable files on the Nokia website, <http://www.nokia.com/support/phones/7250i>.

### PC Suite

The PC Suite contains the following applications:

- **Nokia Application Installer** to install Java applications from the compatible PC to the phone.
- **Nokia Image Converter** to make images in supported formats usable for multimedia messages or wallpaper and to transfer them to your phone.
- **Nokia Sound Converter** to optimise MIDI sounds to be compatible with your phone and to transfer them to your phone.
- **Nokia Content Copier** to copy data or back-up information from your phone to a compatible PC or to another compatible Nokia phone.
- **Nokia PC WAP Manager** to edit and send your browser bookmarks or update the connection sets to your phone.
- **Nokia Phone Editor** to send text messages and to edit the contacts and message settings of your phone.
- **Nokia Phone Browser** to view the contents of the Gallery folder of your phone on a compatible PC. You can browse picture and audio files and also modify files in the phone's memory and transfer files between the phone and the PC.
- **Nokia PC Sync** to synchronise contacts, calendar and to-do notes between your phone and a compatible PC.
- **Nokia 7250i data modem drivers** enable you to use your phone as a modem.
- **Nokia Modem Options** contains settings for HSCSD and GPRS connections.

- **Nokia Connection Manager** to select the connection type between the PC and the phone.

Copyright protections may prevent some images, ringing tones and other content from being copied, modified, transferred or forwarded.

## GPRS, HSCSD and CSD

With your phone you can use GPRS (General Packet Radio Service), HSCSD (High Speed Circuit Switched Data) and CSD (Circuit Switched Data, *GSM data*) data services.

For availability and subscription to data services, contact your network operator or service provider.

Note that the use of the HSCSD service consumes the phone's battery faster than normal voice or data calls. You may need to connect the phone to a charger for the duration of data transfer.

See "[GPRS modem settings](#)" on page 65.

## ■ Using data communication applications

For information on using a data communication application, refer to the documentation provided with it.

Note that making or answering phone calls during a computer connection is not recommended as it might disrupt the operation.

For better performance during data calls, place the phone on a stationary surface with the keypad facing downward. Do not move the phone or hold it in your hand during a data call.

## 8. Battery information

### ■ Charging and Discharging

Your phone is powered by a rechargeable battery.

Note that a new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge your battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge.

Use the battery only for its intended purpose.

Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire! Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.

## 9. Genuine Enhancements

A new extensive range of enhancements is available for your phone. Select the enhancements which accommodate your specific communication needs.



Some of the enhancements are described in detail below.

For availability of the enhancements, please check with your local dealer. A few practical rules for enhancements operation:

- Keep the enhancements out of small children's reach.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that all mobile phone equipment in a vehicle is mounted and operating properly.

Use only batteries, chargers and enhancements approved by the phone manufacturer. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

### ■ Battery


Type	Tech	Capacity	Talktime*	Standby*
BLD-3	Li-Ion	780 mAh	2 hrs - 5 hrs	150 hrs - 300 hrs

\* Variation in operation times may occur depending on SIM card, network and usage settings, usage style and environments. Use of FM radio and integrated hands-free will affect talktime and standby.

### ■ Indoor

#### Travel Charger (ACP-12)

Small, lightweight travel charger with multivoltage (100 - 240V) switcher technology. Provides easy and convenient way to charge the phone.

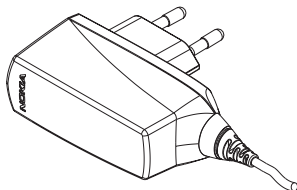


Note: The plug types vary according to different markets.

## ■ Indoor and Vehicle

### Boom Headset (HDB-4)

This small and lightweight headset has a beautiful and distinctive Nokia design. Gives you excellent audio quality and you can answer or end calls by pressing the button on the microphone part of the headset.

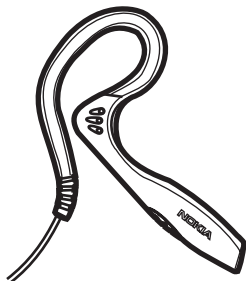

### Stereo Headset (HDS-3)

This stereo headset has a beautiful and distinctive Nokia design. Gives you excellent audio quality and you can answer or end calls by pressing the remote control button. A comfortable hands-free solution that makes listening to the phone's FM radio, a pleasure.

## ■ Vehicle

### Mobile Charger (LCH-9)

The multi-voltage Mobile Charger, LCH-9, ensures your phone is always ready for use whenever you travel. This small charger's functional design fits most car lighters and interiors.

A green light indicates that the Mobile Charger is ready for charging. Check the charging status on the phone display. The input voltage can be 12 or 24 V DC, negative grounding.

Avoid prolonged charging with the Mobile Charger when the car engine is not running; this may cause the battery of your car to drain. Note also that in some cars the cigarette lighter plug is not provided with electricity if the ignition is switched off. Verify that the green LED light is on.

## 10. Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not attempt to open the phone. Non-expert handling may damage it.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to your phone, battery, charger or any accessory. If any of them is not working properly, take it to your nearest qualified service facility. The personnel there will assist you and, if necessary, arrange for service.

## 11. Important Safety Information

### ■ Traffic Safety

Do not use a hand-held telephone while driving a vehicle. Always secure the phone in its holder; do not place the phone on the passenger seat or where it can break loose in a collision or sudden stop.

Remember road safety always comes first!

### ■ Operating environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Use the phone only in its normal operating positions.

Parts of the phone are magnetic. Metallic materials may be attracted to the phone, and persons with a hearing aid should not hold the phone to the ear with the hearing aid. Always secure the phone in its holder, because metallic materials may be attracted by the earpiece. Do not place credit cards or other magnetic storage media near the phone, because information stored on them may be erased.

### ■ Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

#### Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimise the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.



## Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

## Other medical devices

Operation of any radio transmitting equipment, including cellular phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles (e.g. electronic fuel injection systems, electronic anti-skid (anti-lock) braking systems, electronic speed control systems, air-bag systems). Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## Posted facilities

Switch your phone off in any facility where posted notices so require.

## Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone when at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats; chemical transfer or storage facilities; vehicles using liquified petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

## Vehicles

Only qualified personnel should service the phone, or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty which may apply to the unit.

Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your phone while in the air is prohibited. Switch off your phone before boarding an aircraft. The use of wireless telephones in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network and may be illegal.

Failure to observe these instructions may lead to suspension or denial of telephone services to the offender, or legal action or both.



### ■ Emergency calls



**Important:** This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions. Because of this, connections in all conditions can not be guaranteed. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

### To make an emergency call:

1. If the phone is not on, switch it on. Check for adequate signal strength. Some networks may require that a valid SIM card is properly inserted in the phone.
2. Press  as many times as needed (e.g. to exit a call, to exit a menu, etc.) to clear the display and ready the phone for calls.
3. Key in the emergency number for your present location (e.g. 112, 911 or other official emergency number). Emergency numbers vary by location.
4. Press the  key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your wireless phone may be the only means of communication at the scene of an accident – do not cut off the call until given permission to do so.

## ■ Certification information (SAR)

### THIS MODEL PHONE MEETS REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg\*. Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

The highest SAR value for this model phone when tested for use at the ear is 0.60 W/kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the relevant international guidelines for RF exposure.

\* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band. For SAR information in other regions please look under product information at <http://www.nokia.com>.

# Index

## A

- About accessories xi
- Access codes xii
  - Barring password xiii
  - PIN and PIN2 codes, Module PIN, Signing PIN xii
  - PUK and PUK2 codes xii
  - Security code xii
  - Wallet code xiii
- Accessing menu function 16
- Alarm clock 51
- Answering or rejecting incoming call 10
  - Call waiting 11
- Anykey answer 39
- Appearance settings of the multi-mode browser 70
- Applications (Menu 11) 55
- Archive folder 21
- Automatic redial 39

## B

- Basic steps for accessing and using services 66
- Battery 79
- Battery information 78
  - type 79
- Bookmarks 70
- Boom Headset (HDB-4) 80
- Browsing the pages of a service 68
- Browser security 72
  - Certificates 72
  - Digital signature 74
  - Security module 72

## C

- Cache memory 72
- Calculator 57
  - currency conversion 58
- Calendar 52
  - Making a calendar note 52
- Call counters 30
- Call divert 39
- Call functions 10
- Call register (Menu 2) 29
- Call settings 39
- Call timers 30
- Call waiting 39

- Caller groups 36
- Camera xiv
- Camera (Menu 7) 47
- Camera settings 48
- Care and Maintenance 81
- Certification information (SAR) 85
- Changing an image 34
- Changing covers 8
- Charging and Discharging 78
- Charging battery 6
- Chat 25
- Connectivity (Menu 13) 64
- Contacts (Menu 3) 31
- Cookies 70
- Copying contacts 34
- Countdown timer 58

## D

- Deleting messages 25
- Deleting names,numbers and images 34
- Disconnect from a service 69
- Display settings 42
  - Colour schemes 42
  - Display brightness 43
  - Menu view 42
  - Operator logo 42
  - Screen saver 42
  - Wallpaper 42
- Distribution lists 20
- Downloading 71
- Downloading an applicaiton 56

## E

- Editing a name,number or text item 34
- Electronic devices 82
- Emergency calls 84
- Enhancement settings 44
- Essential indicators 3
- Extras (Menu 12) 57

## F

- functions xiv

## G

- Gallery (Menu 8) 48
- Game settings 55
- Games (Menu 10) 54
- General Packet Radio Service (GPRS) xv
- Genuine Enhancements 79
- Go to (Menu 15) 74
- GPRS 65
  - GPRS modem settings 65
- GPRS, HSCSD and CSD 77

## H

- Headset 4

## I

- Inbox and sent items folders 20
- Info messages 26
- Info numbers 36
- Infrared 64
- Inserting a picture into a text message 21
- Inserting a text template into a message or into an e-mail 21
- Installing SIM card and battery 5

## J

- Java™ applications xv

## K

- Keypad lock (Keyguard) 7
- Keys and connectors 1

## L

- Launching a game 54
  - Game downloads 54
  - Other options available for a game or game set 54
- Launching an application 55
- Line for outgoing calls 40

## M

- Making a call 10
  - Speed dialling 10
- Making a connection to a service 68
  - memory full 25
- Memory status for applications 57
- Memory status for games 55
- Menu functions 17

- menu functions iv
- Message settings 27
- Messages (Menu 1) 17
- Mobile Charger (LCH-9) 80
- Multimedia messages 22
- Multimedia messaging service (MMS) xiv
- My folders 21
- My numbers 36

## N

- Network Services xi

## O

- Operating environment 82
- Options during a call 11
- Options for sending message 18
- Organiser (Menu 9) 51
- Other options available for an applicaiton or application set 56
- Over the Air (OTA) settings service xv

## P

- PC Connectivity 76
- PC Suite 76
- Personal shortcuts 37
- Phone settings 40
  - Automatic keyguard 40
  - Cell info display 41
  - Confirm SIM service actions 41
  - Help text activation 41
  - Language 40
  - Memory status 40
  - Network selection 41
  - Start-up tone 41
  - Welcome note 41
- Polyphonic sound (MIDI) xiv
- Potentially explosive atmospheres 83
- predictive text input on or off 13
- Profiles (Menu 4) 37
- Putting on the wrist strap 4

## R

- Radio (Menu 6) 45
- Reading and replying to a multimedia message 24
- Reading and replying to a SMS message or an e-mail 19
- Recent calls lists 30
- Restore factory settings 45

## S

- Safety x
- Safety information 82
- SAR value 85
- Saving names and phone numbers (Add name) 32
- Screen saver 3
- Searching for a name in contacts 33
- Security settings 44
- Selecting settings for contacts 31
- Send my caller identity 40
- Sending and receiving a business card 35
- Service commands 29
- Service inbox 71
- Service numbers 36
- Services (Menu 14) 66
- Setting up the phone for a service 67
- Settings (Menu 5) 37
- Shared memory xvi
- SIM services (Menu 16) 74
- Speed dialling 39
- Speed dials 35
- Standby mode 2
- Stereo Headset (HDS-3) 80
- Stopwatch 59
  - Lap times 59
  - Time observation 59
  - Time splitting 59
  - Viewing and deleting times 59
- Summary after call 40
- Switching phone on and off 7
- Synchronisation 62
  - Keying in the synchronisation settings manually 63
  - Saving the synchronisation settings received as an OTA message 63
  - Synchronising from your PC 64
  - Synchronising from your phone to a remote server 62

## T

- take a photo 47
- Templates 21
- Text messages (SMS) 17
- Time and date settings 38
- Tips for writing text 14
- To-do list 53
- Tone settings 43
- Traffic safety 82
- Tuning a radio channel 46

## U

- Using data communication applications 77
- Using predictive text input 13
  - Writing compound words 14
- Using the menu 16
- Using the radio 46
- Using traditional text input 14

## V

- Vehicles 83
- Voice messages 26

## W

- Wallet 60
  - Guidelines for paying for your purchases with wallet 61
  - Personal notes 61
  - Wallet settings 61
- Wallpaper 3
- Writing and sending a multimedia message 22
- Writing and sending e-mail 18
- Writing text 13